PM 5193
SYNTHESIZER/FUNCTION GENERATOR 50 MHz

Service Manual

GTE-ERS
TECHNICAL LIBRARY
13453 45

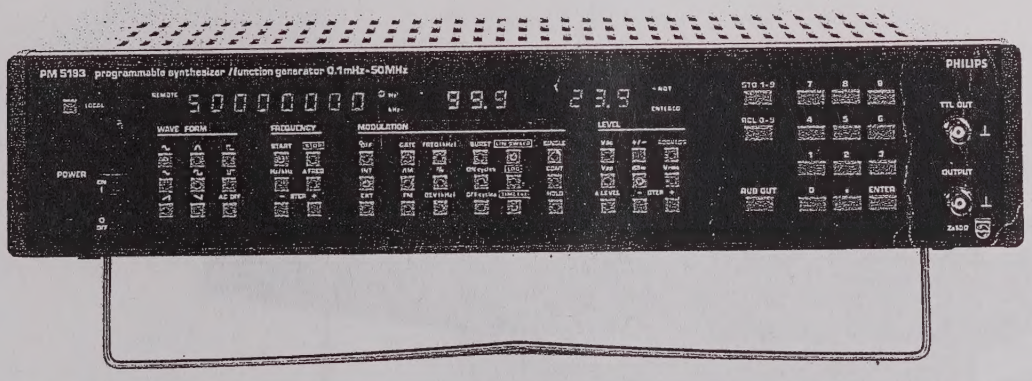

930101

9499 455 00311

PHILIPS

Please note

In correspondence concerning this instrument, please quote the type number and serial number as given on the type plate.

Bitte beachten

Bei Schriftwechsel über dieses Gerät wird gebeten, die Typennummer und die Gerätenummer anzugeben. Diese befinden sich auf dem Typenschild an der Rückseite des Gerätes.

Noter s.v.p.

Dans votre correspondance et dans vos réclamations se rapportant à cet appareil, veuillez toujours indiquer le numéro de type et le numéro de série qui sont marqués sur la plaquette de caractéristiques.

Important

As the instrument is an electrical apparatus, it may be operated only by trained personnel. Maintenance and repairs may also be carried out only by qualified personnel.

Wichtig

Da das Gerät ein elektrisches Betriebsmittel ist, darf die Bedienung nur durch eingewiesenes Personal erfolgen. Wartung und Reparatur dürfen nur von geschultem, fach– und sachkundigem Personal durchgeführt werden.

Important

Comme l'instrument est un équipement électrique, le service doit être assuré par du personnel qualifié. De même, l'entretien et les réparations sont à confier aux personnes suffisamment qualifiées.

Data subject to change without notice

© **Philips GmbH – Hamburg – Germany – 1993** RA

All rights are strictly reserved.

Reproduction or divulgation in any form whasoever is not permitted without written authority from the copyright owner.

Issued by Philips GmbH – Unternehmensbereich Elektronik für Wissenschaft und Industrie– Werk für Meßtechnik

Printed in Germany

CONTENTS

1.	SAFETY INSTRUCTIONS	1-1
1.1.	Safety precautions	1-1
1.2.	Caution and warning statements	1-1
1.3.	Symbols	1-1
1.4.	Impaired safety-protection	1-1
1.5.	General clauses	1-1
1.6.	Connections	1-2
2.	MAINS VOLTAGE SETTING AND FUSES	2-1
3.	OPERATING PRINCIPLE	3-1
3.1.	General operating principle	3-1
3.2.	Description of the blockdiagram	3-1
4.	PERFORMANCE CHECK	4-1
4.1.	General information	4-1
4.2.	Power-on selftest	4-1
4.3.	General functional test	4-2
5.	DIAGNOSTIC-PROGRAM	5-1
6.	CIRCUIT DESCRIPTIONS	6-1
6.1.	Digital frequency synthesizer/U2	6-1
6.2.	PLL/U1	6-8
6.3.	Modulator/U1	6-12
6.4.	Pulse generator/U1	6-16
6.5.	Amplifier/U1	6-18
6.6.	CPU/U2	6-20
6.7.	Keyboard display unit/U3	6-23
6.8.	Video amplifier/U4	6-26
6.9.	10 MHz synchroniser/U5	6-26
7.	ACCESS TO PARTS	7-1
7.1.	Top and bottom covers (dismantling the instrument)	7-1
7.2.	Fuse, mains transformer	7-1
7.3.	Unit 1 and unit 2	7-1
7.4.	Front-panel edging	7-1
7.5.	Text plate	7-2
7.6.	Unit 3 (keyboard and display)	7-3
7.7.	Carrying handle	7-3
7.8.	Handle assembly for rack mounting	7-4
7.9.	View into the open instrument	7-4
8.	CHECKING AND ADJUSTING	8-1
8.1.	General Information	8-1
8.2.	Recommended test equipment	8-1
8.3.	Table of checks and adjustments	8-2
9.	SAFETY INSPECTION AND TESTS AFTER REPAIR AND MAINTENANCE IN THE PRIMARY CIRCUIT	9-1
9.1.	General directives	9-1
9.2.	Safety components	9-1
9.3.	Checking the protective earth connection	9-1
9.4.	Checking the insulation resistance	9-1
9.5.	Test after repair and maintenance	9-1

10.	SPARE PARTS	10-1
10.1.	General	10-1
10.2.	Static sensitive components	10-1
10.3.	Handling MOS devices	10-1
10.4.	Soldering techniques	10-1
10.5.	Parts list PM 5193	10-2

11. FIGURES 28 – 51

Fig. 28 Unit 1, adjusting elements
Fig. 29 Unit 2, adjusting elements
Fig. 30 Blockdiagram
Fig. 31 Front view
Fig. 32 Rear view
Fig. 33 Overall circuit diagram
Fig. 34 Unit 3, keyboard/display, component lay-out
Fig. 35 Unit 3, keyboard/display, circuit diagram
Fig. 36 Unit 4, video amplifier; component lay-out, circuit diagram
Fig. 37 Unit 1, component lay-out (overview)
Fig. 38 Unit 1, power supply, component lay-out
Fig. 39 Unit 1, power supply, circuit diagram
Fig. 40 Unit 1, pulse generator, component lay-out
Fig. 41 Unit 1, pulse generator, circuit diagram
Fig. 42 Unit 1, PLL/VCO, component lay-out
Fig. 43 Unit 1, PLL/VCO, circuit diagram
Fig. 44 Unit 1, output amplifier, circuit diagram
Fig. 45 Unit 1, output amplifier, component lay-out
Fig. 46 Unit 1, modulator, component lay-out
Fig. 47 Unit 1, modulator, circuit diagram
Fig. 48 Unit 2, CPU/DFS, component lay-out
Fig. 49 Unit 2, CPU (Central Processing Unit), circuit diagram
Fig. 50 Unit 2, DFS (Digital Frequency Synthesizer), circuit diagram
Fig. 51 Unit 5, 10 MHz synchroniser; component lay-out, circuit diagram

12. ADRESSES FOR SALES AND SERVICE

1. SAFETY INSTRUCTIONS

> WARNING:
> These servicing instructions are for use by qualified personnel only. To reduce the risk of electric shock, do not perform any servicing other then that specified in the Operating Instructions unless you are fully qualified to do so.

Read these pages carefully before installation and use of the instrument.

The following clauses contain information, cautions and warnings which must be followed to ensure safe operation and to retain the instrument in a safe condition.
Adjustment, maintenance and repair to the instrument shall be carried out only by qualified personnel.

1.1. SAFETY PRECAUTIONS

For the correct and safe use of this instrument it is essential that both operating and servicing personnel follow generally-accepted safety procedures in addition to the safety precautions specified in this manual. Specific warning and caution statements, where they apply, will be found throughout the manual. Where necessary, the warning and caution statements and/or symbols are marked on the apparatus.

1.2. CAUTION AND WARNING STATEMENTS

CAUTION:
Is used to indicate correct operating or maintenance procedures in order to prevent damage to or destruction of the equipment or other property.

> WARNING:
> Calls attention to a potential danger that requires correct procedures or practices in order to prevent personal injury.

1.3. SYMBOLS

Protective earth (grounding) terminal — (black symbol on yellow background or impressed, e. g. at the mains connector at the rear)

1.4. IMPAIRED SAFETY-PROTECTION

Whenever it is likely that safety-protection has been impaired, the instrument must be made inoperative and be secured against any unintended operation. The matter should then be referred to qualified technicians.
Safety protection is likely to be impaired if, for example, the instrument fails to perform the intended measurements or shows visible damage.

1.5. GENERAL CLAUSES

> WARNING:
> The opening of covers or removal of parts, except those to which access can be gaines by hand, is likely to expose live parts and accessible terminals which can be dangerous to live.

The instrument shall be disconnected from all voltage sources before it is opened.

Bear in mind that capacitors inside the instrument can hold their charge even if the instrument has been separated from all voltage sources.

> WARNING:
> Any interruption of the protective earth conductor inside or outside the instrument, or disconnection of the protective earth terminal, is likely to make the instrument dangerous.
> Intentional interruption is prohibited.

Components which are important for the safety of the instrument may only be renewed by components obtained through your local Philips organisation (see also chapter 9.).

After repair and maintenance in the primary circuit, safety inspection and tests, as mentioned in chapter 9 have to be performed.

1.6. CONNECTIONS

The circuit earth potential is applied to the external contacts of the BNC sockets and is connected to the cabinet by means of parallel-connected capacitors. By this means hum loops are avoided and a clear HF earthing is obtained.

If the circuit earth potential in a measurement set-up is different from the protective earth potential, it must be noticed,

- that the BNC sockets can be touched and that it must not be live, see the safety regulations on the subject (VDE 0411),
- that all sockets marked with the sign ⊥ are internally interconnected.

2. MAINS VOLTAGE SETTING AND FUSES

The safety instructions in previous chapters must be followed.

On delivery from the factory the instrument is set to a mains voltage which is indicated on the rear panel as well as the corresponding fuse:

PM 5193, PM 5193 S, PM 5193 V	220 V	630 mAT
PM 5193 M	110 V	1.25 AT up to ser. no. LO-05 951 or
	120 V	1.25 AT from ser. no. LO-05 951 onwards
PM 5193 SM	120 V	1.25 AT

If the instrument is to be used on a different supply voltage the wiring must be altered; the main fuse should be replaced dependent on the mains voltage. The wiring for the fan must not be altered.

Proceed as follows:

- Loosen 2 cross-slotted screws at the rear side of the instrument (see also chapter 7.1.).
- Remove the top cover.
- Remove the isolating cover of the topside of the mains transformer, remove cable binder before.
- Alter the wiring of the mains transformer according to the connection diagram.
- Refit the isolating cover.
- If necessary, insert the advised fuse into the fuse holder instead of the fuse built-in. In this case change current label of the fuse holder.
- Change the mains voltage label at the rear of the instrument in accordance with the mains voltage selected.
  The labels for the mains voltage, current and the fuse are enclosed in a plastic bag.
- Close the instrument.

Connection diagram

Up to series number LO-05 951:

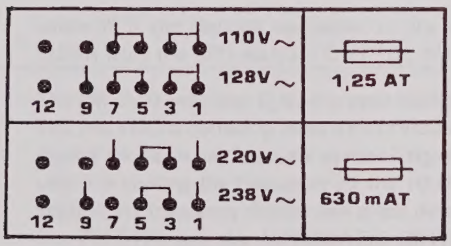

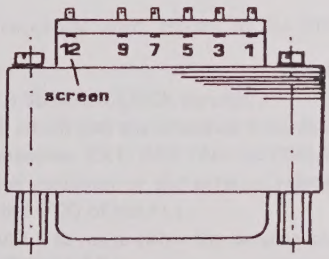

From series number LO-05 951 onwards:

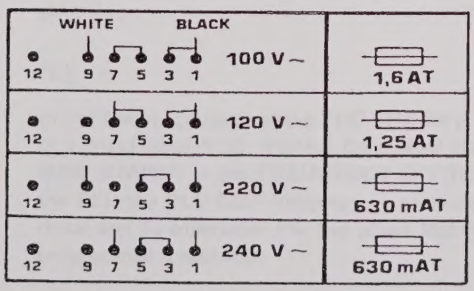

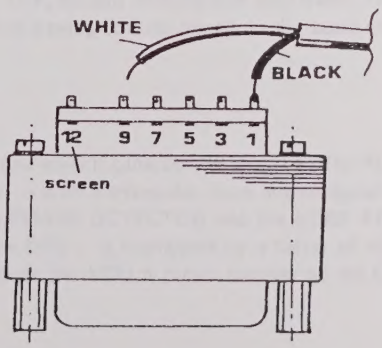

Digitized by the Internet Archive
in 2025

https://archive.org/details/manualsplus_05569

3. OPERATING PRINCIPLE, Fig. 30 (Block diagram)

3.1. GENERAL OPERATING PRINCIPLE

The basic functional units, performing the generation, processing and conditioning of the generator output signals, are named

– DFS, Digital Frequency Synthesizer,	on unit 2
– PLL, Phase Locked Loop,	on unit 1
– MODULATOR	on unit 1
– PULSE GENERATOR	on unit 1
– AMPLIFIER	on unit 1
– VIDEO AMPLIFIER	on unit 4 (PM 5193 V)
– 10 MHz SYNCHRONISER	on unit 5 (PM 5193 S)

These functional units are under control of the CPU (Central Processing Unit), consisting of a microprocessor and its peripheral components on unit 2. Primary control data for the CPU is derived from the front-end KEYBOARD & DISPLAY on unit 3 or from an external controller via the IEEE/IEC bus interface. The output-signal parameters are displayed numerically on a 7-segment-LED display. Key LEDs are provided for operating mode indication. Subsequently a brief description of the over-all block diagram (fig. 30) of the generator is given.

3.2. DESCRIPTION OF THE BLOCK DIAGRAM

DFS

In the frequency range up to 2147 kHz the primary signals – sine, triangular, positive and negative sawtooth waves – are generated by direct digital signal synthesis.

Binary samples of the wave are created in the SIGNAL SYNTHESIZER section and converted to analogue voltages by a fast DAC at the clock rate fc. The output frequency fo is directly related to fc, according to

$$fo = 0.1 \cdot N \cdot 2^{-33} \cdot fc = N \cdot 10^{-4}\ Hz$$

where N is the decimal equivalent of the binary frequency word, routed to the SIGNAL SYNTHESIZER from the CPU via U2-CONTROL BUS.

The PM 5193 generates f_c by a crystal oscillator, the 8.59 MHz CLOCK on unit 2.
The PM 5193 S derives f_c from a PLL/VCO on unit 5 which gets the reference frequency from a 10 MHz crystal oscillator or from an external signal via connector EXT REF. An AUTOMATIC SWITCH on unit 5 is routing the frequency of the 10 MHz crystal oscillator or the external reference frequency, if applied, via frequency divider and phase detector to the VCO of the PLL.
The PM 5193 uses the AUTOMATIC SWITCH on unit 2 to route either the external clock frequency or the internal 8.59 MHz CLOCK to the SIGNAL SYNTHESIZER.

The DAC output signal is smoothed by the 3 MHz LPF, an anti-aliasing low-pass filter. The BURST CONTROL LOGIC section generates the carrier on/off keying control signals in the burst mode of the generator.

PLL

In the frequency range above 2147 kHz the primary sine wave is generated in the PLL. The PLL consists of a broad-band VCO, Voltage-Controlled Oscillator, – with a triangular-wave output signal fed to the SINE SHAPER – the FREQUENCY DIVIDER, the PHASE DETECTOR and the LOOP FILTER. By the PLL the PLL REF frequency – generated in the DFS – is multiplied by a factor of 4096 in FM mode and 32 otherwise. For fast phase-locking response the VCO is preset roughly by the DAC to the programmed frequency.

MODULATOR

By the VOLTAGE CONDITIONER the DFS sawtooth wave or the sine wave - if haversine is selected – are halved in amplitude and shifted in dc, resulting in unipolar signals. The sine wave – if sine waveform is programmed – and the triangular wave are routed without change through the VOLTAGE CONDITIONER. In the BURST-mode the output signal of the VOLTAGE CONDITIONER is keyed on/off by the DIODE SWITCH 1 and routed to the AMPLIFIER. In NON-BURST-mode the signal from DIODE SWITCH 1 is fed either directly or through the AMPLITUDE MODULATOR to the AMPLIFIER. In the frequency range above 2147 kHz the RF SINE wave is routed from the PLL to DIODE SWITCH 2 and to the AMPLITUDE MODULATOR or directly to the AMPLIFIER. Both diode switches are served by the SWITCH CONTROL, which evaluates the accurate control signal from the outputs SQUARE BURST and BURST for the DFS, the 2 MHz SWITCH control signal from the CPU and the GATE signal from the SWITCHING CIRCUITRY in the gate mode of the generator.

In internal GATE, AM or FM mode the modulating signal is derived from the MODULATION OSCILLATOR output. The output sine wave is scaled in amplitude by the AMPLITUDE CONTROLLER to give the accurate AM or FM modulation depth. The modulating sine wave is fed to the AMPLITUDE MODULATOR in AM mode or to the PLL in FM mode through the SWITCHING CIRCUITRY. Alternatively – in the external modulation modes – the modulating signal is supplied from the generator MODULATION INPUT.

PULSE GENERATOR

The PULSE GENERATOR basically represents an electronical switching circuitry, creating a TTL signal and either a square wave or a positive respectively negative rectangular pulse train, each signal with a 50 % duty cycle. The instants of the positive and negative edges of these signals are determined by the zero-crossings of the reference input signal. In the frequency range up to 2147 kHz the DFS signal, e. g. a sine wave, fed to the ZERO CROSSING DETECTOR serves as reference. Above 2147 kHz the TTL output signal of the PLL, named RF TTL, directly determines the switching points.

By the CONTROL CIRCUITRY either the TTL output of the ZERO CROSSING DETECTOR or the RF TTL combined with one of the burst switching signals in burst mode – the POSITIVE PULSE BURST, the BURST or the SQUARE BURST – are routed to the switching output of the signal conditioners. The TTL OUTPUT STAGE and the SQUARE WAVE CONDITIONER are creating the TTL output voltage of the generator and the primary square wave with accurate amplitude and waveform. The PULSE TRAIN CONDITIONER generates a square wave with extra steep positive and negative edges and a programmable amplitude, controlled by the dc output of the DAC. At the generator output this square wave is shifted to unipolar positive or negative pulses by the DC GENERATOR in the AMPLIFIER.

AMPLIFIER

The vernier setting of the generator output amplitude is performed by the AMPLITUDE CONTROLLER. After amplification by the POWER AMPLIFIER the signal either directly or after 20 dB respectively 40 dB attenuation by the STEP ATTENUATOR is routed to the OUTPUT socket. The DC GENERATOR adds the programmed dc voltage.

CPU

An 8-bit microprocessor (8031) and a 10 MHz clock are the constituents of the PROCESSOR & CLOCK. The PROGRAM MEMORY is a 16 Kbyte EPROM. In an external data memory, the 256 byte RAM, the 10 storage register contents of the generator are stored. By the CONTROL BUS DRIVER the required load capability of the U1- and U2 CONTROL BUS serial data linie (SDA), and the clock line (SCL), is achieved. The device selecting strobe signals STR1 ... 15 – used for CPU components and latching-data – shift registers in the various functional units controlled by the CPU – are derived from 4 ports of the PROCESSOR by the STROBE DECODER.

By the DIRECT PORT LATCH two output port signals – 2 MHz SWITCH and PLL CNTL – are derived from three address/data bus lines of the CPU. The SWEEP VOLTAGE DAC is generating a voltage ramp during a frequency sweep. The PEN LIFT SWITCH serves for lifting the writing pen of an x-y plotter during frequency sweep fly-backs.

The IEEE/IEC bus interface of the generator consists of the IEC BUS CONTROLLER, the DEVICE ADDRESS LATCH & SHIFT REGISTER and the 3-STATE GATE & LATCH.

VIDEO AMPLIFIER (PM 5193 V)

Only the PM 5193 V contains this VIDEO AMPLIFIER on an additional unit 4.

An external video signal (CVBS) can be fed via BNC-connector VIDEO IN to the INPUT AMPLIFIER where it is amplified to the required level and clamped by the DC-CLAMPING CIRCUIT to +1 V.

The signal is routed via switch to the AMPLITUDE MODULATOR circuit of the MODULATOR, unit 1, and modulated on the carrier.

Switch-over to the external video signal is done via relais on unit 4, which are activated by the SWITCH CONTROL, caused by the CPU and the SWITCHING CIRCUITRY on unit 1.

10 MHz SYNCHRONISER (PM 5193 S)

The 10 MHz SYNCHRONISER produces the clock frequency of 8.58 ... MHz for the Digital Frequency Synthesizer (DFS) in an RC oscillator circuit with a varicap tuning diode. The oscillator is the VCO in a phase–locked loop PPL being coupled either to the internal 10 MHz X–tal OSCILLATOR or to an external reference signal via the 10 MHz Band–Pass Filter BPF. Switching over to the external reference is automatically done, when 10 MHz or one of its sub–harmonics, for example, 1 MHz, is applied to the EXT REF INPUT socket.

4. PERFORMANCE CHECK

4.1. GENERAL INFORMATION

WARNING:
Before switching on, ensure that the instrument has been installed in accordance with the instructions outlined in Section 2 of the Operating Manual: Installation instructions.

This procedure is intended to:

- check the instrument
- be used for incoming inspection to determine the acceptability of newly-purchased instruments and/or recently-recalibrated instruments.

ATTENTION:
The procedure does not check every detail of the instrument's calibration; rather, it is concerned primarily with those parts of the instrument which are essential to measurement accuracy and correct operation. Removing the instrument covers is not necessary to perform this procedure. All checks are made from the front panel.

If this test is started within a short period after switching on, bear in mind that steps may be out of specification, due to insufficient warming-up time. To avoid this situation, allow the specified warming-up time of 30 min.

4.2. POWER-ON SELFTEST

Immediately after power on a selftest routine is started with which PROM and RAM are tested. If an error is detected one of the following error messages appears:

ERR 1	PROM	checksum error
ERR 2	RAM	(processor) checksum error
ERR 3	RAM	checksum error; operation possible but memory contents is destroyed.

In case of no error in PROMs/RAMs all LEDs and all segments of the displays are then switched on for appr. 3s after the software version has been indicated in the 'LEVEL'-sector of the display. The instrument must then be in the on-state which is indicated by a zero in each of the display sections and the LEDs in the keys SINE, START, OFF and Vpp switched on.

4.3. GENERAL FUNCTIONAL TEST

The function of the synthesizer can now be checked with the help of the following examples:

amplitude = 5 Vpp; offset = 0 Vdc

terminate the output with 50 Ω and connect an oscilloscope.

Wave form	start frequency	stop frequency	modulation –mode	modulation –frequency	modulation –depth, –deviation sweep time, no.of cycles	defective unit in case of faulty function
1) triangle	50 kHz	–	–	–	–	DFS
2) sine	500 kHz	–	AM	1 kHz	50 % depth	modulator
3) pos. pulse	5 MHz	–	FM	1 kHz	100 kHz dev.	modulator, PLL pulse generator
4) pos. sawtooth	1 MHz	10 MHz	Sweep Lin.	–	5 sec. sweep time	CPU, DFS
5) triangle	10 kHz	–	Gate*	1 kHz	–	modulator
6) square	800 Hz	–	Burst	–	2 on-, 3 off cycles	modulator, DFS pulse generator

* it is advisable to trigger the oscilloscope with the 'MODULATION OUTPUT'-signal

If one of the functions doesn't work, the diagnostic program can be a help to distinguish whether the defect is in the unit in question or in the CPU with its C-bus drivers/decoders. By selecting TEST 4 (strobe test) it is possible to check the data communication lines and the decoders of the subunits.

In case that all functions are o. k. this test must be continued by checking the output signals:

TTL OUT: This output shows always a square wave voltage with TTL-level and signal-frequency.

INT CLOCK: (10 MHz) This output contains the clock-signal of the internal digital frequency synthesizer with TTL-level and a frequency of 8.58993 MHz (PM 5193 S: 10 MHz).

MODULATION: This output shows a sinewave signal with an amplitude of max. 1 Vrms depending on modulation depth/deviation and modulation frequency.

PEN LIFT: In the continuous sweep mode this output shows a sequence of pulses. The frequency corresponds to the sweep repetition rate, amplitude is 20 Vpp (not for PM 5193 V).

SWEEP: During continuous sweep operation this output shows a sawtooth voltage (triangle in mode 3) with an amplitude of 10 Vpp.

5. DIAGNOSTIC-PROGRAM

This test program contains 5 submodules:

TEST 1: Display and LED test
TEST 2: Keyboard test
TEST 3: Storage register test
TEST 4: Strobe test (test of the internal interfaces)
TEST 5: Test of the IEEE/IEC-BUS interface

To activate this test program, press the key MODULATION OFF while power is switched on and keep it pressed for about 3 seconds.

The return to the main operating mode is only possible by switching power OFF and ON again.

When the test program is activated, the display shows "TEST x" where 'x' is a number from 1 to 5. This number changes continuously and slowly, and by pressing the key MODULATION OFF at the right moment, the respective test-submodule will be started.

To leave the test submodules, press the key MODULATION OFF for about 2 seconds.

TEST 1 : Display and LED test

Step 1: 7-segment-display

All display segments and LEDs are switched on for about 2 seconds.
After this the program starts to switch on one segment after the other for four display positions simultaneously. Finally, the decimal points of these four positions remain lit and the program starts to do the same with the next four display positions.
After the last four digits were tested, the program switches on all segments and LEDs and remain in this state until the key MODULATION OFF was pressed once again.

Step 2: LEDs

All LEDs will be switched on sequentially, one after the other, for approx. 0.5 seconds beginning with the uppermost left one (inside the key sine wave). When the last LED was switched on the indication "End" appears at the display until the key MODULATION OFF was pressed. Then the program returns to the test-menu.

TEST 2 : Keyboard test

The display shows the indication: 1 – Ø1 – – – –

Now you must press the first key of the first row: 1 – Ø1 – – – –
(row 1) – (column 1)

When the right key was pressed, the display shows

1 – Ø1 1 1 1 1

for about 1 second and changes then to

1 – Ø2 – – – –

as a request to press the second key in the first row. In case of a failure, the display would show

Err 1 – Ø1 x – xx

where x – xx indicates the wrong code (row and column). This error indication will only be reset by pressing the requested key – in case of a hardware failure at the keyboard unit it would not be possible to get the right code and thus to reset the error message.

When the last key was pressed, the keyboard test is finished and the display indicates "End". To leave this diagnostic submodule and to get back to the test menue, the key MODULATION OFF must be pressed.

TEST 3: Storage register test

Attention:
This memory test damages the register contents. When the instrument is switched on after the storage register test was executed, the display indicates "Err 3" which means that there are now no parameters in the storage register – the complete contents (parameters) are destroyed.

The display indicates

MEMO 1 –

and the program starts to write a test pattern into each location of memory chip 1, reads it again, and checks this value for correctness. When no failure was detected, the same will be done with a second pattern. In case that there is no failure, the display shows

MEMO 1 – 1

and in case of a failure

MEMO 1 – Ø

Now the program waits until the key MODULATION OFF is pressed and starts then to check the memory chip 2 in the same way as described above. When this is terminated successfully, the display indicates

MEMO 2 – 1

or in case of a failure

MEMO 2 – Ø

With MODULATION OFF the program returns to the test menu.

TEST 4 : Strobe test

The display indicates

STRO x

where x is a number from 6 to 15. This number changes continuously and slowly. By pressing the key "MODULATION OFF" at the right moment the required strobe line will be selected. The display shows then e.g.:

STRO Ø8 – 1

which means that the output lines of the shift registers controlled by strobe line 8 show a specific bit-pattern. If MODULATION OFF was pressed once for a short moment all output lines of the shift registers change their state. Now the display shows:

STRO Ø8 – Ø

Each time the MODULATION OFF-key is pressed for a short moment, the states of these output lines will be inverted. If MODULATION OFF is pressed for longer than about 1 second, this subprogram will be left and the display shows again:

STRO x

If the key MODULATION OFF is pressed again for longer than about 1 second, the program will return to the test menu.

This strobe test serves fault finding in the internal C-bus system. Measuring points, positions of ICs and measuring values are given in the following tables.

By strobe lines controlled ICs show the following bit patterns during STROBE-test:

Bit pattern ICs HEF 4094								
Pin no.	4	5	6	7	14	13	12	11
Strobe 'x' – Ø	Ø	1	Ø	1	Ø	1	Ø	1
Strobe 'x' – 1	1	Ø	1	Ø	1	Ø	1	Ø

Association of these ICs:

Strobe line	Controlled ICs (Pos. no.)	Location
Strobe 6	362, 370, 371	"DFS/BURST", unit 2
Strobe 7	307, 308, 309, 310, 311	"DFS", unit 2
Strobe 8	302, 306, 312	"Output Amplifier", unit 1
Strobe 9	302, 313, 316, 307	"Modulator", unit 1
Strobe 10	304	"Pulse Generator", unit 1
Strobe 11	301	"PLL", unit 1
Strobe 13	321	"SWEEP" CPU, unit 2
Strobe 15	311	"IEC-bus, function and address" CPU, unit 2

Bit pattern IC N74LS175		
Pin no.	2	7
Strobe 'x' – Ø	1	Ø
Strobe 'x' – 1	Ø	1

Association of this IC

Strobe line	Controlled IC (Pos. no.)	Location
Strobe 12	313	"Direct port" CPU, unit 2

Bit pattern IC HEF 40373								
Pin no.	2	5	6	9	12	15	16	19
Strobe 'x' – Ø	Ø	1	Ø	1	Ø	1	Ø	1
Strobe 'x' – 1	1	Ø	1	Ø	1	Ø	1	Ø

Association of this IC

Strobe line	Controlled IC (Pos. no.)	Location
Strobe 14	308	"IEC-bus out" CPU, unit 2

TEST 5 : IEC-bus test

The display shows the indication

IEC BUS

Each character sent from the controller via the IEC (IEEE)-bus will be decoded and displayed with its hexadecimal code, e. g.

ASCII 'A' indication 41 H
ASCII '3' indication 33 H
etc.

The device address of the PM 5193 is fixed to 2Ø.

With the key MODULATION OFF the program returns to the test menu.

6. CIRCUIT DESCRIPTIONS

6.1. DIGITAL FREQUENCY SYNTHESIZER/U2

Signal Synthesizer

The primary signal of PM 5193 in the frequency range up to 2.147 MHz is generated in the digital frequency synthesizer (DFS). At the output of the digital section of the DFS the signal is presented as a sequence of 9 bit binary numbers. The digital samples of the signal are then converted to analogue voltages by means of a fast DAC.

The frequency of the DFS is determined by a 40 bit frequency word which is sent to the shift registers 307 – 311 from the CPU. The bit parallel shift register outputs are connected with the phase accumulator inputs. The phase accumulator is clocked by 8.5899 MHz from the clock generator. With each clock pulse the 9 bit-phase-accumulator output is incremented by the value of the frequency word. The resulting sequence of binary numbers represents a periodic sawtooth wave. By intermittant one's complementing (complementer 1) the signal is converted to a triangular wave. The samples of this signal are used as addresses for reading out a sine table ROM. The output is representing sine wave values for the first quarter period (4). By intermittant one's complementing in complementer 2 this signal is converted to a full sine wave (7).

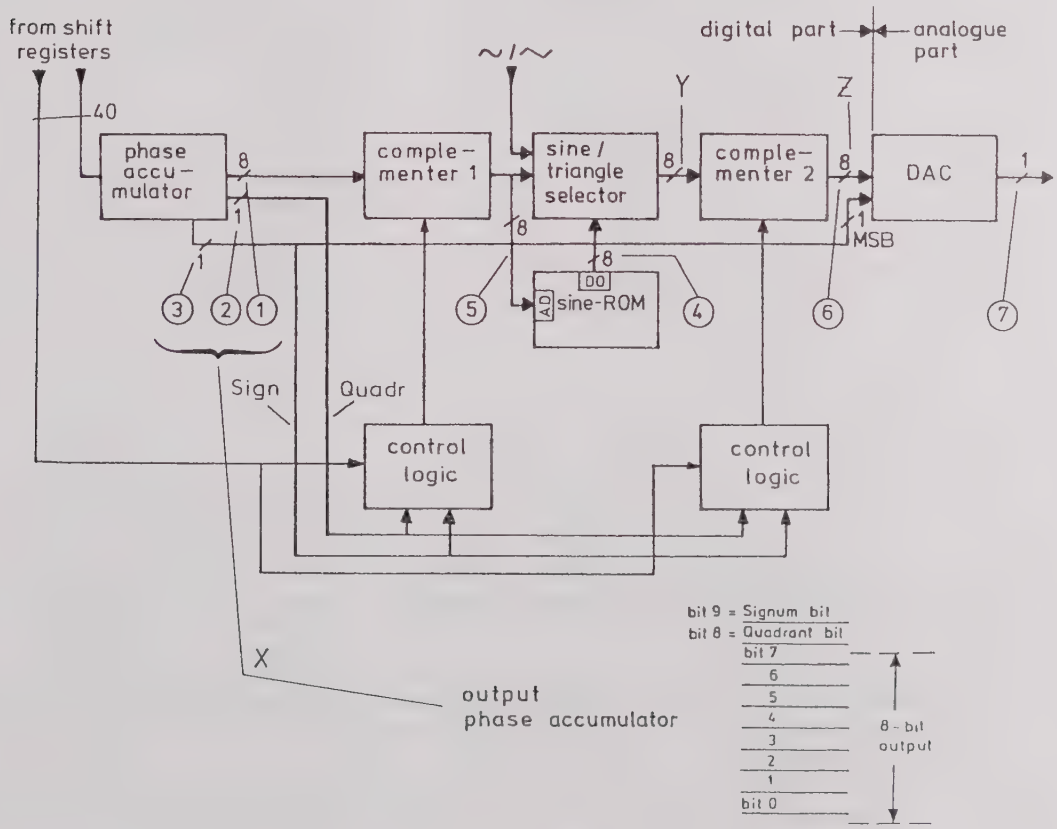

The phase accumulator is functionally divided into two parts. The upper part consists of the adders 312 – 319 and the D-registers 322 – 326 for the frequency range 1 mHz – 2.147 MHz. Frequency values for this range are sent in the 1 – 2 – 4 – 8 code. The lower part consists of the adders 320 and 321, the NOR gate 305 and the D-register 326 and covers the range 0.1 – 1 mHz. For this range the frequency values are applied in the Excess – 3 code.

The upper part of the phase accumulator generates a sequence of 33 bit binary numbers from Ø to $2^{33} - 1$. With each clock pulse the output is incremented by the value of the input frequency word. When reaching the upper limit the accumulator output is reset and starts again with incrementing. This results in a cyclic sequence of binary numbers which have a sawtooth wave form character. The frequency is $fg = 1/T = \delta \cdot fc \cdot 2^{-L}$ where δ is the value of the frequency word, fc the clock frequency (8.5899 MHz) and L the length of the phase accumulator (33 bit).

The upper 10 bit of the phase accumulator are used for subsequent signal processing. The samples of the lower 8 bit of them represent a sawtooth wave with the period T/4 (1A). The upper two of the 10 bit accumulator output (signum bit (2), quadrant bit (3)) determine the quadrant in which the vector of the DFS output signal (7) is actually located. In complementer 1 (exclusiv – or gates 331, 332) the 8 bit output is inverted during the second and fourth quarter period. The resulting signal (5) is fed to the sine/triangle selector (ICs 336, 337) and parallel to the address lines of the sine-ROM in which the sine wave values for the first quarter period (Ø – π/2) are deposited.

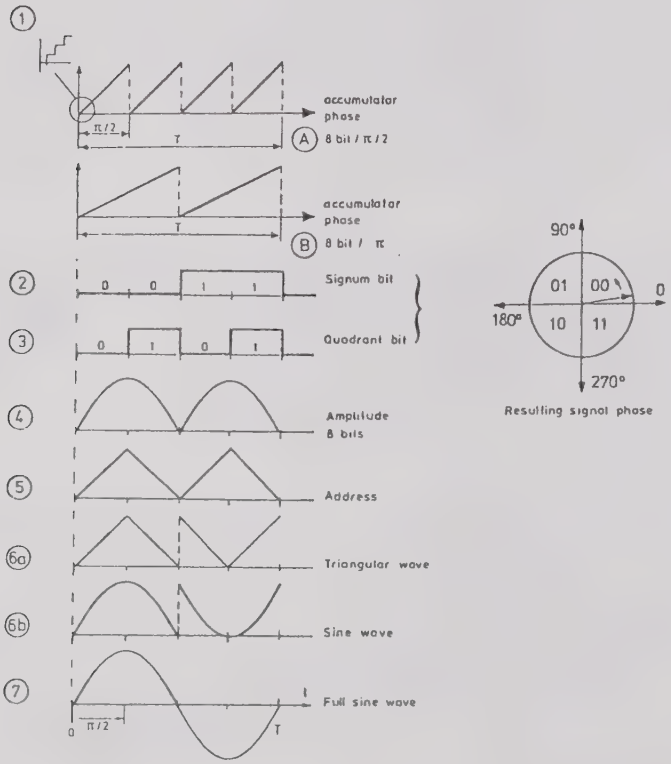

For generating the wave form triangle the output of complementer 1 is fed directly to the sine/triangle selector by-passing the sine ROM. Thus the sawtooth signal (5) applied to complementer 2 results in the wave form (6A).

For sine wave the output data of the sine ROM (4) is picked up by the sine/triangle selector and routed to complementer 2 resulting in wave form (6b). By adding the inverted signum bit (2) as the 9th bit, it results in wave form 7.

When generating positive or negative sawtooths the value of the binary frequency word at the phase accumulator input is halfed – thus the sawtooth period at the phase accumulator output is doubled. For positive ramps control signal "a" is low. Therefore bit Ø – 7 are routed through complementer 1 without inversion to buffer 333 and 334. After passing sine triangle selector 336/337, the buffer 338/339 and complementer 2 without inversion (b = Ø) the signal is latched to the output by the D – FFs 342/343. The ninth bit at output 2/342 is directly derived from bit 8 of the phase accumulator through MUX 347 and the buffers 333 and 338 (= signal c).

For negative going ramps one difference is that control signal "a" is high. Therefore the signal (bit Ø – 7) is inverted by complementer 1. The second difference is that the ninth output bit (= c) is inverted by exclusive – or gate 327 (pins 8, 9, 10) at input pin 2 of MUX 347.

With 'low' at the reset input the phase accumulator output can be set to zero. After reset is switched back to 'high', the signal generation is started and performed in the way as described before. The starting conditions are shown in the picture below.

These starting conditions are relevant for the Burst function. As depicted above the start phase of Haversine is different from that of the sine wave.

For Haversine the lower 8 bits (Ø – 7) of the phase accumulator output are intermittantly inverted in complementer 1 controlled by the inverted bit 8 of the phase accumulator (a). The resulting output of complementer 1 is depicted as signal (3'). The sine ROM converts this signal to (4'). With complementer 2 the signal is then converted to (6'). Control signal 'd' for complementer 2 is depicted as signal (5') and represents the exclusively ored bit 8 and 9 of the phase accumulator. By adding the ninth bit 'c' (= 7') the full Haversine (8') is resulting. 'C' corresponds to the inverted control bit 'd' of complementer 2. It is derived from the exclusive or gate 327 (pin 4, 5, 6) through MUX 347 and the buffers 333 and 338.

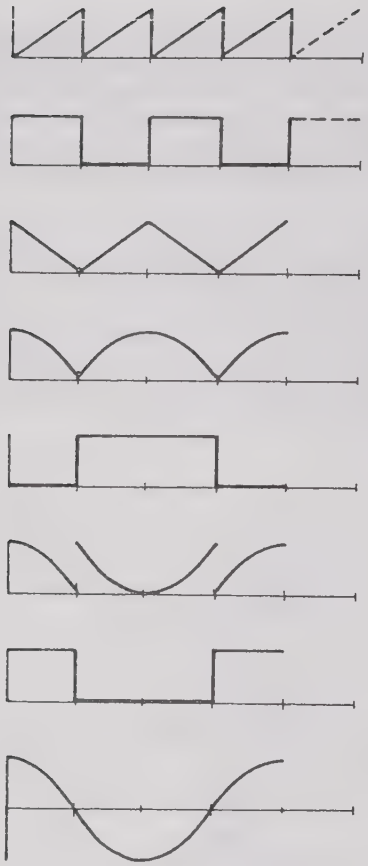

1' output

2' ≙ a

3' output complementer 1

4' output sine ROM

5' ≙ d

6' output complementer 2

7' c = $\overline{d}$

8' Haversine wave

DAC

The binary signal coming from complementer 2 via buffers 342, 343 is converted to an analog voltage in the DAC.

At the DAC inputs the drivers 344, 345 are located which are controlling the current switching differential transistor stages 427 – 428, 424 – 425, . . . The DC-currents (each 5.85 mA = I∅) are generated by individual circuitries. The MSB (bit 8) – current source for instance includes transistor 427 and one OP of IC 346. The bit 7 – current source includes transistor 424 and the other OP of IC 346. The remaining current sources use also this second OP of IC 346. The individual currents – if switched on – are routed to the corresponding nodes N∅ – N8 of the R – 2 R ladder shown below. The input impedance of each node is 2 R/3, where R is 619 ohm (2 R/3 = 412, 67 ohm). Therefore each current – if switched on – is building up the same voltage at the related node ($I_{\emptyset}$ * 2 R/3 = 2,41 V). The transformation to the output depends on the node position in the ladder. Generally from node n to node n+1 the voltage is divided by two. Thus for instance the bit 3 – node N3 voltage is transformed to the output node N8 by the factor $2^{-(8-3)}$ = 1/32. The output voltage of the ladder at node N8 is filtered by the anti alias low pass filter 803, 804, 559 – 562. By this filter with a passband of about 3 MHz especially the spectral contents at both sides of the clock frequency (8.5899 MHz) are suppressed. The output signal is buffered with the transistors 430, 431.

For deglitching purposes of the DAC the current switching point of bit 8 can slightly be shifted with the trimpot 689 versus the current switching points of bits Ø – 7. The latter switching points are set with trimpot 676. By iterative calibration procedure with these both trimpots the sine wave distortion is minimized.

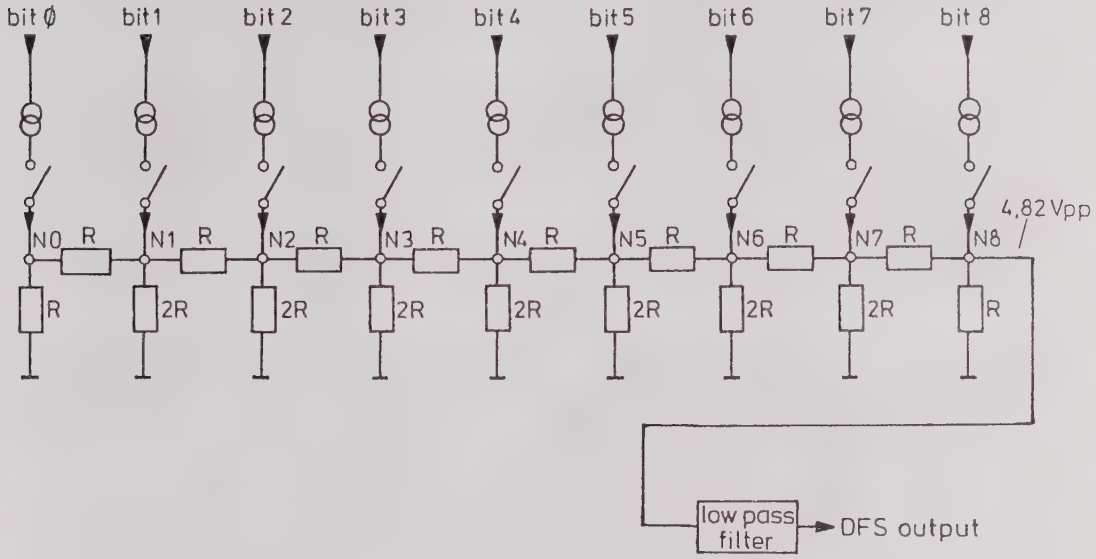

Burst Control Section

The basic block diagram of the burst control section is shown below

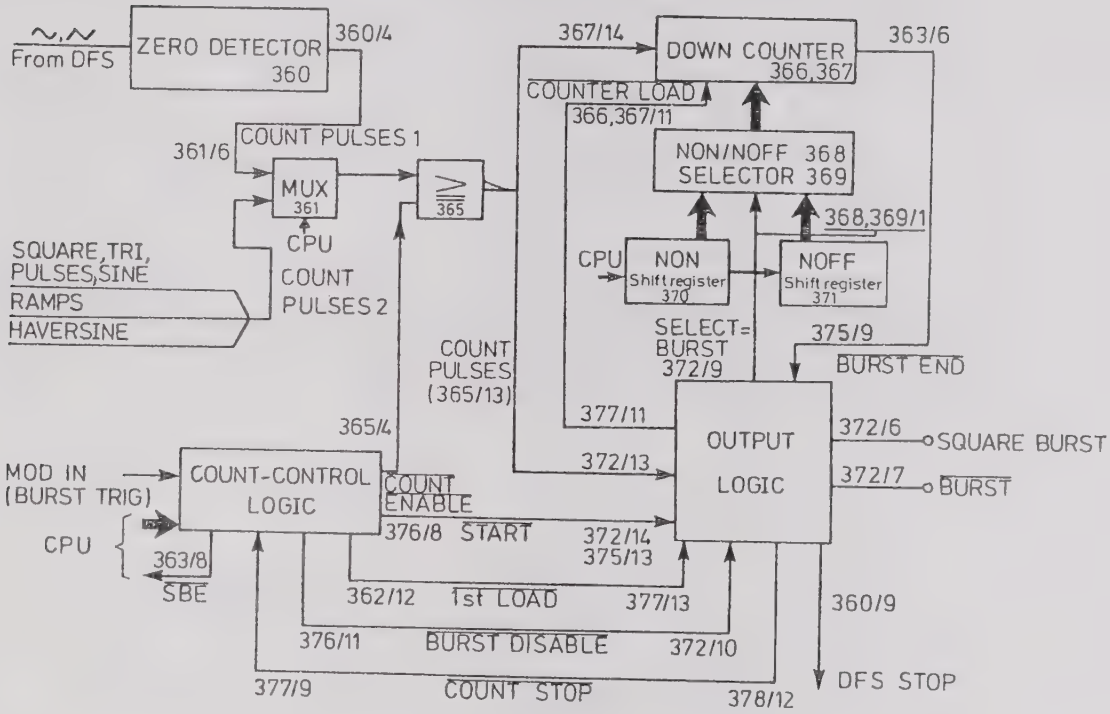

The basic task of the BURST CONTROL SECTION is to derive the control signals $\overline{\text{BURST}}$ and SQUARE BURST from DFS input-signals when burst-mode is selected. $\overline{\text{BURST}}$ is routed to the modulator section and inhibits the AC output-signal when being 'high'. This is the situation before the burst-function is triggered. After triggering $\overline{\text{BURST}}$ is going 'low', thus switching on the generator output signal. After NON periods of the signal $\overline{\text{BURST}}$ again returns to 'high' inhibiting the AC output-signal. For cont-burst $\overline{\text{BURST}}$ remains 'high' during NOFF signal periods. The SQUARE BURST control signal is responsible for controlling the square wave generator during the burst function. When being 'high' the square or pulse waves of the generator are output.

For other operation modes than burst the signal $\overline{\text{BURST}}$ is always 'low'. This is achieved by $\overline{\text{BURST DISABLE}}$ at 'low'-level. When programming burst-mode the signal $\overline{\text{BURST DISABLE}}$ is switched 'high' by the count control logic (IC 362/11 via 376/11). Additionally the burst on- and off-cycles numbers — each minus one — are transferred to NON shift-register 370 and NOFF shift-register 371. The control signal $\overline{\text{1st LOAD}}$ is shortly switched low from the count control logic. By this action the signal $\overline{\text{COUNTER LOAD}}$ is shortly going 'low' and the content of the NON shift-register is loaded into the down counter via the NON/NOFF selector. The selector is controlled by the signal SELECT (= BURST) from the output logic.

By the various actions described above the burst control function is prepared for being started. The trigger pulse is derived either from the SINGLE- or CONT-key at the front panel or from the modulation input MOD IN. At the output of the control logic $\overline{\text{START}}$ is going 'low' switching $\overline{\text{BURST}}$ also to 'low'. Additionally $\overline{\text{COUNT ENABLE}}$ is going 'low' enabling gates 365/1, 2, 3 and 365/11, 12, 13 for passing the count pulses for the MUX 361. Depending on the selected wave form and frequency either count pulses 1 or 2 are routed to the count-gate. For sine- or triangle waves and if the frequency is above 8.388 kHz the count pulses are generated by the zero detector. For all other conditions the count pulses are directly picked up as TTL-signals from the signal synthesizer section.

The count pulses are decrementing the down-counter. After NON low/high transitions of the count pulses $\overline{\text{BURST END}}$ is going 'low'. By this the output FF (372) in the output logic is enabled to toggle. Additionally $\overline{\text{COUNTER LOAD}}$ is shortly going to 'low' thus the down-counter is loaded with NOFF. With the next high/low transition of the count pulse the FF-state changes thus setting $\overline{\text{BURST}}$ to 'high'.

For single burst a short count stop high-pulse is generated (IC 378/12) which sets $\overline{\text{SBE}}$ 'low'. $\overline{\text{SBE}}$ is received from the CPU which effects $\overline{\text{START}}$ to go 'low' (via 362/13) and the output logic to generate a short 'low' pulse $\overline{\text{COUNTER LOAD}}$. By this the down counter is loaded with NON again.

Now the initial state for burst-mode is set again. For frequencies below 8.388 kHz at the end of a single burst, the output logic sets DFS STOP to 'high'. By this a short reset-pulse (306/8) is generated in the signal synthesizer section setting the phase-accumulator output to the zero start condition. Furthermore the phase accumulator clock is disabled (305/2 = 'high') thus stopping the synthesizer action.

For cont burst mode the CPU isn't involved in the process of generating the control signals after first burst was started. This means that all control functions are performed by the output logic. As described in the sections above shortly before the end of the first burst the down counter is loaded with NOFF, therefore subsequently the counter is decrementing NOFF times until the signal $\overline{\text{BURST}}$ switches to 'low' again (by output FF 372), thus initiating the next cont burst cycle.

6.2. PLL / U1

In the frequency range above 2.147 MHz the primary signal is generated in the PLL. The PLL consists of a wide-band VCO, frequency divider, phase detector with loop filter and sine shaper.

DAC

Frequency coarse adjustment in the range above 2.147 MHz is achieved with the DAC which gets the information from the CPU via the C-Bus, fine adjustment takes place via the PLL-loop by comparing the reference signal from the DFS with the VCO output divided by either 32 (= FM off) or 4096 (= FM on).

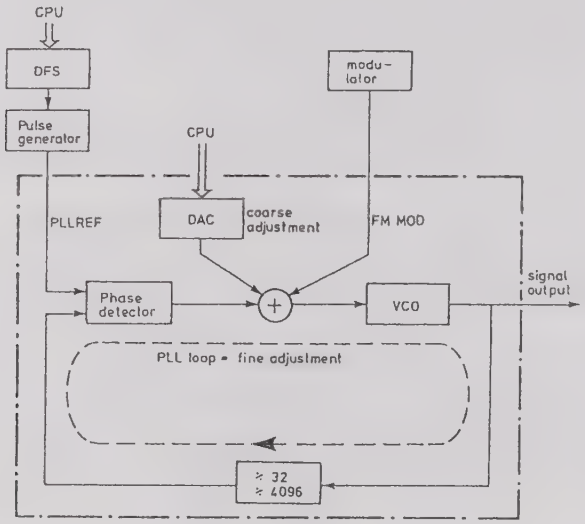

Phase Detector

The phase detector IC 309 compares the signals PLLREF and VCO output and generates a DC-signal which value depends on the phase difference between them.

The integration circuit-following the phase detector consists of the integrated circuit 312, the 10 kΩ resistor 619 and the capacitors 516, 521 and 522. The purpose of the integrator is to filter spikes and short deviations in order to prevent disturbances of the PLL control loop. Time constant for FM off mode is 47 µs (619, 516), with FM on it is 0.5 s (619, 521, 522). Switching FM on and off is achieved with control signal PLL CNTL and switch 313/1, 2, 15. With FM-off the capacitors 521, 522 are continuously charged with OP-amp 311 according to the level at input 3 of the integrator. This effects a short lock-in time when FM is switched on, because the capacitors 521, 522 are always charged to the level according to the momentary frequency. The output of the integrator is passed via solder switch S6 and resistor 608 to the current summing point of the VCO.

The DAC for frequency coarse adjustment consists of the shift register IC 301 and the digital-analog converting circuit IC 302. The serial information from the CPU is received from the shift register, formed to a parallel information and fed to the parallel inputs of IC 302. The output of this circuit is buffered with OP-amp 303 and then passed via resistor 607 to the current summing point.

The last signal which is fed to the current summing point is generated in the modulator and passed via resistor 606. This FM MOD signal effects an amplitude modulation of the integrator – and DAC output signals at the current summing point, whereby the influences of these three signals in the summing point are weighted by the different values of the resistors 606, 607, 608. Lower resistance values effect a higher current going into the summing point thus giving a higher influence for the VCO. The highest current is delivered from the DAC via 607 (= 10K) followed by the phase detector output via 608 (= 75K) and the modulation signal FM MOD via 606 (= 365K).

VCO

The VCO consists of the input buffer 304, a current mirror with two current sources 306, 307, 351, 353, 354 and 356 an amplifier 361, 362, 363, 380 and a comparator 364, 366, 367 and 368.

The two current sources generate the currents 'I' and '2I', whereby the value of 'I' depends on the current in the summing point, the relation between the two currents is exactly 1 : 2. The current '2I' is going via transistor 356 to the transistors 357, 358 which are controlled from the comparator output. During the rising ramp (a) transistor 358 is open and feeds the current '2I' to the capacitors and to the transistor 359 which draws the current 'I' from this point, thus the two capacitors 526, 527 are charged with the current 'I'. During the falling ramp (b) transistor 357 is open and leads the current of '2I' to ground. Because the second current source draws the current 'I' continuously from the two capacitors 526 and 527, they are now discharged until the negative threshold is reached.

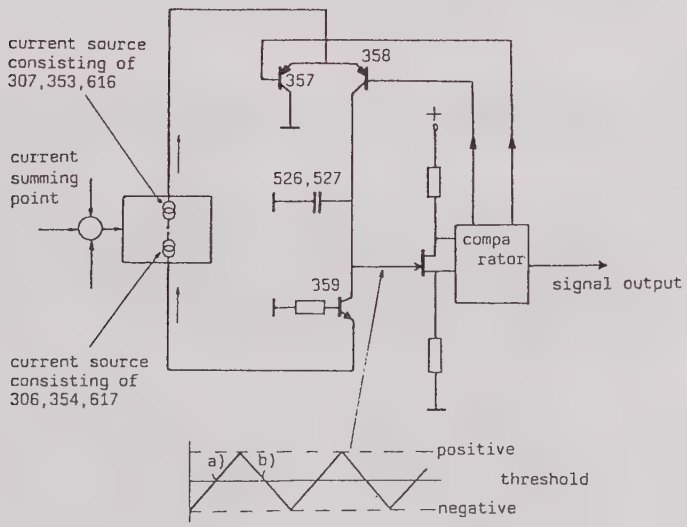

The stage following the triangular wave generator is the sense amplifier consisting of the transistors 361, 362, 363 and 380. This amplifier has a very high input impedance ($> 1\ G\Omega$), a total gain of 1 and supplys the inputs of comparator and sine shaper. The signals at these inputs have precisely the same phase as the signal at the capacitors 526, 527 and an amplitude of 2 Vpp.

The comparator consists of the differential stage 364, 366 and the TTL switching circuit 367, 368. The two signals to be compared are fed to the bases of the transistors 364 and 366. The collectors of these transistors are controlling the bases of the transistors 367 and 368 thus generating a square wave signal which is connected to the base of transistor 366 via resistor 655. This effects the comparing of the positive ramp of the triangular wave with the positive half cycle of the square wave and of the negative ramp with the negative half cycle.

When the positive ramp of the triangular wave at the base of transistor 364 reaches the upper threshold determined by the level of the square wave at the base of transistor 366, the comparator switches and with this the collector of transistor 364 becomes more negative. This effects the switching of transistor 357 to the conducting state. Thus the current '2I' is drawn to ground, the capacitors 526 and 527 are discharged with the current 'I' and the triangular signal turns over to the negative ramp.

The RFTTL output is supplied from the TTL switching circuit in the VCO (367, 368) via decoupling transistor 379. This signal is then formed in the signal conditioner 369, 371 and fed to the output via the two buffers 314/1, 2, 3 and 314/11, 12, 13.

Frequency divider

The frequency divider of the PLL is also supplied from the TTL-output of the VCO (IC 314/3). This circuit serves the purpose to divide the VCO output frequency by the factor 32 for FM off and 4096 for FM on. Dividing takes place in four steps with the two dividing circuits 316 and 317, the divided value is available at pin 6 of IC 318 (a) and fed to input 1 of phase detector IC 309. Switching over from dividing factor 32 to 4096 is achieved via the gates 318/1, 2, 3 and 318/8, 9, 10 with the signal PLL CNTL (b) which is 'low' for FM on and 'high' for FM off.

Sine shaper

With the sine shaper-consisting of the transistor array 320 and the transistors 372, 373 the triangular wave from the VCO is formed to a sine wave and fed to the output RF-SINE via the sine wave amplifier (transistors 374 – 378).

The triangular wave is attenuated with the resistors 696 and 697 to 0.4 Vpp at the base of transistor 320/9, 10, 11. The base of the second transistor of this differential stage (320/6, 7, 8) is fixed to a constant level which is defined with potmeter 709 and resistors 707, 708. Because the operating point for this stage is adjusted such that the stage is overdriven with the tops of the triangular wave, the collectors (pins 11, 8) show a sine wave signal (see picture).

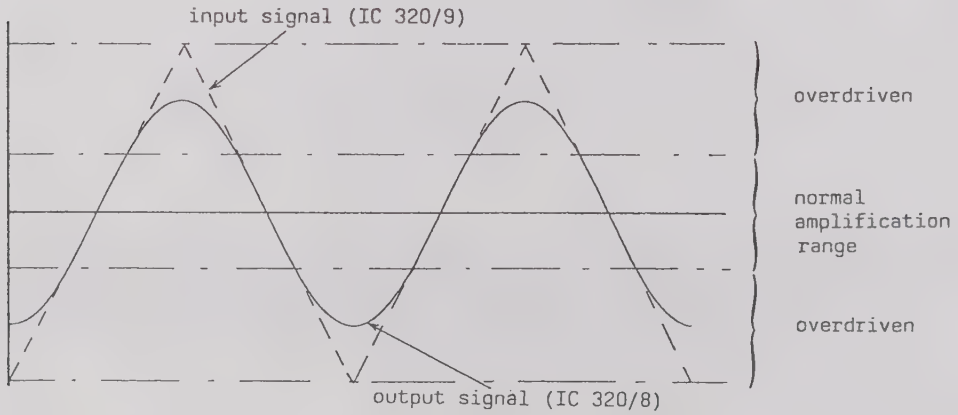

This principle of forming the triangular wave to a sine wave requires a stable and exactly defined operating point. Temperature drifts in the crystal of IC 320 effect a drift of the base-emitter voltages and with this a drift of the operating point which effects then a higher distortion of the sine wave signal at the output RF SINE.

In order to keep the crystal temperature of IC 320 constant, there is a temperature control circuit in the sine shaper which consists of the transistors 372, 373 and three transistors in IC 320. With potmeter 684 a base current is adjusted for transistor 320/12, 13, 14. The collector of this transistor controls the two parallel connected 'heating transistors' 320/1, 2, 3 and 320/3, 4, 5 — which produce a heating power of together appro. 0.3 W — via transistors 373 and 372.

In case of increasing crystal temperature in IC 320, the current through transistor 320/12, 13, 14 will also increase and reduce the heating power of transistors 320/1, 2, 3 and 320/3, 4, 5 via the transistors 373 and 372.

In this way there is a closed control loop which effects a crystal temperature of appr. 80 — 85° C remaining absolutely constant — this is essential for a proper sine wave forming.

The output signals of the differential amplifier 320/9, 10, 11 and 320/6, 7, 8 are fed to the bases of transistors 374 and 376. After amplification in this sine output amplifier the output amplitude is adjusted with potmeter 721 and passed to the modulator via output RF SINE.

6.3. MODULATOR/U1

Voltage Conditioner

The DFS-signals (sine, triangle, rising sawtooth, falling sawtooth) are routed via the voltage conditioner to be conditioned to the final signals e. g. from the bipolar rising sawtooth to the unipolar positive sawtooth signal.
The resistance network of this voltage conditioner and it s analogue multiplexer (301) build up a voltage divider combination with selectable attenuation and dc-shifting. The path a1 (fig. b) is switched on at sinewave and triangular wave, path a2 at negative sawtooth and path a3 at haversine or positive sawtooth waveforms respectively (due to the inverting OUTPUT AMPLIFIER/U1 the polarities of the signals in the MODULATOR are invers with respect to the generator output signals).
The attenuations of a2 and a3 are double of that of a1, their positive or negative dc-shifting, respectively, comes to half the value of the resulting amplitudes of the signals. Both these facts result in unipolar sawtooth and haversine signals and in equal zero to peak amplitudes of all signals derivated from the DFS waveforms.

Diode Switches

The principle of operation of the DIODE SWITCHES 1 and 2 is shown in the figure below (fig. a)

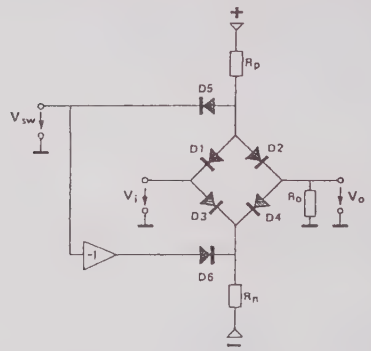

fig. a

V_i = input signal voltage
V_o = output signal voltage
V_d = diode foreward voltage
V_{sw} = switching voltage

If V_{sw} is negative, D5 and D6 are open and the bridge diodes are closed. R_o pulls the output voltage to 0 volts.
If V_{sw} is positive, diodes D5 and D6 are closed, the diode bridge D1 . . . D4 is open, and the voltage relations are

$$V_{d1} + V_i = V_{d2} + V_o$$
$$\text{and } V_i - V_{d3} = V_o - V_{d4}$$

So the output voltage V_o is

$$V_o = V_i + V_{d1} - V_{d2} = V_i + V_{d4} - V_{d3}$$
$$\underline{V_o = V_i} \qquad (\text{if } V_{d1} = V_{d2} \text{ and } V_{d3} = V_{d4})$$

Differences of the diode voltages can cause an offset which is compensated at the general offset adjustment of the generator. The load resistance for the signal voltage source (V_i) is R_o shunted by R_p and R_n.
Besides the selection of the right signal paths the DIODE SWITCHES perform the signal keying at BURST mode (SWITCH 1 only) and GATING mode. DIODE SWITCH 1 is driven by a balanced, non saturated differential driver (358, 360) which ensures extreme short delay required for the phase coherent signal keying at BURST mode. DIODE SWITCH 2 is driven by two coupled transistor switches operating in opposite directions (362, 364 and 363, 366).

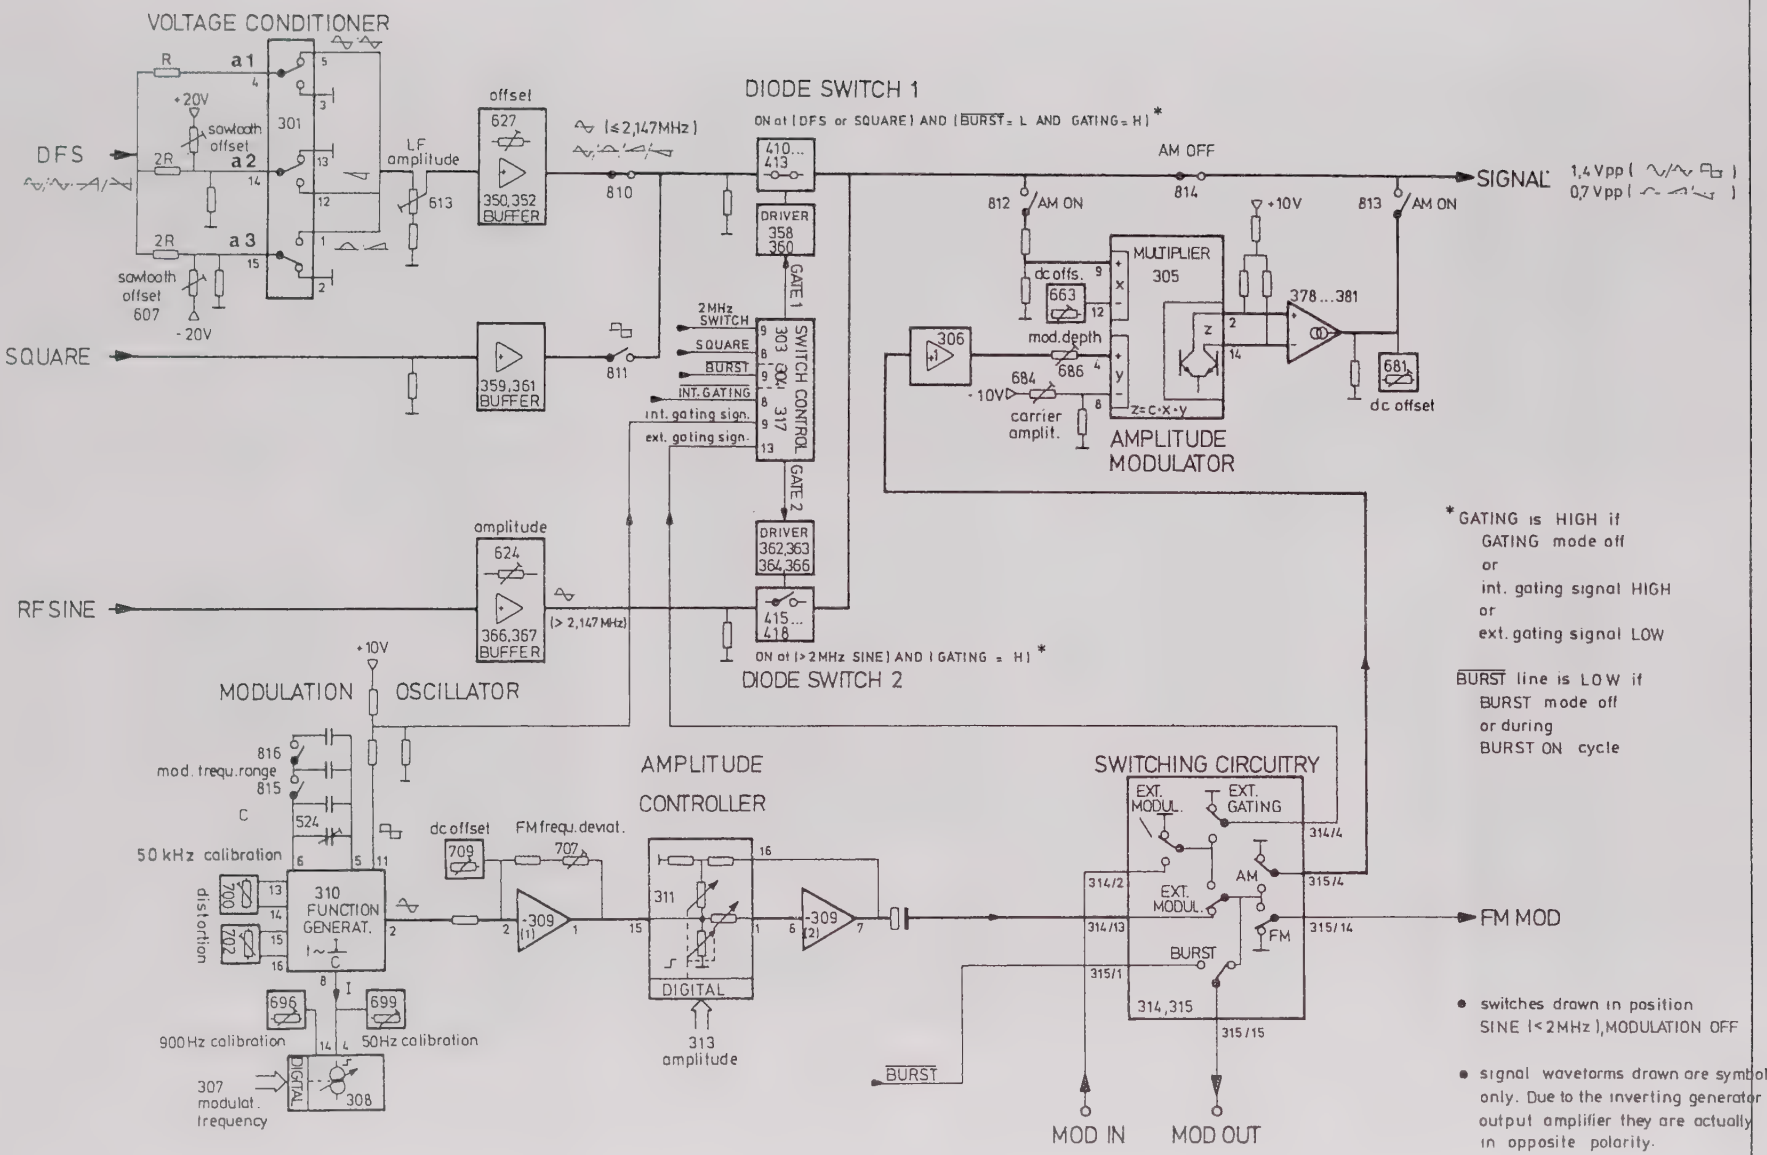

MODULATOR/U1 FUNCTIONAL DIAGRAM (fig.b)

Switch control

Both the DIODE SWITCHES are controled by logical control signals and the BURST or GATING signals, all them logically linked in the SWITCH CONTROL circuit, a combination of NOR-gates. The linkage of the control signals is explained by the equivalent logical equations below (+ = OR, x = AND):

GATE1 = (2 MHz SWITCH + SQUARE) x ($\overline{\text{INT GATE}}$ + int. gating sign.) x $\overline{\text{ext. gating. sign.}}$ x BURST
GATE1 = $\overline{\text{2 MHz SWITCH}}$ x $\overline{\text{SQUARE}}$ x ($\overline{\text{INT GATE}}$ + int. gating sign.) x $\overline{\text{ext. gating. sign.}}$

Represented as a combination of contacts:

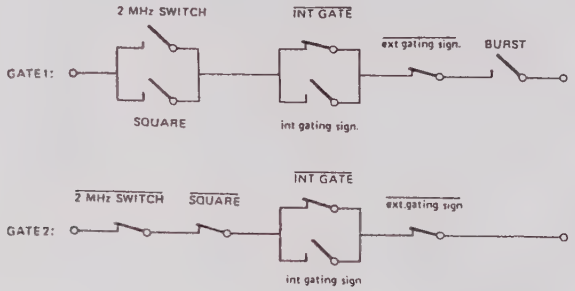

fig. c

Symbols:

2MHzSWITCH:	HIGH (ON) if frequencies < 2.147 MHz (control line).
SQUARE:	HIGH (ON) if SQUARE waveform selected (output pin 14 of shift register 302).
$\overline{\text{INT GATE}}$:	HIGH (ON) if any other modulation mode is selected than INTERNAL GATING (output pin 7 of shift register 316).
int. gating sign.:	H and L (ON and OFF) change with the internal gating signal (square wave output of the modulation generator).
ext. gating sign.:	H and L (OFF and ON) change with the external gating signal. Kept LOW (ON) if external gating mode is switched off.
BURST:	H and L (ON and OFF) changes with the internal burst cycles. Kept HIGH (ON) if BURST mode is switched off. It is the inversion of the control line: BURST.
GATE1/2:	Driving signals for the DIODE SWITCHES 1 and 2 (= output signals of the SWITCH CONTROL circuit, see fig. b). HIGH: SWITCH ON, LOW: SWITCH OFF.

Amplitude Modulator

AM is performed by multiplication. The multiplier module (305) multiplies the carrier signal (any generator signal except pulses) by the internal or external modulation signal. The modulation signal is superposed by a dc-component (pin 8). The level of this dc-"offset" with respect to the ac input amplitudes (pin 9 and pin 4) determines the proportion between the amplitudes of carrier and both the sidebands. At 0 volts dc the carrier would be suppressed (balanced modulation).

The function of the complete AMPLITUDE MODULATOR circuit is represented by the following equation (for sinusoidal voltages):

$u_{out} = k \times (E_c \cos\omega_c t \times (Vdc + E_m \cos\omega_m t))$

Symbols:

u_{out}	= modulated output signal	
$E_c \cos\omega_c t$	= carrier signal	} E = amplitude
$E_m \cos\omega_m t$	= modulation signal	} E = amplitude
V_{dc}	= dc voltage (at pin 8)	
k	= scaling factor, resulting from the parameters of the complete AM-modulator circuitry	

Evaluated:

$$u_{out} = k \times (E_c V_{dc} \cos\omega_c t \times E_c E_m (\cos\omega_c t \times \cos\omega_m t))$$
$$= k \times E_c (\underbrace{V_{dc}\cos\omega_c t}_{\text{carrier}} + \underbrace{E_m \times 0.5 (\cos(\omega_c - \omega_m)t}_{\text{lower sideband}} + \underbrace{\cos(\omega_c + \omega_m)t)}_{\text{upper sideband}})$$

The right relations between k, V and E, obtained by suitable dimensioning and proper calibration, result in

$$u_{out} = 0.5E_c (\cos\omega_c t + 0.5m (\cos(\omega_c - \omega_m)t + \cos(\omega_c + \omega_m)t))$$
$$(m = E_m/E_{m\,max} = \text{depth of modulation})$$

Modulation Oscillator

The main unit of the MODULATION OSCILLATOR is the function generator module (310) with adjustable frequencies by changing load capacities and/or the load current (f ~ I/C). Two relays (815, 816) switch the frequency ranges: from six capacitors they can select three different combinations as frequency determining capacities. Within the range selected the frequency fine setting is permitted by an active DAC (308). This DAC operates as digitally controlable current sink which sets directly the frequency determining current.
The sinewave output signal is routed via a buffer amplifier (309 (1)), which gives also possibilities for amplitude and offset calibrations, to the AMPLITUDE CONTROLLER, a circuit consisting of a DAC and an operational amplifier (311, 309 (2)). The DAC is applied as controlable feedback resistor network for the operational amplifier.
The rectangular voltage output of the function generator (pin 11) is connected to the SWITCH CONTROL circuit. It is active as internal gating signal if the INTERNAL GATING mode is switched on.

Control of the Modulator Unit

Four 8-STAGE SHIFT-AND-STORE BUS REGISTERS, joint in cascade (302 ⟶ 316 ⟶ 313 ⟶ 307; see fig. 39), distribute the control messages of the CPU (SDA) — 32 bits serial, coming in via register module 302 — to the corresponding switches and control modules respectively. With strobe STR9 going HIGH that string of bits clocked in by the serial clock (SCL) is transfered to the outputs of the register modules in parallel (latched) and, thereby, to the switches, multiplexers, gates etc.
Register modules 307 and 313 hand over the control bits for fine setting of frequency and amplitude of the modulation oscillator. Register modules 302 and 316 hand over the control bits for selection of the different signal paths, modulation modes and modulation frequency ranges (see tables below):

4	5	6	7	14	13	12	11	
						1		BURST mode ON
					0	1		BURST mode AND neg. PULSE ON
0	1	0	1	0	1			
0	1	1	0	1	1			
0	0	1	1	0	1			
1	1	1	1	0	1			
0	1	1	0	0	1			

Shift register 302

4	5	6	7	14	13	12	11	
						1	1	range 10 Hz . 1 kHz*
						0	1	range 1 kHz . . 10 kHz*
						0	0	range 10 kHz . 200 kHz*
1	1	1	1	1	1			MODULATION OFF
0	0	1	1	1	1			internal AM
1	1	0	1	1	1			internal FM
1	1	1	0	1	1			internal GATING
0	0	1	1	1	0			external AM
1	1	0	1	1	0			external FM
1	1	1	1	0	0			external GATING

*) modulation frequency

Shift register 316

6.4. PULSE GENERATOR/U1

1. Square wave generator

According to fig. 30 (over-all blockdiagram) and fig. 40 (circuit diagram) the section of the PULSE GENERATOR, which generates the primary square wave, fed to the AMPLIFIER, comprises the following subsections:

- ZERO CROSSING DETECTOR, IC 301,
- CONTROL CIRCUITRY, IC 302, 303, 305, Transistor 351,
- SQUARE WAVE CONDITIONER, Transistors 352 . . . 355.

Zero crossing detector

By resistor 602, 605, 698 a slight hysteresis is implemented for accurate transitions without glitches at the zero crossings of the DFS input signal. A L (= low) level "SQUARE BURST" control signal at pin 5 inactivates IC 301, (i. e., the output is set H (= high), but this function is only used in the BURST mode.

Control circuitry

Control signal states:

"2MHz SWITCH", IC 303-pin 1:	H, if frequency $\leqslant$ 2.147 MHz L, if frequency $>$ 2.147 MHz
"POSITIVE PULSE BURST", IC 305-pin 2:	H for non-BURST mode
"PULSE SEL":	L for rectangular waveform H else
"BURST" IC 302-pin 1, IC 304-pin 11:	L for non-BURST mode H for rectangular waveforms L else

Exclusive OR gate IC 302/1, 2, 3 is routing the ZERO CROSSING OUTPUT signal inverted, if a rectangular waveform is selected, to the MUX, IC 303. The MUX is controlled by the "2MHz SWITCH" control signal at pin 1.

Functional table of IC 303/SN 74S258N:

Pin 1	Pin 2,5	Pin 3,6	Pin 4,7
L	X	L	H
L	X	H	L
H	L	X	H
H	H	X	L

From this table and the "2 MHz SWITCH" definition results, that up to 2.147 MHz the signal from IC 302/pin 3 or above 2.147 MHz the "RF TTL" signal from the PLL is passed inversely through the MUX to IC 305/pin 1. There it is handed with (PULSE SEL) + (BURST) = L at pin 2. The NAND gate output is handed with "POS PULSE BURST" = H. The resulting signal at pin 6 is fed to the SQUARE WAVE CONDITIONER.

The various internal signals in the generator square wave BURST mode (N = 2) are depicted in the BURST mode pulse diagram. Leading positive spikes of the IC 305/pin 6 output signal, respectively negative spikes of the generator output bursts are set to zero by adjusting trimmer 603. By this trimmer the switch-over points of the ZERO CROSSING DETECTOR with respect to the zero-crossings of the sine-wave input signal can be time shifted. Trailing spikes of the output bursts are avoided by the function of the "SQUARE BURST" control signal at IC 301/pin 5: By the "SQUARE BURST" L pulse the duration of the coinciding ZERO DETECTOR OUTPUT H pulse is slightly increased, thus ensuring that at the generator output the SQUARE WAVE burst stops with a positive going transition to zero.

The SQUARE WAVE CONDITIONER converts the TTL signal at IC 305/pin 8 to a square wave, with an amplitude of about 2,6 Vpp. Trimmpots 624 and 627 are adjusted for accurate positive and negative amplitudes at the generator output.

2. Rectangular pulse wave generation

The signal processings in the ZERO CROSSING DETECTOR and the CONTROL CIRCUITRY sections are the same as in the square wave mode with the exceptions, depicted in the pulse diagram table, for negative PULSE BURSTS.

The IC 305/pin 6 output TTL signal is routed to the PULSE TRAIN CONDITIONER, which converts this signal to a square wave output current (= "3ns SQUARE") shaped accurately. The amplitude of this square wave is determined by the dc collector currents of transistors 363 and 364, which are controlled by shift register IC 304 via DAC IC 306 and operational amplifiers 307, 308 and 309.

The dc current range is about 10 mA, corresponding to a 1 Vpp open-loop output amplitude, to 100 mA, corresponding to 10 Vpp. By the DC GENERATOR in the AMPLIFIER section the resulting square wave output voltage is shifted to a unipolar positive or negative rectangular pulse train, depending on the selected waveform pos. pulses or neg. pulses.

3. TTL output voltage generation

The output voltage of IC 305/pin 11 is fed to the TTL VOLTAGE VONDITIONER stage with the transistor 356, 357, 358. The TTL OUTPUT signal is a continuous wave also in the generator BURST mode, this signal is not affected by the transistor 351 output.

6.5. AMPLIFIER / U1

As depicted in the over-all block diagram, fig. 30, the **AMPLIFIER** comprises the sub-sections **AMPLITUDE CONTROLLER, POWER AMPLIFIER, STEP ATTENUATOR** and **DC GENERATOR.**

Amplitude controller

Corresponding to fig. a, the input voltage is 1.4 Vpp. for sine, triangle and square waves, 0.7 Vpp for the other wave forms.

The ac currents fed into the emitters of 365 and 368, representing current sinks, are proportional to the total effective conductance between buffer output and current sinks. There are 2 x 7 conductances, namely y1, y2, . . ., y7 and y1', y2', . . ., y7' with binary weights 1, 2, 4, . . ., 64. Two additional conductances y8 and y8', weighted 83, complete the switched conductance ladder. Depending on the programmed voltage pp, some of the conductance pairs y, y' are connected by the switches S1 . . . S8 and S1' . . . S8' with the current sinks.

Example:
for 10 Vpp, switches S3, S6, S7 and S3', S6', S7' are closed. The effective conductance is then about y = 1/(134 ohm). If 20 Vpp is programmed. All switches excl. S2, S4 and S2', S4' are closed, resulting in y = 1/(67.2 ohm). The generator open loop output voltage is VØ = ayVi where a = 960 ohm in the 2.1 to 20 Vpp range.

Thus yØ = 20 Vpp, if y = 1/(67.2 ohm).

Resistor 632 is lowering the input impedance of the emitter current sinks, thus improving the amplitude-controller linearity.

In the real circuitry, see fig. 44, the switches are realized by the diodes 424 . . . 349. In the switch-off state, the diodes are biased reversely to about 1.3 V by transistors, e. g., diode 424 by transistor 333. Primary control is performed by shift register 302 via CMOS switches 314, 315.

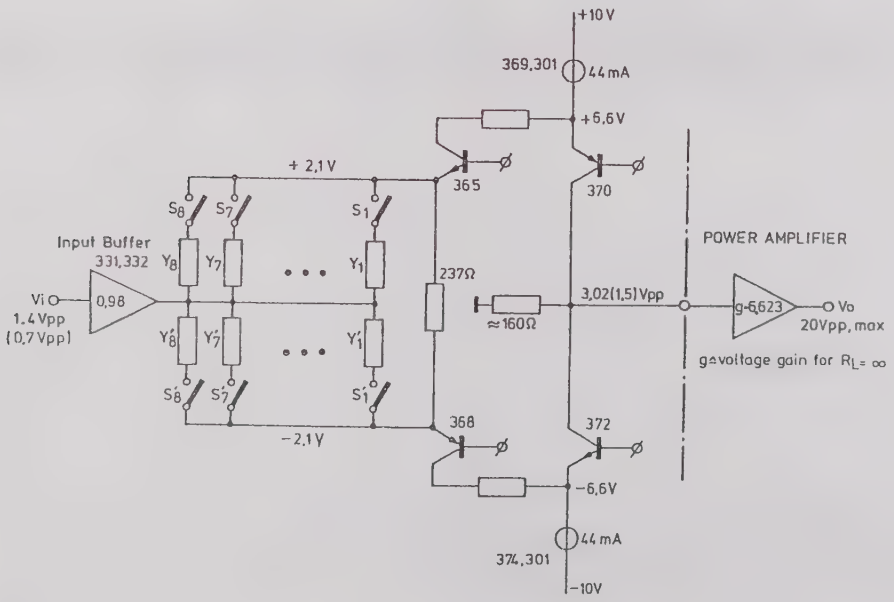

fig. a

Power amplifier

As depicted in fig. b, the **POWER AMPLIFIER** is a complementary collector-output type. At frequencies above some hundred Hz the ac input voltage is passed through the input buffer and C536, C 537 directly to the base of transistors 378 and 381, converted to ac currents by 378 . . . 383 and fed through 385, 386, 387 and 390, 391, 392 respectively to the internal 50 Ohm output resistor, made up by the resistors 781 . . . 786.

For high dc stability, the difference of the emitter dc currents (378, 379, 380 vs 381, 382, 383), which is about zero, is kept constant by an automatic control loop including OP 303 and transistor 377.

This loop is forcing (i1 – i2) ~ vi in the frequency range from dc to some hundred Hz. Trimmer 700 is adjusted for flat amplitude response in the take-over range of the direct drive via C536 and C537.

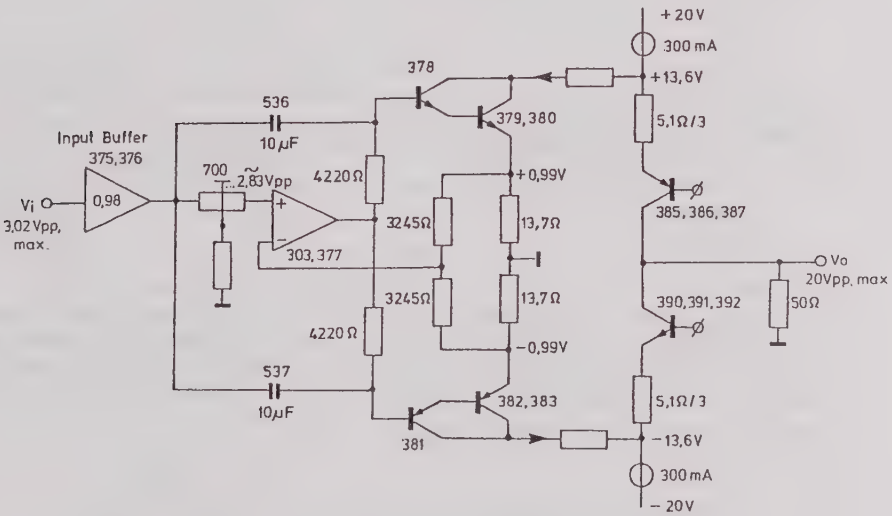

fig. b

DC generator

Primary control of the **DC GENERATOR** is performed by the DAC, Pos. 307. The DAC is set by shift register 306 to output currents $I_{\emptyset}$ from 0 to about $200 \cdot I_{ref}/255 = 0.884$ mA proportional to the decimal equivalents 0 . . . 200 of the shift register binary output. If the decimal equivalent is 100, i. e. DC = 0V, $I_{\emptyset}$ = 0,442 mA is compensated by the current through resistors 770, 771. 771 is adjusted for DC = 0V at pin 4 pos. 307. Hence, in this situation no current is drawn from the input (pin 6 of OP 308) of the dc generating circuitry. If the shift register output is 0 or 200, i. e. DC = – 10 V or + 10 V respectively, the asymmetry of the emitter voltages (transistors 394, 395 vs 397, 398 is $U = I_{\emptyset max} R/4 = 5.5$ V ($I_{\emptyset}$ = 0.884 mA, R = 24.9 kOhm; resistors 777 . . . 780), giving a dc voltage at the generator output of $4 \cdot U \cdot RL/r = 10$ V absolute. (RL = 50 Ohm, r = 110 Ohm; resistors 868, 869 etc.). The corresponding output current of the DC GENERATOR is $4 \cdot U/r = 200$ mA.

6.6. CPU / U2

The CPU of the PM 5193 contains the μ-processor 8031 with all drivers, decoders, RAM- and PROM memory, clock generator, IEC-bus interface, strobe-decoder and the control outputs PEN LIFT and SWEEP OUT.

The multiplexed address/data bus (AD$\emptyset$ – AD7) of the processor 318 supplies the address inputs A0 – A7 of the PROM-memory 315 via the address latch 314 (74LS363), the inputs A8 – A13 are supplied directly from the processor (P2 0 – P2 5). Data from the PROM is fed from the outputs $0_\emptyset$ – 0_7 via the lines AD$\emptyset$ – AD7 directly to the processor, this transfer is controlled with the output $\overline{PSEN}$ from the processor driving the input $\overline{OE}$ of the PROM.

The memory circuits 324 and 325 serve the storing of the parameter sets (store function). Communication with them takes place via the internal serial I^2C bus which consists of a data line SDA and a clock line SCL. The principle of the data transfer between processor and the RAM-memories is shown in the following diagram.

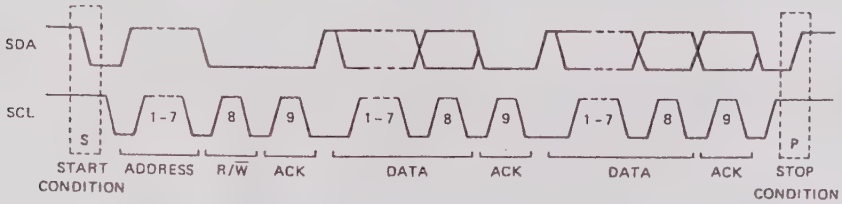

The line SDA and the line SCL for the C-bus (output T x d of the processor) servce the communication with the remaining units. The data information of the line SDA is clocked into the shift register of each unit, the according strobe signal following this data sequence latches the data information in the selected shift register and presents the transmitted information in parallel form at the output lines of this circuit. The required strobe signals are generated with the strobe-decoder 312 which is controlled again from the processor via the lines P20 – P23 and the signal $\overline{WR}$.

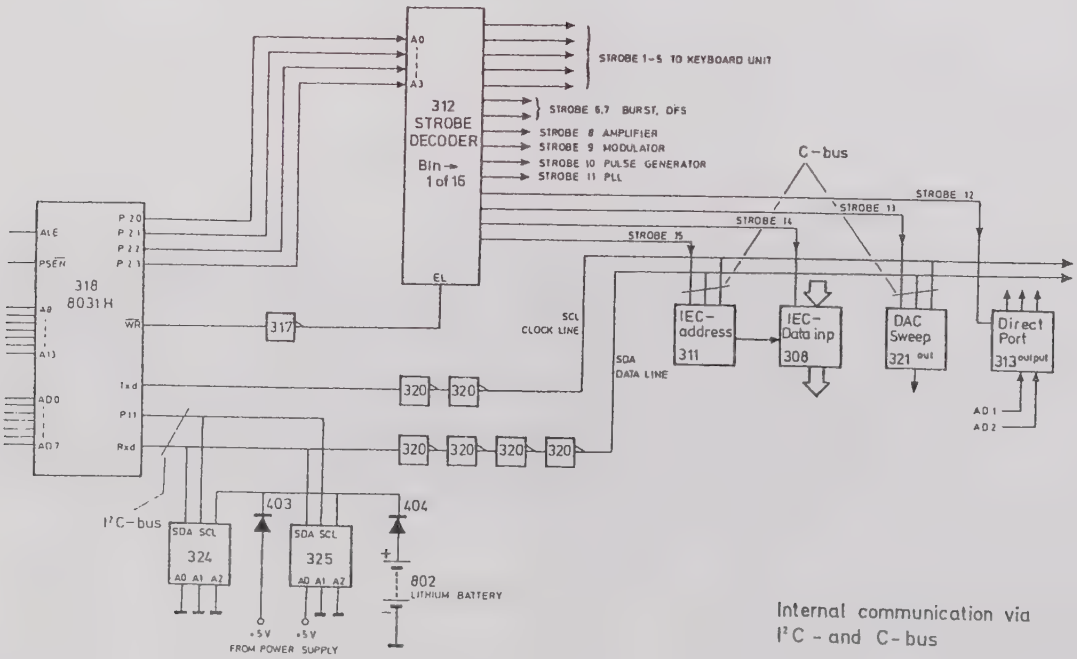

Internal communication via I^2C - and C-bus

Converting the serial information to a parallel one the parallel output presents the decoded commands.

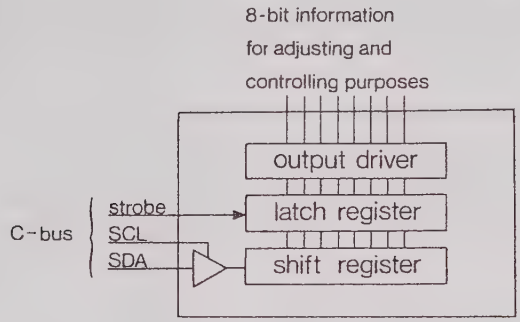

The clock signals for processor and IEC controller as well as a 100 kHz signal for the internal timer are generated in the 'clock generator' circuitry. This part of the CPU consists of the crystal 801, the inverter 317 and the decimal counter 319. The 10 MHz clock from the inverting buffer is fed to input XTAL 1 of the processor, furthermore divided by 5 with the decimal counter 319 and then fed to the IEC-controller 306. After further dividing by 20 the output 7 of the counter deliveres the 100 kHz signal TØ for the timer.

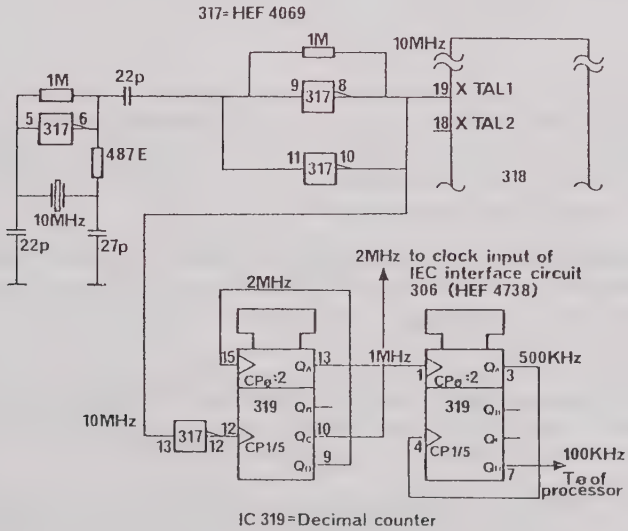

clock generation

Remote control of the PM 5193 follows via the IEC-interface which consists of the controller 306, the bus drivers 301 – 304, the buffers 307, 308 and the shift registers 309 – 311. Input data (control commands) from the IEC-bus connector are fed to the data bus ADØ – AD7 via the bidirectional bus drivers 303 and 304 and buffer 307. Output data (learn- and identification mode) are accordingly fed to the IEC-bus via buffer 308 and the bus drivers 303 and 304. Data direction and enable of the buffers are controlled by the IEC-bus controller 306 via the output Ota (other talk address) and by the processor with the signal 'strobe 14'.

The listener/talker addresses and the interface parameters necessary for the communication are sent to the IEC-controller in serial form. The microprocessor sends these informations via the C-bus with the help of the signal STR 15 to the shift register 311. The parallel outputs of this circuit supply again the parallel inputs of the shift registers 309 and 310 by means of which addresses and interface parameters are transferred to input ISR (input shift register) of the IEC-bus controller. This transfer action is controlled from the controller circuit, the repetition rate is 125 kHz (= 2 MHz/16).

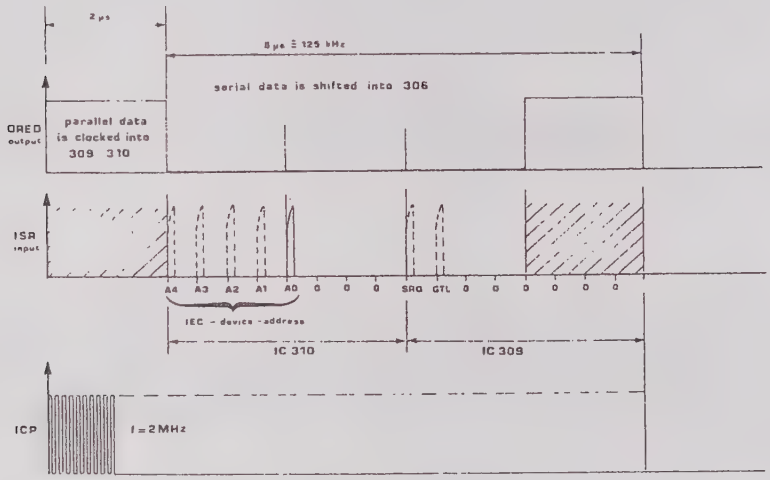
2 µs
8 µs ≙ 125 kHz
serial data is shifted into 306
QRED output
parallel data is clocked into 309 310
ISR input
A4 A3 A2 A1 A0 0 0 0 SRQ GTL 0 0 0 0 0 0 0
IEC - device - address
IC 310
IC 309
ICP
f = 2 MHz

Each data string for the shift registers 309 and 310 contains the IEC device-address and one bit for SRQ on or off. The data string entered from the IEC controller 306 via input 'ISR' has a length of 11 bits, not required bits at the inputs of ICs 309/310 are fixed to ground. Input GTL of these circuits – pin 15 of IC 309 – is controlled directly from the key LOCAL at the front panel. Pressing this key causes the IEC controller 306 to switch back to the local mode.

The output SWEEP OUT contains a frequency-proportional voltage during the linear sweep and a log-frequency proportional voltage during the logarithmic sweep. This output voltage is generated by means of a shift register with a DAC controlled directly from the processor via the C-bus.

The digital information is transferred to the shift-register and presents the parallel information at the outputs when the strobe-signal 'Strobe 13' becomes true. The 8 output-lines of the shift-register 321 are fed directly to the input lines of the DAC 323 which forms the 8-bit digital information to an analog signal which is then – amplified by the operational amplifier 322 – fed to the SWEEP OUT connector.

The Direct Port consists of the latch circuit 313 which is used to latch informations from the lines AD1, AD2 and which is controlled with the signal STR 12. The output-signals '2 MHz-SWITCH' and 'PLL-CNTL' are used for controlling purposes in the units PLL/VCO and modulator.

6.7. KEYBOARD DISPLAY UNIT / U3

Unit 3 of the synthesizer PM 5193 contains LEDs keys and display elements with their concerning driver/decoder circuits. Data transfer from the CPU to the keyboard/display unit takes place via the C-bus (SDA, SCL, Strobe 1 – 5), input data from the keyboard is sent as a sequence of 12 pulses from the keyboard encoder 353 via the line SKC to the CPU. The key 'LOCAL' is directly led to the IEEE/IEC interface on unit 2 via line GTL.

Display data are sent in 34 bit data blocks via the C-bus to the according part of the display unit, selection (= addressing) of this part is done with one of the strobe signals STROBE 1 – STROBE 5. During the data transfer from the CPU to the keyboard/display unit the according strobe line is set and a 34-bit data block is loaded into the shift register with the clock signal SCL. The last bit at the data input shifts the complete data set into the latch register and therewith to the display elements/LEDs via the buffer stage.

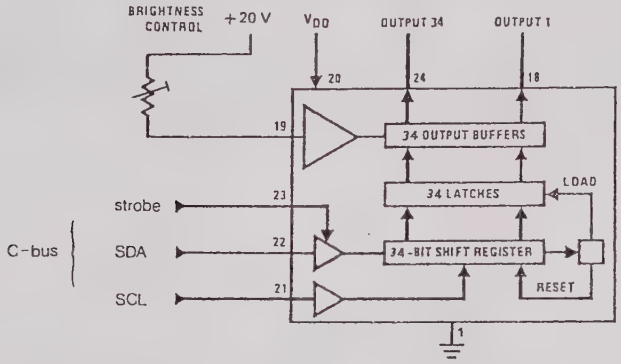

Each of the five strobe lines controls the data transfer to one of the display groups:

STROBE 1 display circuit 408 for amplitude, Vdc, address and the LEDs in the keys 'Vrms' and 'ADDRESS'

STROBE 2 display circuit 407 for modulation parameters and the LEDs in the keys 'FREQ (kHz)' and 'TIME (s)'

STROBE 3 display circuit 406 for frequency display (right part) and the LEDs in the keys 'START' and 'STOP'

STROBE 4 display circuit 405 for frequency displays (left part)

STROBE 5 LED driver circuit 352

Voltage supply for the LEDs and displays comes from the + 5 V which is reduced to + 3 V (V_L) by means of the transistor 301 and the resistors 602 and 603

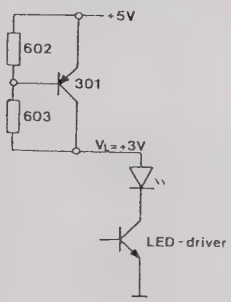

the transistor 301 is placed behind the front plate at a spacing piece beside the socket TTL OUT.

Brightness of the LEDs/displays is adjusted with a reference voltage at the inputs BC (= brightness control) of the driver circuits. These reference voltages are derived from the + 20 V supply by means of the resistors 604 – 608 feeding currents into the BC-inputs.

Input from the keyboard takes place with the help of the keyboard encoder IC 353 = SAA 3007) which controls the 8 x 8 keyboard matrix and sends the keycode in serial form from the output REMO via line SKC to the CPU. During the rest condition the sense lines SENØ – SEN6 are 'high', the drive lines of the matrix DRVØ – DRV6 are 'low', the last drive line is fixed to ground.

The clock for the keyboard encoder is generated with the ceramic resonator 860. During the rest condition – i. e. no key is pressed – there is no signal at input 11 or 12 of the keyboard encoder. When any key – except LOCAL – is pressed, the clock supply will be activated and a signal with a frequency of 455 kHz and an amplitude of 4,5 Vpp can be measured at pin 11 or 12. By pressing a key only once for a short moment the clock will be switched on for approx. 170 ms., pressing a key for longer will keep the clock supply switched on as long as the key is pressed.

The line ENK (enable keyboard) at pin 4 of the CIS-connector has a special meaning for the keyboard input. During a running sweep it is not possible to press any key except MOD OFF, SINGLE, CONT or HOLD. These keys contain one more switch contact which is commonly connected to line ENK, only this line is supervised by the processor during a running sweep.

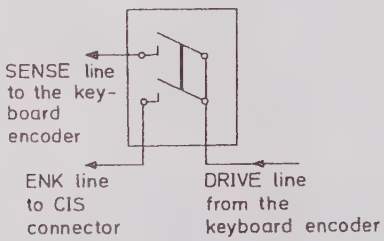

When operating one of these keys the line ENK and the according sense line are forced to 'Low' which effects the keyboard encoder to scan the matrix and to send the key code via the line SKC to the CPU. Only when the processor has recognized via ENK that one of the four keys was pressed, the normal keyboard input via line SKC is started.

When a key is pressed the according sense line is forced to 'low', the internal logic of the encoder starts the scan of the matrix and transmits a sequence of 12 pulses whereby the distance between two pulses means binary "Ø" or "1".

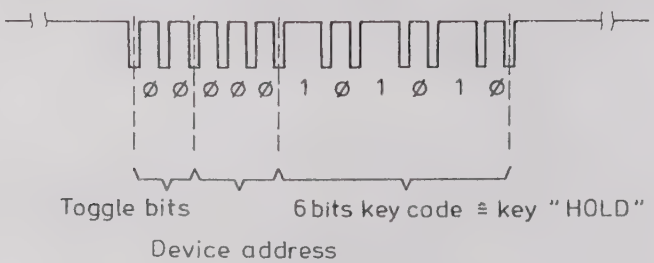

Each time a key is pressed such a bit sequence must be measurable at line SKC (= pin 10 of the CIS connector). The toggle bits of this message are incremented by 1 each time when a key is pressed. Thus it is possible to distinguish between a key being pressed several times or once for a longer time.

The device address is fixed to "ØØØ" and the last 6 bits show the following pattern by pressing the corresponding key

Key	Connection between	Key code
↓	DRVØ – SENØ	ØØØØØØ
↑	DRVØ – SEN1	ØØ1ØØØ
→	DRVØ – SEN2	Ø1ØØØØ
↓	DRV1 – SENØ	ØØØØØ1
↑	DRV1 – SEN1	ØØ1ØØ1
→	DRV1 – SEN2	Ø1ØØØ1
↓	DRV2 – SENØ	ØØØØ1Ø
↑	DRV2 – SEN1	ØØ1Ø1Ø
AC OFF	DRV2 – SEN2	Ø1ØØ1Ø
START	DRV3 – SENØ	ØØØØ11
Hz/kHz	DRV3 – SEN1	ØØ1Ø11
–STEP	DRV3 – SEN2	Ø1ØØ11
STOP	DRV4 – SENØ	ØØØ1ØØ
ΔFREQ	DRV4 – SEN1	ØØ11ØØ
+STEP	DRV4 – SEN2	Ø1Ø1ØØ
OFF	DRV5 – SENØ	ØØØ1Ø1
INT	DRV5 – SEN1	ØØ11Ø1
EXT	DRV5 – SEN2	Ø1Ø1Ø1
GATE	DRV6 – SENØ	ØØØ11Ø
AM	DRV6 – SEN1	ØØ1110
FM	DRV6 – SEN2	Ø1Ø110
FREQ(kHz)	⊥ – SENØ	ØØØ111
%	⊥ – SEN1	ØØ1111
DEV(kHz)	⊥ – SEN2	Ø1Ø111
BURST	DRVØ – SEN3	Ø11ØØØ
ON cycl.	DRVØ – SEN4	1ØØØØØ
OFF cycl.	DRVØ – SEN5	1Ø1ØØØ

Key	Connection between	Key code
LIN	DRV1 – SEN3	Ø11ØØ1
LOG	DRV1 – SEN4	1ØØØØ1
TIME(s)	DRV1 – SEN5	1Ø1ØØ1
SINGLE	DRV2 – SEN3	Ø11Ø1Ø
CONT	DRV2 – SEN4	1ØØØ1Ø
HOLD	DRV2 – SEN5	1Ø1Ø1Ø
Vdc	DRV3 – SEN3	Ø11Ø11
Vpp	DRV3 – SEN4	1ØØØ11
ΔLEVEL	DRV3 – SEN5	1Ø1Ø11
+/–	DRV4 – SEN3	Ø111ØØ
dBm	DRV4 – SEN4	1ØØ1ØØ
–STEP	DRV4 – SEN5	1Ø11ØØ
ADDRESS	DRV5 – SEN3	Ø111Ø1
Vrms	DRV5 – SEN4	1ØØ1Ø1
+STEP	DRV5 – SEN5	1Ø11Ø1
STO1-9	⊥ – SEN7	111111
RCL0-9	DRV6 – SEN7	11111Ø
RUBOUT	DRV4 – SEN7	111ØØØ
Ø	DRVØ – SEN6	11ØØØØ
1	DRV1 – SEN6	11ØØØ1
2	DRV2 – SEN6	11ØØ1Ø
3	DRV3 – SEN6	11ØØ11
4	DRV4 – SEN6	11Ø1ØØ
5	DRV5 – SEN6	11Ø1Ø1
6	DRV6 – SEN6	11Ø11Ø
7	⊥ – SEN6	11Ø111
8	DRVØ – SEN7	111ØØØ
9	DRV1 – SEN7	111ØØ1
"●"	DRV2 – SEN7	111Ø1Ø
ENTER	DRV3 – SEN7	111Ø11

6.8 VIDEO AMPLIFIER/U4

The PM 5193 V contains an additional video output amplifier, unit 4.

The function of the connector 'PEN LIFT', mentioned in the description of the block diagram, chapter 3.2 'CPU', is cancelled. An external modulation signal can be fed via this connector with its new indication. 'VIDEO IN' to the video input amplifier where it is amplified to the required level. This signal is routed via the SWITCHING CIRCUITRY of the MODULATOR U1 to the AMPLITUDE MODULATOR to be modulated on the carrier.

Switch-over to the external modulation signal takes place via relais, mounted on unit 4, switched by the SWITCHING CIRCUITRY controlled by the CPU.

6.9 10 MHz SYNCRONISER

For PM 5193S this unit subtitutes the 8.58 ... MHz reference frequency generation for the DFS on unit 2.

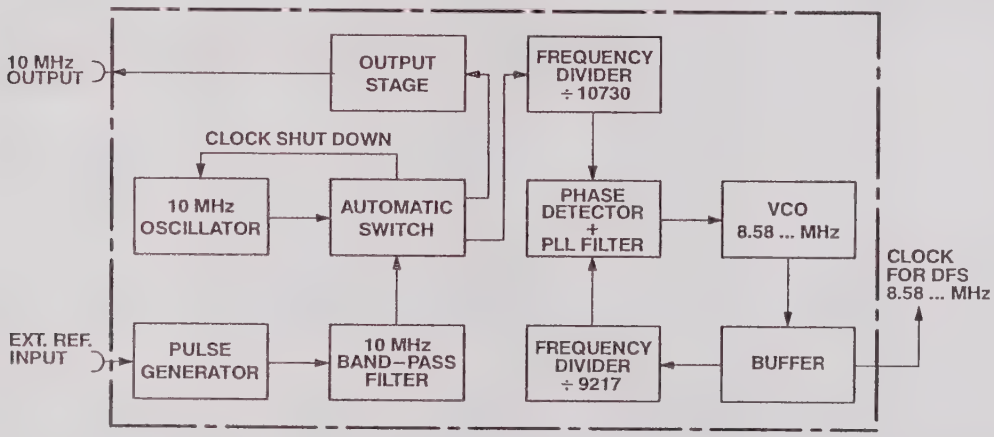

The Voltage Controlled Oscillator (VCO) generates a clock frequency of 8.58 ... MHz (2^{33} mHz) for the subsequent Digital Frequency Synthesizer, routed via amplifier/buffer V364 ... 366. This frequency is divided by 10730 (D322) and routed to an integrated phase detector D323/3. The detector compares the signal with a reference frequency of 10 MHz divided by 9217 (D319, 320, 321), fed to pin 14. The PLL filter N325 performs the DC control voltage for the VCO, applied to varicap V415. The operating point of the diode is adjusted by R663, see Adjusting Procedure, chapter 8.3, step 4 a.

The 10 MHz reference frequency is generated by an internal oscillator circuit, Z800, C524, 526, 528, R625, D317/1,2, R 637 routed via automatic switch (gates D318) to the divider D319 and to the output stage V358, 360 if no external reference signal is applied.

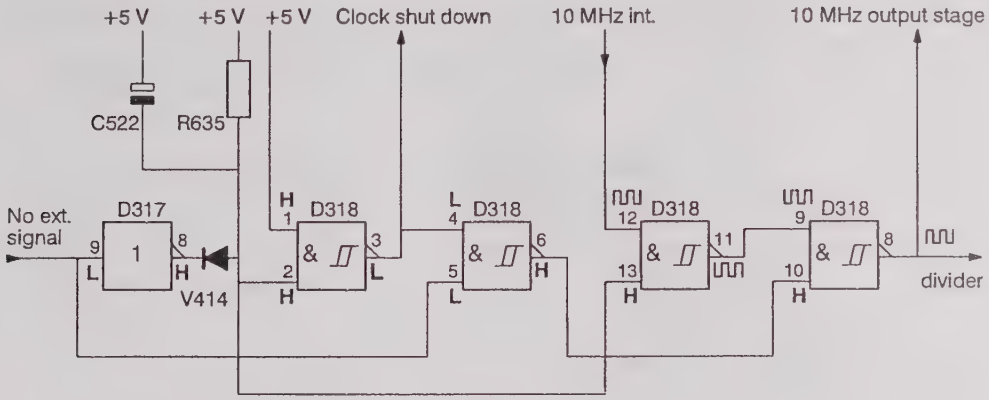

The automatic switch routes the internal 10 MHz reference frequency if no external reference is supplied.

When an external reference signal (10 MHz/N, N = 1,2,...,10) is fed to the BNC EXT. REF. INPUT, D315 with the timing element R615, C510 generates pulses with appr. 50 ns duration. A 10 MHz Band–Pass Filter (BPF), C515, 516, 517, 523, 511 and L813, passes the 10 MHz components to a negative impedance converter V355 ... 357 which performs a 10 MHz signal via D317. The signal is adjusted with R624 and C517.

If an external reference is supplied to the generator a 10 MHz TTL signal at D317/8 sets D318/2 to 'low' by V414, because the time constant of C522 and R635 is longer than the period of the 10 MHz frequency. By this D318/3 becomes 'high' and stops the internal 10 MHz oscillator (clock shut down) via V412, 427. At the same time the external signal is routed via D318/5,6 and D318/10,8 to the divider and to the 10 MHz output stage.

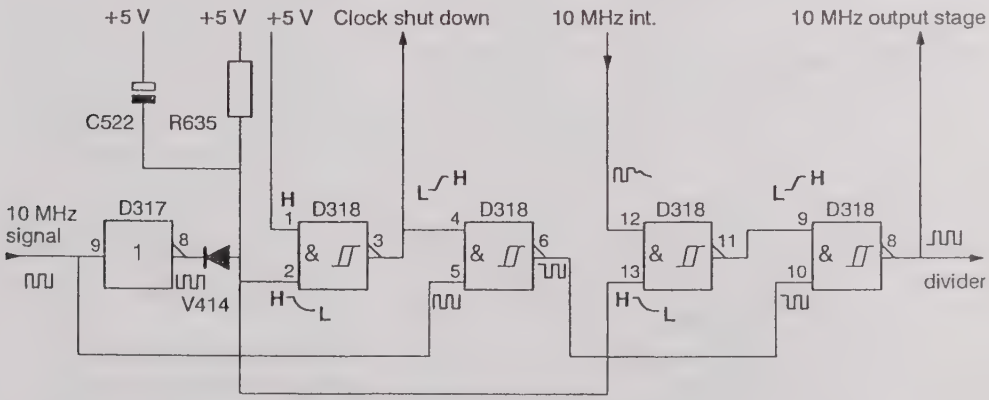

The automatic switch routes 10 MHz from an external reference signal and stops the internal oscillator.

7. ACCESS TO PARTS

7.1. TOP AND BOTTOM COVERS (DISMANTLING THE INSTRUMENT)

Before opening the instrument unplug mains connector, take note of chapter 1.5..

- Loosen the cross-slotted screws Ⓐ (Fig. 7-1) at the rear
- Pull top cover Ⓑ as shown in figure 7-1.
- The procedure to remove the bottom cover Ⓒ is the same as above.

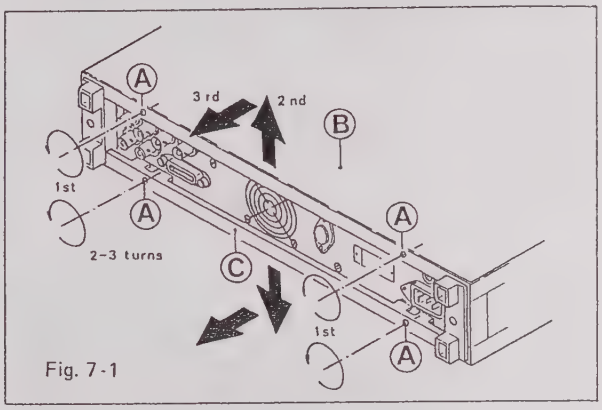

Fig. 7-1

7.2. FUSE, MAINS TRANSFORMER

For mains voltage setting and fuses and the assigned safety instructions see chapter 2.

7.3. UNIT 1 AND UNIT 2

For access to the upper side of unit 2 and the bottom side of unit 1 it is only necessary to remove the top cover respectively the bottom cover of the instrument (see chapter 7.1.).

To reach the upper side of unit 1 and the bottom side of unit 2 proceed as follows:

- Unplug the connector Ⓖ (Fig. 7-5) on the right hand side of unit 2.
- Remove 2 screws Ⓐ (Fig. 7-5) at the sides of the instrument.
- Lift the pcb as arrow Ⓒ shows in Fig. 7-5. (If it is heavy to move the pcb, loosen the screws at the pivot a little bit.).
- Fixing unit 2 in an upright position insert screw Ⓐ in position Ⓗ (Fig. 7-5).
- The other steps shown in fig. 7-5 are not necessary to reach unit 1 + 2.

7.4. FRONT-PANEL EDGING

- Remove covers (chapt. 7.1.).
- Lift the profile ornament Ⓐ (Fig. 7-2) with a small screw driver.
- Remove the screws Ⓑ (Fig. 7-2).
- Remove the edging Ⓒ (Fig. 7-2).
- For the bottom side the same procedure applies.

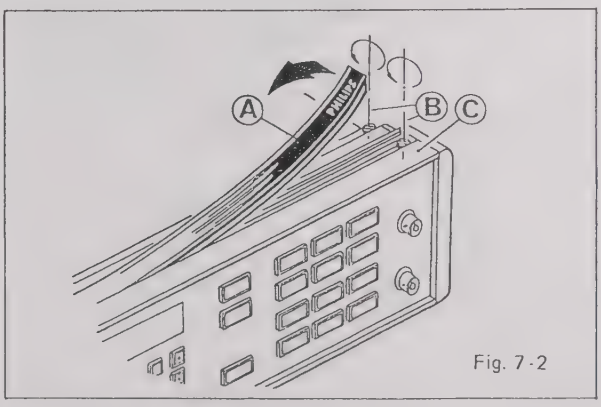

Fig. 7-2

- Remove screws Ⓑ (Fig. 7-3)
- Remove side pieces Ⓐ (Fig. 7-3)

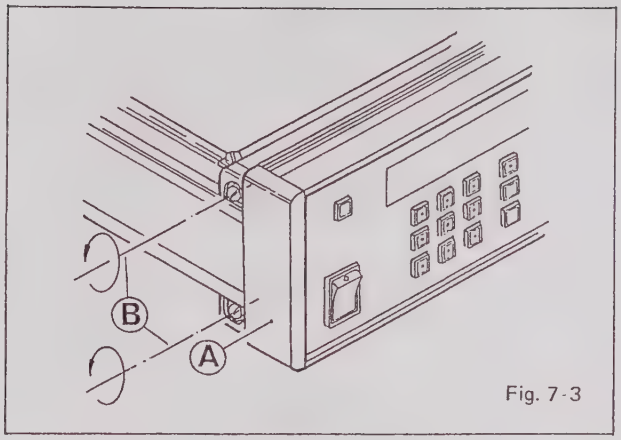

Fig. 7-3

7.5. TEXT PLATE

The text plate Ⓐ (Fig. 7-4) is fixed by three parts of doublesided adhesive tape Ⓑ (Fig. 7-4)

- To remove the text plate insert carefully a screwdriver near the tapes and move the screwdriver as shown in Fig. 7-4.
- Steps described in chapters 7.1 and 7.4. are necessary before.

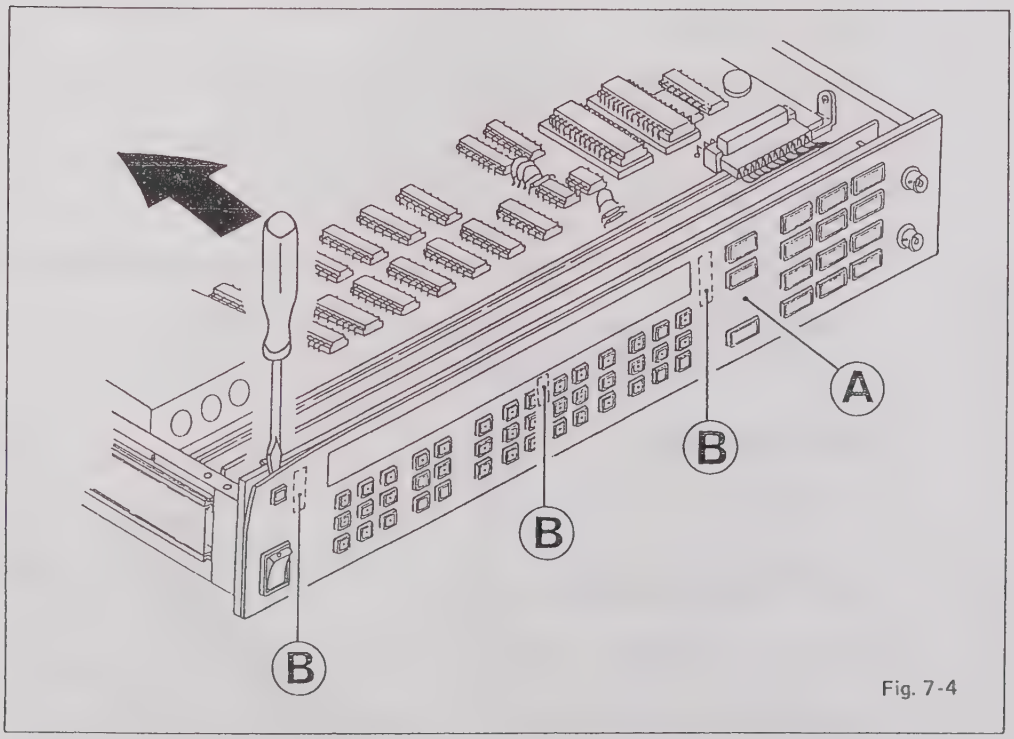

Fig. 7-4

7.6. UNIT 3 (KEYBOARD AND DISPLAY)

At first steps described in chapters 7.1., 7.4. and 7.5. must be done

- Unplug connector Ⓖ (Fig. 7-5)
- Loosen all screws Ⓕ (Fig. 7-5) at the front of the instrument
- Pull carefully frontplate Ⓔ (Fig. 7-5) forwards, take care of the wires of the BNC-connectors and the main switch
- Remove unit 3 Ⓓ (Fig. 7-5)
- The other steps shown in this figure are not necessary to reach unit 3.

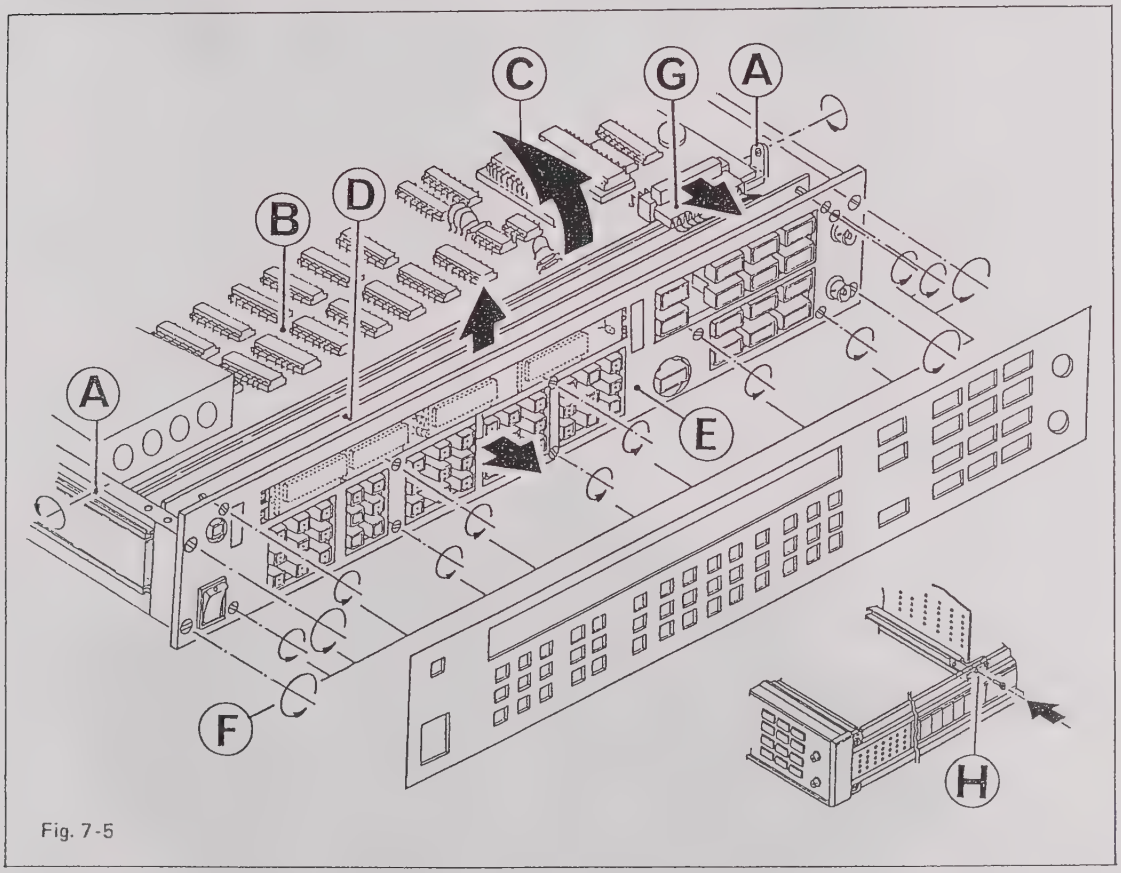

Fig. 7-5

7.7. CARRYING HANDLE

- Lift the carrying handle.
- Prise off carefully both plastic profile strips next to the handle in the similar way as the profile ornament of the front-panel edging shown in Figure 7-2.
- Loosen cross-slotted screws of the holder for handle.

7.8. HANDLE ASSEMBLY FOR RACK MOUNTING

- Remove top and bottom covers as described in chapter 7.1
- Loosen screws Ⓑ (Fig. 7-6).
- Remove side piece Ⓒ .
- Fit handle Ⓐ , refit screws Ⓑ .
- For the right hand side the same procedure applies.
- Close the instrument

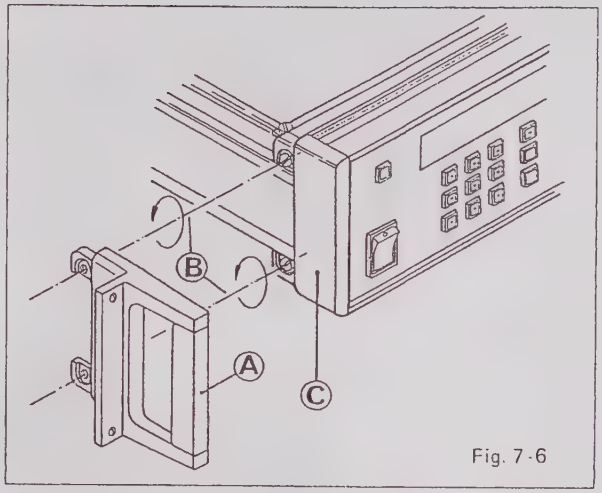

Fig. 7-6

7.9. VIEW INTO THE OPEN INSTRUMENT

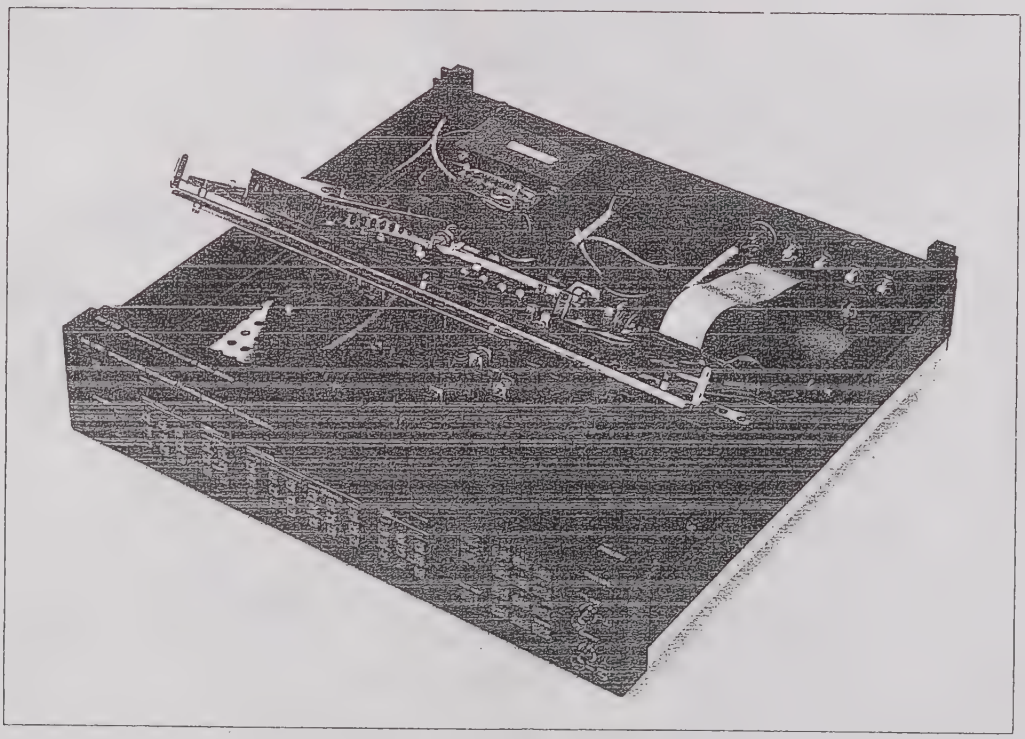

PM 5193 without top cover

8. CHECKING AND ADJUSTING

8.1. GENERAL INFORMATION

The following information provides the complete check and adjustment procedure for the instrument. As various control functions are interdependent, a certain order of adjustment is often necessary. The procedure is, therefore, presented in a sequence which is best suited to this order, cross-reference being made to any circuit which may affect a particular adjustment.

Before any check, the instrument must attain its normal operating temperature.

- Warm-up time under average conditions is 30 minutes.
- Adjustments should be made after 2 hours
- Ambient temperature (23 ± 1)° C
- Mains voltage, nominal values ± 10 %
- The cabinet must be closed.*
- Where possible, instrument performance should be checked before an adjustment is made.
- All limits and tolerances given in this chapter are calibration guides, and should not be interpreted as instrument specifications unless they are also published in chapter 1.2. of the Operating Manual.
- Tolerances are given for the instrument under test and do not include test equipment error.
- If not explicitely stated otherwise, the voltage potentials refer to the relevant contact measured against measuring earth.

8.2. RECOMMENDED TEST EQUIPMENT

The following instruments are necessary to provide check and adjustment of the PM 5193

- 50 Ω termination resistor PM 9581 (1 W)
- wide band oscilloscope (tr ⩽ 1 ns)
- DC-voltmeter: resolution ⩽ 100 μV e. g. PM 2528
- counter 50 MHz, intervall-measurements, 8 digits resolution, e. g. PM 6665
- spectrum analyzer, e. g. Takeda Riken 4132
- rms voltmeter: resolution 1 μV, e. g. Fluke 8920 A; the connection cable together with the termination resistor must have an impedance of exactly 50 Ω
- distortion meter e. g. PM 6309
- power meter, e. g. HP436A with probes HP8482A and HP8484A
- modulation meter, e. g. Rhode + Schwarz FAM

- service kit
  consisting of notch filter 100 kHz, low pass filter 5 kHz, adjustment covers and two adapter cables; to be ordered from SC Hamburg, code number 5312 310 18022.

* For adjustments special covers with holes for the adjusting elements are required. This parts are included in the service kit.

8.3. TABLE OF CHECKS AND ADJUSTMENTS

step	objective	c = check a = adjustment	operation parameters, settings	adjusting elements	measured value, value to be adjusted	test point, output, measuring instruments	open output/ 50Ωterm.	comment
	POWER SUPPLY ADJUSTMENT							
1	+ 5 V supply	c	∿ /1 kHz/10 Vpp	–	5 ± 0.25 V	T1/6, DC-voltmeter (DVM)	–	
2	± 10 V supply	c a	∿ /1 kHz/10 Vpp	612/615, power supply	± 10 ± 0.1 V	T1/1, 2, DC-voltmeter (DVM)	–	
3	± 20 V supply	c a	∿ /1 kHz/10 Vpp	604/609, power supply	± 20 ± 0.2 V	T1/3, 4, DC-voltmeter (DVM)	–	
	DFS ADJUSTMENT Steps 4 a, b, c PM 5193 S only							
4	frequency adjustment	a	⎍ /1 MHz/5 Vpp	505, DFS unit 2, PM 5193 (524, unit 5, PM 5193 S)	1 MHz ± 0.3 Hz	OUTPUT connector, counter	50 Ohm	
4 a	regulator voltage	a	⎍ /1 MHz/5 Vpp	663, unit 5	0 ± 0.1 V	T52 unit 5, DC-voltmeter (DVM)	–	
4 b	10 MHz-signal amplitude	a	∿ /100 kHz/10 Vpp	517, unit 5	maximum	T51 unit 5, oscilloscope (50 Ω)	–	connect external signal to EXT. REF INPUT: sine, 1 MHz ± 10 Hz, 0 dBm at 50 Ω
4 c	10 MHz-signal amplitude	a	∿ /100 kHz/10 Vpp	624, unit 5	60 mVpp ± 2 mV	T51 unit 5, oscilloscope (50 Ω)	–	
5	DFS-glitches	a	∿ /100 kHz/10 Vpp	676/689/DFS unit 2	minimum AC level	OUTPUT connector, notch filter	50 Ohm	the generator frequency must be exactly the same as the frequency of the notch filter
	DC-ADJUSTMENT							
6	DFS DC-offset	a	∿ /1 kHz/10 Vpp	693, DFS unit 2	0 ± 1 mV	T20 unit 1, DC-voltmeter	–	
7	DC-generator voltage	a	∿ /1 kHz/0 Vpp/+10 VDC/AC OFF	771, amplifier unit 1	+ 9.9 V ± 5 mV	OUTPUT connector, DC-voltmeter	open	
8	DC-generator voltage	a	∿ /1 kHz/0 Vpp/0 VDC/AC OFF	769, amplifier unit 1	0 ± 5 mV	OUTPUT connector, DC-voltmeter	open	
9	offset, amplifier preliminary stage	a	∿ /1 kHz/10 Vpp/Burst not triggered	809, amplifier unit 1	0 ± 1 mV	T14 amplifier, DC-voltmeter	–	
10	offset difference	a	∿ /1 kHz/3.2 Vpp/Burst not triggered	874, amplifier unit 1	< 2 mVpp	T17 amplifier, oscilloscope	–	these two AC-amplitudes must be switched alternatively and very fast (e. g. with an IEC-bus controller) in order to get a visible signal
11	offset difference		∿ /1 kHz/6.4 Vpp/Burst not triggered	874, amplifier unit 1				

step	objective	c = check a = adjustment	operation parameters, settings	adjusting elements	measured value, value to be adjusted	test point, output, measuring instruments	open output/ 50Ω term.	comment
12	output offset	a	∿ /1 kHz/5 Vpp/Burst not triggered	666, amplifier unit 1	0 ± 10 mV	OUTPUT connector, DC-voltmeter	open	
13	output offset	c	∿ /1 kHz/Burst not triggered step output level from 3 Vpp – 20 Vpp, step width 1 Vpp	–	0 ± 40 mV	OUTPUT connector, DC-voltmeter	open	If the offset value is outside the limit of ± 40 mV, steps 10 and 11 must be repeated
14	output offset difference	a	∿ /1 kHz/Burst (not triggered) MOD OFF /5 Vpp*	627, modulator unit 1	< 10 mV	OUTPUT connector, DC-voltmeter	open	
	LF-AMPLITUDE, DISTORTION							
15	LF-amplitude	a	∿ /10 kHz/10 Vpp	613, modulator unit 1	1.767 ± 0.001 Vrms	OUTPUT connector, rms-voltmeter	50 Ohm	
16	LF-amplitude	c	∿ /10 kHz/1 Vpp	–	177 ± 3.5 mVrms	OUTPUT connector, rms-voltmeter	50 Ohm	
17	LF-amplitude	c	∿ /10 kHz/0.1 Vpp	–	17.7 ± 0.5 mVrms	OUTPUT connector, rms-voltmeter	50 Ohm	
18	amplitudes difference	a	∿ /100 Hz / 10 kHz / 10 Vpp	700, amplifier unit 1	Δ U < 0.02 dB	OUTPUT connector, rms-voltmeter	50 Ohm	
19	distortion	c	∿ /1 kHz/17 Vpp, 20 Vpp	–	< 0.35 %, < 0.45 %	OUTPUT connector, distort.-meter	50 Ohm	
20	DFS-frequency response	c	∿ / 10 kHz / 1.8 MHz / 10 Vpp	–	± 0.3 dB	OUTPUT connector, rms-voltmeter	50 Ohm	if necessary 517 and/or 519 (modulator) may be altered
21	DFS-frequency response	c	∿ / 10 kHz / 2.147 MHz / 10 Vpp	–	± 0.3 dB	OUTPUT connector, rms-voltmeter	50 Ohm	
	SAWTOOTH ADJUSTMENT							
22	offset	a	⩘ /1 kHz/1:1 Burst cont./10 Vpp	607, modulator unit 1		OUTPUT connector, oscilloscope	50 Ohm	the transition regions must be free of voltage jumps
23	offset	a	⩗ /1 kHz/1:1 Burst cont./10 Vpp	602, modulator unit 1		OUTPUT connector, oscilloscope	50 Ohm	
24	rms-value	c	⩘ ⩗ /1 kHz/10 Vpp	–	1.443 ± 0.025 Vrms	OUTPUT connector, rms-voltmeter	50 Ohm	
	PLL-ADJUSTMENT							
25	ampl. triangular wave at sine-shaper	a	∿ /3 MHz/10 Vpp	636, PLL unit 1	12.3 ± 0.1 mVrms	T10, rms voltmeter	–	T10 must be terminated with 50 Ohm!
26	offset	c	∿ /3 MHz/10 Vpp	–	– 550 ± 150 mV	T10, DC-voltmeter	–	
27	2nd harmonic	a	∿ /45 MHz/10 Vpp	611, PLL unit 1	minimum, < – 31 dB	T10, spectrum analyser	–	
28	2nd harmonic	a	∿ /2.5 MHz/10 Vpp	614, PLL unit 1	minimum, < – 36 dB	T10, spectrum analyser	–	

* settings, shown in this way: Burst / MOD OFF, must be switched alternately

step	objective	c = check a = adjustment	operation parameters, settings	adjusting elements	measured value, value to be adjusted	test point, output, measuring instruments	open output/ 50Ω term.	comment
29	PLL control voltage	a	∿ /2.5 – 50 MHz/lin. sweep/mode 1/ Ts = 0.02 s/cont. 10 Vpp	536 (526), PLL unit 1	[A] ≈ [B] < 3 V	T22, oscilloscope	–	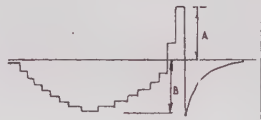 Set trimming capacitor 526 to minimum and use it only if there are problems to adjust the required value with only 536. The steps in the diagram above must be horizontal.
30	heater current for sine shaper	a	∿ /5 MHz/10 Vpp	684, PLL unit 1	700 ± 20 mV	T11 – T12, DC-voltmeter	–	DC-level between T11 and T12. each 1 K less than + 23° C results in a difference of + 14.7 mV to the nominal value
31	2nd and 3rd harmonics	a	∿ /5 MHz/10 Vpp	706, 709, PLL unit 1	minimum, < – 43 dB	OUTPUT connector, spectrum analyser	50 Ohm	
32	2nd and 3rd harmonics	c	∿ /10 MHz/20 Vpp	–	minimum, < – 34 dB	OUTPUT connector, spectrum analyser	50 Ohm	
33	2nd and 3rd harmonics	c	∿ /2.5 – 50 MHz/lin. sweep/ mode 1/Ts = 2 s./cont 20 Vpp	–	minimum, < – 30 dB	OUTPUT connector, spectrum analyser	50 Ohm	
34	output level difference	a	∿ /$^{10\ kHz}_{3\ MHz}$/10 Vpp	721, PLL unit 1	Δ U_{OUT} < 0.03 dB	OUTPUT connector, rms-voltmeter	50 Ohm	
35	DC-level difference	a	∿ /$^{3\ kHz}_{3\ MHz}$/5 Vpp	624, modulator unit 1	< 10 mV	OUTPUT connector, DC-voltmeter	–	
36	output level difference	a	∿ /$^{3\ MHz}_{50\ MHz}$/10 Vpp	503, modulator unit 1	+ 0.4 ± 0.1 dB	OUTPUT connector, power meter	50 Ohm	if the output level is too low, change capacitor 501 in the modulator to another one (27 pF); if the level is too high, increase resistor 714 PLL.
37	output level difference	c	∿ /$^{3\ MHz}_{30\ MHz}$/10 Vpp	–	+ 0.1 ± 0.3 dB	OUTPUT connector, power meter	50 Ohm	
38	DC level difference	a	∿ /5 MHz/10 Vpp	621, PLL unit 1	< 0.2 mV	T6, T7, DC-voltmeter	–	

step	objective	c = check a = adjustment	operation parameters, settings	adjusting elements	measured value, value to be adjusted	test point, output, measuring instruments	open output/ 50Ωterm.	comment
	SQUARE WAVE ADJUSTMENT							
39	square burst pre-shot	a	⎍ /1 kHz/BURST 1:1 cont/10 Vpp	603, pulse generator unit 1		OUTPUT connector, oscilloscope	50 Ohm	the first needle must be suppressed
40	positive half cycle	a	⎍ /1 kHz/10 Vpp	603, pulse generator unit 1	Tx + 2 µs.	OUTPUT connector, intervall counter	50 Ohm	Tx = half cycle resulting from step 39
41	positive half cycle: T	c a	⎍ /1 kHz/10 Vpp	—	500 µs ⩽ T ⩽ 510 µs	OUTPUT connector, intervall counter	50 Ohm	if < 500 µs adjust with 603 to 500 µs; if > 504 µs check step 6, DC adjustment
42	positive amplitude	a	⎍ /0.05 Hz/10 Vpp	627, pulse generator unit 1	+ 4.95 ± 0.02 V	OUTPUT connector, DC voltmeter	open	
43	negative amplitude	a	⎍ /0.05 Hz/10 Vpp	624, pulse generator unit 1	— 4.95 ± 0.02 V	OUTPUT connector, DC voltmeter	open	
44	rms-value	c	⎍ /10 kHz/10 Vpp	—	2.5 ± 0.02 Vrms	OUTPUT connector, rms-voltmeter	50 Ohm	if this value is not correct, repeat 41 and 42
45	signalform	a	⎍ /10 MHz/10 Vpp	505, modulator unit 1 513, output amplif.	adjust minimum rise-time without over-shoot	OUTPUT connector, wide band oscilloscope (tr ⩽ 1 ns.)	50 Ohm	if 513 must be adjusted, the steps 36 and 37 (PLL adjust-ment) are to be repeated
46	duty cycle	c a	⎍ /20 MHz/20 Vpp	614, pulse generator unit 1	(50 ± 5) %	OUTPUT connector, wide band oscilloscope (tr ⩽ 1 ns.)	50 Ohm	use potmeter 614 only in case of exceeded limits and adjust it until the limit is reached
47	rise-/falltime	c	⎍ /10 MHz/10 Vpp	—	< 10.5 ns.	OUTPUT connector, wide band oscilloscope (tr ⩽ 1 ns.)	50 Ohm	
48	aberration (overshoot etc.)	c	⎍ /1 kHz/10 Vpp	—	< 2 %	OUTPUT connector, wide band oscilloscope (tr ⩽ 1 ns.)	50 Ohm	aberrations related to the amplitude 0 — p
	PULSE ADJUST-MENT							
49	pulse suppression	a	⎍ /10 kHz/0 Vpp	659, 662/pulse generator unit 1	pulse amplitude < ± 5 mV	OUTPUT connector, oscilloscope	50 Ohm	square wave pulses stepping out of the quiescent potential ± 5 mV
50	DC-offset	a	⎍ /10 kHz/0 Vpp	684, pulse generator unit 1	0 ± 10 mV	OUTPUT connector, DC-voltmeter	open	
51	pulse-amplitude	a	⎍ /10 kHz/10 Vpp	654, pulse generator unit 1	2.5 ± 0.01 Vrms	OUTPUT connector, rms-voltmeter	50 Ohm	
52	pulse-form	a	⎍ /30 MHz/5 Vpp	537, 538/pulse generator unit 1	adjust minimum rise-time without over-shoot	OUTPUT connector, wide band oscilloscope (tr ⩽ 1 ns.))	50 Ohm	

step	objective	c = check a = adjustment	operation parameters, settings	adjusting elements	measured value, value to be adjusted	test point, output, measuring instruments	open output/ 50Ωterm.	comment
53	pulse form	c	⊓ /1 kHz/5 Vpp	–	check the pulse form	OUTPUT connector, oscilloscope	50 Ohm	
54	duty cycle	c a	⊓ /50 MHz/5 Vpp	664, pulse generator unit 1	(50 ± 5) %	OUTPUT connector, wide band oscilloscope (tr ⩽ 1 ns.)	50 Ohm	potmeter 664 is used to adjust rise and fall time and the duty cycle. When adjusting them, more care must be taken to reach the specification of the rise and fall time
55	rise/fall time, duty cycle	c a	⊓ /50 MHz/10 Vpp	664, pulse generator unit 1	< 4.5 nsec.	OUTPUT connector, wide band oscilloscope (tr ⩽ 1 ns.)	50 Ohm	
	AM- AND FM-ADJUSTMENTS							
56	modulation frequency	a	∿ /10 kHz/AM, INT/50 %/ fm = 0.9 kHz/20 Vpp	696, modulator unit 1	900 ± 1 Hz	MOD-OUT connector, counter	–	
57	modulation frequency	a	∿ /10 kHz/AM, INT/50 %/ fm = 0.05 kHz/20 Vpp	699, modulator unit 1	50 ± 0.1 Hz	MOD-OUT connector, counter	–	iterate this adjustment with step 56
58	modulation frequency	a	∿ /10 kHz/AM, INT/50 %/ fm = 50 kHz/20 Vpp	524, modulator unit 1	50 ± 0.03 kHz	MOD-OUT connector, counter	–	
59	distortion	a	∿ /10 kHz/AM, INT/50 %/ fm = 5 kHz/20 Vpp	700, 702, modulator unit	minimum distortion (< 0.5 %)	MOD-OUT connector, distortion meter	–	
60	DC-offset	a	∿ /10 kHz/AM, INT/50 %/ fm = 5 kHz/20 Vpp	709, modulator unit 1	+ 100 ± 50 mV	T21, DC-voltmeter	–	
61	unwanted freq. deviation rms	a	∿ /5 MHz/FM, EXT/MOD OFF/ 10 Vpp	620, PLL unit 1	minimum (< 500 Hz)	OUTPUT connector, modulation meter	50 Ohm	LF-band width 10 Hz – 20 kHz (for FAM use 20 dB attenuator)
62	0 - p frequency deviation (average)	a	∿ /5, 10, ..., 35 MHz/FM, INT/ Dev = 200 kHz/fm = 5 kHz/10 Vpp	707, modulator unit 1	200 ± 3 kHz	OUTPUT connector, modulation meter		± 3 kHz is the average failure over the whole range of 5 – 35 MHz, single failures can exceed this limit.
63	AC-amplitude rms	a	∿ /1 kHz/AM, INT/10 %/ fm = 5 kHz/20 Vpp	684, modulator unit 1	1.767 ± 0.01 Vrms	OUTPUT connector, rms-voltmeter	50 Ohm	
64	modulation depth, AM	a	∿ /1 MHz/AM, INT/50 %/ fm = 5 kHz/20 Vpp	686, modulator unit 1 (618, U4 for PM 5193 V)	(50 ± 0.2) %	OUTPUT connector, modulation meter	50 Ohm	LF bandwith 10 Hz – 20 kHz (for FAM use 20 dB attenuator)
65	LF-suppression	a	∿ /1 MHz/AM, INT/50 %/ fm = 5 kHz/20 Vpp	663, modulator unit 1	minimum level	OUTPUT connector, rms-voltmeter with low pass filter 5 kHz	50 Ohm	
66	DC-difference	a	∿ /5 kHz/ AM, INT / MOD OFF / 0 %/fm = 5 kHz/10 Vpp	681, modulator unit 1	< [10 mV]	OUTPUT connector, DC-voltmeter	open	
67	level difference	a	∿ /1 MHz, 40 MHz/AM, INT/ 0 %/fm = 5 kHz/20 Vpp	511, modulator unit 1	– 0.2 ± 1 dB	OUTPUT connector, power meter	50 Ohm	

step	objective	c = check a = adjustment	operation parameters, settings	adjusting elements	measured value, value to be adjusted	test point, output, measuring instruments	open output/ 50Ωterm.	comment
	steps 67 A + B: PM 5193 V only							
67 A	level difference between RF synchronising and residual level	a	∿ /40 MHz/AM, EXT/10 Vpp	604, U4	19 ± 0.2 dB	OUTPUT connector, spectrum analyser, setting: zero span		1 Vpp video signal (white level) at connector "VIDEO IN"
67 B	synchronising level	c	∿ /40 MHz/AM, EXT / MOD OFF /10 Vpp	–	0.5 dB	OUTPUT connector, spectrum analyser	–	level difference between settings AM, EXT and MOD OFF
	BURST ADJUSTMENT							
68	start-stop phase of burst	a	∿ /10 kHz/Burst/ Non = Noff = 1/cont./10 Vpp	701, DFS unit 2	minimum glitches	OUTPUT connector, oscilloscope	50 Ohm	 these glitches must be adjusted to minimum
69	start-stop phase of burst	c	∿ /2 MHz/Burst/ Non = Noff = 1/cont./10 Vpp	–	aberrations < 20 %	OUTPUT connector, oscilloscope	50 Ohm	 [B] / A < 0.2 [C] / A < 0.2
	MISCELLANEOUS							
70	frequency response	a	∿ /3 – 50 MHz/sweep line cont./ Ts = 5 sec/0.001 Vpp	805, amplifier unit 1	0 ± 5 dB	OUTPUT connector, spectrum analyser	50 Ohm	start adjustment at full left position of 805 (bottom view) and turn it until frequency response is within ± 5 dB
	steps 71, 72 not for PM 5193 S							
	steps 71a, 72 a + b PM 5193 S only							
71	clock frequency and level	c	∿ /1 kHz/10 Vpp	–	8.589935 MHz ± 3 Hz level > 3.5 Vpp	INT CLOCK connector, counter, oscilloscope with 1 : 10 atten.	–	e. g. PM 6654 with 1 : 10 attenuator
71 a	10 MHz-frequency and level	c	∿ /1 kHz/10 Vpp	–	10 MHz ± 3 Hz, level: > 1 dBm	10 MHz-output, counter, rms-voltmeter	–	
72	frequency	c	∿ /1 MHz/10 Vpp	–	1.164153 MHz ± 1 Hz	OUTPUT connector, counter	50 Ohm	external 10 MHz ± 10 Hz TTL-signal at CLOCK INPUT

step	objective	c = check a = adjustment	operation parameters, settings	adjusting elements	measured value, value to be adjusted	test point, output, measuring instruments	open output/ 50 Ω term.	comment
72a	frequency	c	∿ /10 MHz/10 Vpp	–	10.03 MHz ± 100 Hz	OUTPUT connector, counter	50 Ohm	connect external signal to EXT·REF INPUT: sine, 1.003 MHz ± 10 Hz, 0 dB at 50 Ω
72b	frequency	c	∿ /10 MHz/10 Vpp	–	9.97 MHz ± 100 Hz	OUTPUT connector, counter	–	sine, 0.997 MHz ± 10 Hz, 0 dB at 50 Ω
73	TTL frequency and level pp step 74 not for PM 5193 V	c	∿ /10 MHz/10 Vpp	–	10 MHz ± 3 Hz level > 3.5 Vpp	TTL out connector, counter, oscilloscope	–	
74	modulation depth	c	∿ /10 MHz/AM, EXT/20 Vpp	–	(50 ± 7) %	OUTPUT connector, modulation meter	50 Ohm	connect external signal to MOD INPUT: sine wave, 1 kHz, 0.5 Vrms (1.4 Vpp)
75	GATE function	c	∿ /1 MHz/GATE, INT/10 Vpp fm = 1 kHz	–	check of the gate function	OUTPUT connector, oscilloscope	50 Ohm	
76	MOD OUT amplitude	c	∿ /1 MHz/GATE, INT/10 Vpp fm = 1 kHz	–	sine wave 2.8 Vpp	MOD OUT connector, oscilloscope	–	
77	PEN LIFT amplitude	c	∿ /fstart = 1 kHz/ fstop = 10 kHz/TS = 10 ms/ lin. sweep cont/10 Vpp	–	square wave signal < 16 Vpp	PEN LIFT connector, oscilloscope	–	
78	SWEEP OUT amplitude	c	∿ /fstart = 1 kHz/ fstop = 10 kHz/TS = 100 ms/ lin sweep cont/10 Vpp	–	sawtooth signal 10 Vpp	SWEEP OUT connector, oscilloscope	–	
79	display brightness	a	see component lay-out UNIT 3, keyboard/display	604, 606, 607, 608, unit 3	< 10 mA per display segment	pin 11, CIS-connector on UNIT 2 (see component lay-out UNIT 3, keyboard/display)	–	only necessary after a replacement of a display

9. SAFETY INSPECTION AND TESTS AFTER REPAIR AND MAINTENANCE IN THE PRIMARY CIRCUIT

9.1. GENERAL DIRECTIVES

- Take care that creepage distances and clearances have not been reduced
- Before soldering, wires:
- should be bent through the holes of solder tags, or wrapped round the tag in the form of an open U, or, wiring ridigity shall be maintained by cable clamps or cable lacing.
- Replace all insulating guards and -plates.

9.2. SAFETY COMPONENTS

Components in the primary circuit may only be renewed by components selected by Philips, see also chapter 10.

9.3. CHECKING THE PROTECTIVE EARTH CONNECTION

The correct connection and condition is checked by visual control and by measuring the resistance between the protective-lead connection at the plug and the cabinet/frame. The resistance shall not be more than 0.5 Ω. During measurement the mains cable should be moved. Resistance variations indicate a defect.

9.4. CHECKING THE INSULATION RESISTANCE

Measure the insulation resistance at U = 500 Vdc between the mains connections and the protective lead connections. For this purpose set the mains switch to ON. The insulation resistance shall not be less than 2 MΩ.

Note:
2 MΩ is a minimum requirement at 40° C and 95 % relative humidity. Under normal conditions the insulation resistance should be much higher (10 to 20 MΩ).

9.5. TEST AFTER REPAIR AND MAINTENANCE

This chapter represents the final factory check of the instrument. It serves for quick verification of the overall performance of the instrument.
When having worked through the previous chapter 8., it is not necessary to perform this final test, but you may do so.
Bottom and top cover of the cabinet must be closed and the instrument must be warmed up for at least 2 hours. The sequence of the measurements is free selectable.

9.5.1. Frequency Measurements

Objective	Frequency setting	maximum tolerance	connector
basic frequency	1 MHz	± 0,8 Hz	OUTPUT
modulation frequency	50 Hz	± 1,25 Hz	MOD OUT
FREQ (kHz)	500 Hz	± 12,5 Hz	"
	5 kHz	± 125,0 Hz	"
	50 kHz	± 1,25 kHz	"
	200 kHz	+ 8/– 20 kHz	"

9.5.2. Checking of the square wave and pulse signals

Setting	Connector	Measuring Instrument
⎍ /10 MHz/10 Vpp	OUTPUT	wide band oscilloscope (tr ⩽ 1 ns.)
⎍ /30 MHz/10 Vpp	OUTPUT	

9.5.3. Modulation Measurements

mod. frequency = 1 kHz

Modulation	Carrier Frequency	Object	Measured limits
OFF	4.05 MHz	residual FM rms B_{lf} = 10 Hz – 20 kHz	< 0,02 % of carrier frequency
"	8,589 MHz		
"	19 MHz		
"	42,9487 MHz		
FM EXT	4,05 MHz		< 1000 Hz
"	8,589 MHz		
"	19 MHz		
"	42,9487 MHz		
FM INT	5 MHz	frequency deviation, setting = 200 kHz	200 ± 30 kHz
"	10 MHz		
"	20 MHz		
"	35 MHz		
"	50 MHz		200 + 30/– 110 kHz
AM INT	5 MHz	mod. depth, setting 10 %	9.7 % . . . 10.3 %
"	5 MHz	mod. depth, setting 50 %	48.5 % . . . 51.5 %
"	5 MHz	mod depth, setting 90 %	89.3 % . . . 92.7 %
FM EXT	5 MHz	freq. dev., Umod = 1 Vrms	200 ± 40 kHz

9.5.4. DC-measurements

modulation off, frequency = 1 kHz

Waveform	Setting: AC	Setting: DC	DC-output open circuit	Tolerance of DC-output open circuit
AC OFF	0	0		± 30 mV
"	0	– 10	– 10	(– 10.18 ... – 9.82 V)
"	0	– 5	– 5	± 1,5 % ± 30 mV (– 5.105 ... – 4.895 V)
"	0	5	5	(5.105 ... 4.895 V)
"	0	10	10	(10.18 ... 9.82 V)
∿	3,4, . . . , 20 Vpp	0	0	± 100 mV
⎍	5, 10, 15, 20 Vpp	0	0	± 150 mV max; average: 0 ± 50 mV
⎍	1 Vpp	0	0,5 V	(0.555 ... 0.445 V)
"	3 Vpp	0	1,5 V	(1.605 ... 1.395 V)
"	5 Vpp	0	2,5 V	± 5 % ± 30 mV (2.655 ... 2.345 V)
"	7 Vpp	0	3,5 V	(3.705 ... 3.295 V)
"	10 Vpp	0	5 V	(5.280 ... 4.720 V)
∿1 KHz/3 MHz	10 Vpp	0		ΔU_{dc} < 25 mV
AM, frequency = 1 kHz, mod frequency 0, mod. depth 0				
∿	10 Vpp	0	0	± 150 mV

9.5.5. AC-Measurements

Waveform	Frequency	Modulation	Setting Vpp	≙ Vrms, with 50 Ω term.	Tolerance	≙ min / max
∿	1 kHz	OFF	3.1	0.548 V		0.540/ 0.556 V
"	"	"	3.2	0.566 V		0.558/ 0.574 V
"	"	"	6.3	1.114 V		1.097/ 1.131 V
"	"	"	6.4	1.131 V	± 1.5 %	1.114/ 1.148 V
"	"	"	12.7	2.245 V		2.211/ 2.279 V
"	"	"	12.8	2.263 V		2.229/ 2.297 V
"	"	"	20.0	3.536 V		3.483/ 3.589 V
"	"	"	0.30	53.03 mV	± 2.0 %	51.97 /54.09 mV
"	"	"	1.00	0.177 V	± 2.0 %	0.173/ 0.180 V
"	"	"	2.00	0.354 V	± 2.0 %	0.346/ 0.361 V
"	"	"	0.003	0.53 mV	± 12.5 %	0.46 / 0.60 mV
"	"	"	0.010	1.77 mV	± 5.5 %	1.67 / 1.87 mV
"	"	"	0.020	3.54 mV	± 4.0 %	3.40 / 3.68 mV
"	"	"	0.050	8.84 mV	± 3.1 %	8.57 / 9.11 mV
"	"	"	0.100	17.68 mV	± 2.8 %	17.18 /18.17 mV
"	"	"	0.200	35.36 mV	± 2.65 %	34.42 /36.29 mV
⎍	"	"	10.0	1.768 V	± 2.5 %	1.724/ 1.812 V
⎍	"	"	10.0	2.500 V	± 2.0 %	2.450/ 2.550 V
"	"	"	5.0	1.250 V	± 2.5 %	1.219/ 1.281 V
"	"	"	1.0	0.250 V	± 3.5 %	0.241/ 0.259 V
⎍	"	"	10.0	1.443 V	± 1.5 %	1.421/ 1.465 V
⎍	"	"	10.0	2.500 V	± 2.0 %	2.450/ 2.550 V
⎍	"	"	10.0	2.500 V	± 2.0 %	2.450/ 2.550 V
⎍	"	"	10.0	1.443 V	± 2.5 %	1.407/ 1.479 V
⎍	"	"	10.0	1.443 V	± 2.5 %	1.407/ 1.479 V
∿	"	Burst not trigg.	20.0	0	± 2.5 mVrms	– 2.5 mV / + 2.5 mV
"	"	AM INT 0 %	20.0	1.768 V	± 2.0 %	1.733/ 1.803 V
"	10 kHz	"	20.0	1.768 V	± 2.0 %	1.733/ 1.803 V
"	200 kHz	OFF	10.0	1.768 V	± 1.5 %	1.741/ 1.795 V
"	2.146 MHz	"	10.0	1.768 V	+ 0 / – 3 %	1.715/ 1.768 V
"	20 MHz	"	10.0	1.768 V	± 8.0 %	1.627/ 1.909 V
"	40 MHz	"	10.0	1.768 V	± 8.0 %	1.627/ 1.909 V
"	50 MHz	"	10.0	1.768 V	± 8.0 %	1.627/ 1.909 V
"	50 MHz	"	20.0	3.536 V	+ 6 / – 12 %	3.111/ 3.748 V
"	2.146 MHz	"	1.00	0.177 V	± 3.5 %	0.171/ 0.183 V
"	20 MHz	"	1.00	0.177 V	± 11.5 %	0.157/ 0.197 V
"	50 MHz	"	1.00	0.177 V	± 11.5 %	0.157/ 0.197 V
"	2.146 MHz	AM INT 0 %	20.0	1.768 V	± 5.0 %	1.680/ 1.856 V
"	20 MHz	" 0 %	20.0	1.768 V	± 8.0 %	1.627/ 1.909 V
"	50 MHz	" 0 %	20.0	1.768 V	+ 7 / – 30 %	1.238/ 1.892 V
"	2.146 MHz	OFF	0.100	17.68 mV	± 5.0 %	16.79 /18.56 mV
"	20 MHz	"	0.100	17.68 mV	± 30.0 %	12.37 /22.98 mV
"	50 MHz	"	0.100	17.68 mV	± 30.0 %	12.37 /22.98 mV
"	2.146 MHz	"	0.010	1.77 mV	± 10.0 %	1.59 / 1.94 mV
"	20 MHz	"	0.010	1.77 mV	± 35.0 %	1.15 / 2.39 mV
"	50 MHz	"	0.010	1.77 mV	± 35.0 %	1.15 / 2.39 mV

CHANGE NOTICE

SYNTHESIZER / FUNCTION GENERATOR
PM 5191, PM 5192, PM 5193

Subject:
Because of design changes from brown to light grey colour in July 1991 some parts were changed.

Parts for the brown instruments are still kept on stock at Consumer Service Eindhoven till 1997. The following table shows the service code numbers for the new parts.

10.5.1. **Mechanical parts**

Cabinet

Item	Quantity	Order nuber	Description
A	1	5322 447 91908	Top cover
B	1	5322 447 91909	Bottom cover
C	4	5322 462 41554	Plastic foot
G	1	5322 447 91912	Rear panel
H	2	5322 462 41555	Rear bumper
J	1	5322 466 70727	Window for display with text
	1	5322 255 41243	Frame for displays, green (PM 5192/93)
	1	5322 255 41229	Frame for display, green (PM 5191)
K	1	5322 456 90424	Text plate PM 5193
	1	5322 456 90425	Text plate PM 5192
	1	5322 456 90423	Text plate PM 5191
L	1	5322 447 91913	Front plate edging (upper)
M	1	5322 460 60567	Front plate edging (lower)
N	1	5322 456 90422	Profile ornament (lower)
O	1	5322 456 90422	Profile ornament (upper) ★
P	2	5322 447 91914	Side piece
Q	1	5322 460 60569	Profile ornament long, perf. (left)
R	1	5322 460 60571	Profile ornament short (right)
R	1	5322 460 60568	Profile ornament short, perf. (right)
S	1	5322 498 50324	Rubber handle

★ The upper profile ornament is now without text, so upper and lower profile ornaments are identical and have the same code number.

10.5.2. Miscellaneous, parts not on units

Item	Fig.	Quantity	Order nuber	Description
	31	12	5322 414 30187	Knob, large, light grey
	31	2	5322 414 30189	Knob, large, dark grey
	31	1	5322 414 30186	Knob, large, orange
	31	7	5322 414 30185	Knob, small, grey
	31	9	5322 414 30191	Knob, small with LED, grey
	31	27	5322 414 30188	Knob, small with LED, dark grey

10.5.3. Electrical Parts

UNIT 3, KEYBOARD DISPLAY

Pos. no.	Description	Ordering code
401 – 404	LED, green	5322 130 82614
405 – 408	Display, green	5322 130 91001
802 – 818	Key switch with LED, yellow	5322 276 13115
802 – 818	Key switch with LED, yellow	5322 276 13115
821 – 828	Key switch with LED, yellow	5322 276 13115
830 – 833	Key switch with LED, yellow	5322 276 13115
835 – 840	Key switch with LED, yellow	5322 276 13115
842	Key switch with LED, yellow	5322 276 13115

10. SPARE PARTS

10.1. GENERAL

The synthesizer/function generator PM 5193 is repaired on single component level. No complete boards and modules are available at Concern Service Eindhoven.
Loaded PROMs must be ordered directly via Philips Supply Center Hamburg (please note software version).
In case of difficult faults central repair facility of the complete instrument is possible on special request via repair procedure at Supply Center Hamburg.
Conversion of an existing instrument to a different version is not foreseen.

Standard Parts
Electrical and mechanical parts replacement can be obtained through your local Philips organisation or representative. However, many of the standard electronic components can be obtained from other local suppliers. Before purchasing or ordering replacement parts, check the parts list for value, tolerance, rating and description.

NOTE: Physical size and shape of a component may affect instrument performance, particularly at high frequencies. Always use direct-replacement components, unless it is known that a substitute will not degrade instrument performance.

Special Parts
In addition to the standard electronic components, some special components are used:
- Components, manufactured or selected by Philips to meet specific performance requirements.
- Components which are important for the safety of the instrument marked with 'S' in the parts list.

ATTENTION: Both type of components may only be replaced by components obtained through your local Philips organisation.

10.2. STATIC SENSITIVE COMPONENTS

This instrument contains electrical components that are suspectible to damage from static discharge. Servicing static-sensitive assemblies or components should be performed only at a static-free work station by qualified service personnel.

10.3. HANDLING MOS DEVICES

Though all our MOS integrated circuits incorporate protection against electrostatic discharges, they can nevertheless be damaged by accidental over-voltages. In storing and handling them, the following precautions are recommended.

CAUTION: Testing or handling and mounting call for special attention to personal safety. Personnel handling MOS devices should normally be connected to ground via a resistor.

10.4. SOLDERING TECHNIQUES

Working method:
- Carefully unsolder one after the other the soldering tags of the semi-conductor.
- Remove all superfluous soldering material. Use a sucking iron or sucking litze wire.
- Check that the tags of the replacement part are clean and pre-tinned on the soldering places.
- Locate the replacement semi-conductor exactly on its place, and solder each tag to the relevant printed conductor on the circuit board.

NOTE: Bear in mind that the maximum permissible soldering time is 10 seconds during which the temperature of the tags must not exceed 250° C. The use of solder with a low melting point is therefore recommended.
Take care not to damage the plastic encapsulation of the semi-conductor (softening point of the plastic is 150° C).

ATTENTION: When you are soldering inside the instrument it is essential to use a low-voltage soldering iron, the tip of which must be earthed to ground of the instrument.

Suitable soldering irons should have temperature control and different types of nozzles (pin point tips) e. g. Weller Magnastat WTCP or WECP, Ersa TC 70/24 V.

If a higher wattage-rating soldering iron is used on the etched circuit boards excessive heat can cause the etched circuit wiring to seperate from the board base material.
In general use short-time heating with high tip temperature at a small point, avoid long time heating.

10.5. PARTS LIST PM 5193

10.5.1. Mechanical parts

Cabinet

Item	Quantity	Order number	Description
A	1	5322 447 91368	Top cover
B	1	5322 447 91369	Bottom cover
C	4	5322 462 40756	Plastic foot
D	4	5322 462 44434	Rubber foot, adhesive
E	4	5322 492 64745	Locking clip
F	1	5322 401 10867	Tilting support
G	1	5322 447 91373	Rear panel
H	2	5322 462 40761	Rear bumper
I	1	5322 447 91372	Front panel
J	1	5322 447 91371	Window for display
K	1	5322 456 90257	Text plate PM 5193
L	1	5322 447 90502	Front plate edging (upper)
M	1	5322 466 92117	Front plate edging (lower)
N	1	5322 460 60433	Profile ornament
O	1	5322 460 60436	Profile ornament with text
P	2	5322 447 90501	Side piece
P	2	5322 263 70186	Handle assembly (rack), not shown
Q	1	5322 460 60432	Profile orn. long, perf. (left)
R	1	5322 460 60434	Profile orn. short (right)
R	1	5322 460 60431	Profile orn. short, perf. (right)
S	1	5322 498 50176	Rubber handle
T	1	5322 462 40759	Steel insert

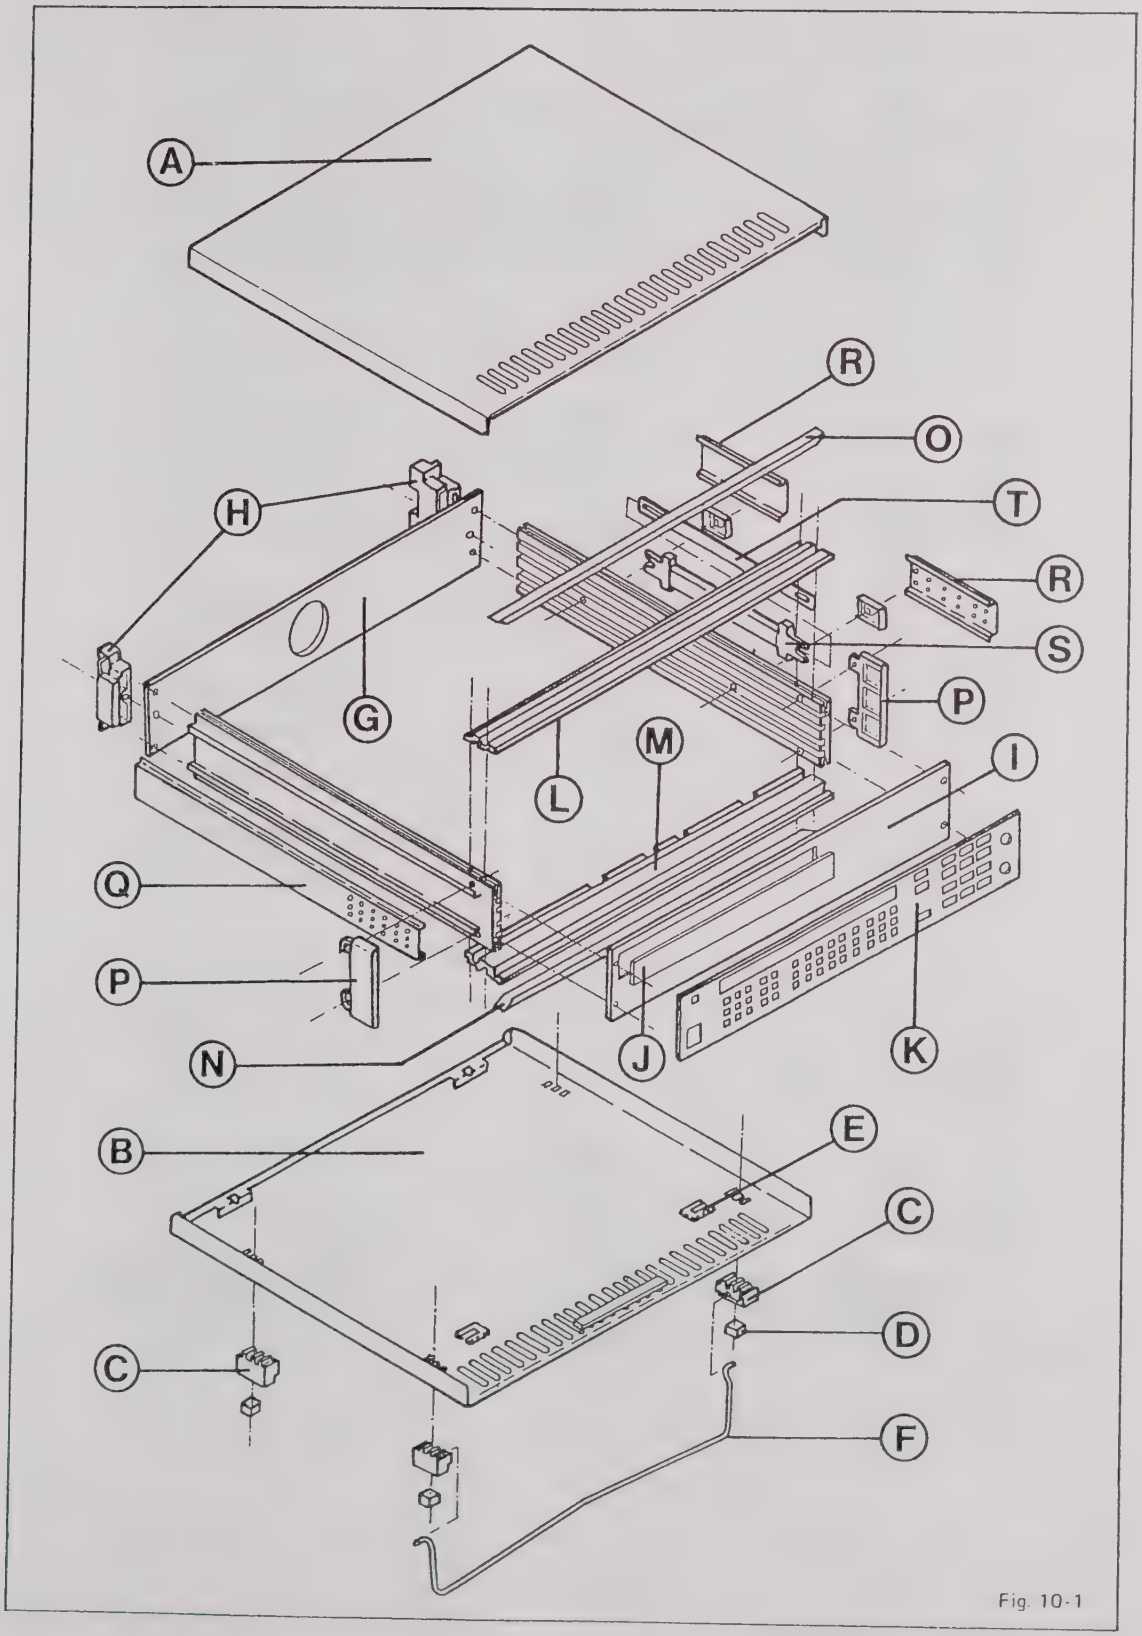

Fig. 10-1

10.5.2. Miscellaneaous, parts not on units

Item	Fig.	Quantity	Order number	Description
880	33 (31)	1	5322 276 12029 *S	Mains switch
881, 882	33 (31)	2	5322 267 10004	BNC connector, front
862-867	33 (32)	6	5322 267 10173	BNC connector, rear
	33 (32)	1	5322 321 22352	IEEE connector wired
870	33 (32)	1	5322 267 30416 *S	Mains socket with filter
	10-2	1	5322 321 10388 *S	Mains cable (Europe)
	10-3	1	5322 321 20816 *S	Mains cable (USA)
	10-4	1	5322 321 10123 *S	Mains cable (U. K.)
	32	1	5322 267 10173 *S	Fuse holder
869	33 (32)	1	4822 253 30018 *S	Fuse 630 mAT
869	33 (32)	1	4822 253 30022 *S	Fuse 1.25 AT
869	33 (32)	1	4822 253 30024 *S	Fuse 1.6 AT
868	33	1	5322 361 10451 *S	Fan
751	33	1	5322 146 21241 *S	Transformer
	31	15	5322 414 60037	Knob, large 12.5 x 6.5
	31	7	5322 414 60036	Knob, small 6.5 x 6.5
	31	36	5322 414 60038	Knob, small with LED
881, 882	33	2	5322 116 21068	Varistor (BNC front)
852-857	33	6	5322 116 21137	Varistor (BNC rear)
850-858	33	9	5322 526 14034	Damping bead (BNC connector)
	32	1	5322 462 44172	Cap for IC (rear panel)

*S = Safety component, see chapter 10.1.

Mains cables

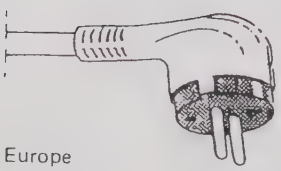

Europe

Fig. 10-2

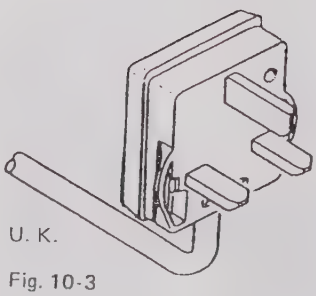

U. K.

Fig. 10-3

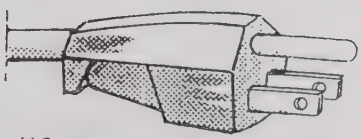

U S A

Fig. 10-4

10.5.3. Electrical Parts

Some parts are listed in chapter 10.5.2.

From LO-10 1451 onwards the instruments are fitted with dustproof potentiometers. Altered values and service code no. see page 10-27.

All metal film resistors not listed are of type MR 25 ± 1 % 0.4 W (ordering code see end of this list).

Please order loaded PROM directly via Philips Supply Centre Hamburg (note software version).

Pos. no.	Description				Ordering code
UNIT 1, POWER SUPPLY					
INTEGRATED CIRCUITS / UNIT 1, POWER SUPPLY					
301, 303	Integr. circuit	Regulator 78GU1C			5322 209 85565
302, 304	Integr. circuit	Regulator 79GU1C			5322 209 86349
305	Integr. circuit	Regulator LM223K			5322 209 71639 (rear wall)
TRANSISTORS / UNIT 1, POWER SUPPLY					
351	Transistor	BD204			5322 130 44324
352	Transistor	BD203			5322 130 44325
360	Transistor	BC558B			4822 130 44197
DIODES / UNIT 1, POWER SUPPLY					
401	Rectifier	SKB2/08L5A			5322 130 32031
402-405	Diode, reference	BZX92			5322 130 34397
417	Diode, reference	BZX75C1V4			4822 130 34047
420, 421	Rectifier	BY260-200			4822 130 32145 (rear wall)
CAPACITORS / UNIT 1, POWER SUPPLY					
501, 503	Cap. foil	220 nF	20 %	100 V	4822 121 40232
502, 504	Cap. electrolyt.	10 000 µF		40 V	5322 124 41278
505, 506	Cap. solid alu.	1 µF		25 V	4822 124 20944
508-510	Cap. foil	220 nF	20 %	100 V	4822 121 40232
511-513	Cap. electrolyt.	4 700 µF		25 V	5322 124 21459
512	Cap foil	220 nF	20 %	100 V	4822 121 40232
514, 515	Cap. solid alu.	1 µF		25 V	4822 124 20944
516	Cap. foil	220 nF	20 %	100 V	4822 121 40232
517	Cap. electrolyt.	22 000 µF		16 V	5322 124 70435
518	Cap. solid alu.	1 µF		25 V	4822 124 20944
519	Cap. ceramic	100 nF	10 %	50 V	5322 122 32941
520	Cap. solid alu.	2.2 µF		25 V	4822 124 21255
521-523	Cap. ceramic	100 nF	10 %	50 V	5322 122 32941
524, 525	Cap. solid alu.	2.2 µF		40 V	5322 124 14014
526	Cap. electrolyt.	47 µF		63 V	4822 124 40433
527	Cap. ceramic	100 nF	10 %	50 V	5322 122 32941
528	Cap. solid alu.	22 µF		10 V	4822 124 20943

Pos. no.	Description				Ordering code
RESISTORS / UNIT 1, POWER SUPPLY					
602	Res. metal film	5.6 Ω	5 %	2.5 W	4822 116 52165
604, 609	Potm. trimmer *	220 Ω	CERMET	0.1 W	4822 100 10359
607	Res. metal film	5.6 Ω	5 %	2.5 W	4822 116 52165
612	Potm. trimmer *	470 Ω	CERMET	0.1 W	5322 101 14047
615	Potm. trimmer *	220 Ω	CERMET	0.1 W	4822 100 10359
COIL / UNIT 1, POWER SUPPLY					
800	Coil				5322 158 10271

UNIT 1, AMPLIFIER

INTEGRATED CIRCUITS / UNIT 1, AMPL.			
301	Integr. circuit	MC1558U	5322 209 71645
302	Integr. circuit	HEF4094BP	5322 209 10421
303	Integr. circuit	SE538N	5322 209 71641
304, 305	Integr. circuit	TL071IP	5322 209 71643
306	Integr. circuit	HEF4094BP	5322 209 10421
307	Integr. circuit	DAC-08EN	5322 209 11254
308	Integr. circuit	TL072IP	5322 209 71646
312	Integr. circuit	HEF4094BP	5322 209 10421
313	Integr. circuit	7406N-00	5322 209 86327
314, 315	Integr. circuit	HEF4066BP	5322 209 10357
TRANSISTORS / UNIT 1, AMPL.			
320-322	Transistor	BC548B	4822 130 40937
330, 332	Transistor	BFW16A	5322 130 44015
331	Transistor	2N4035	5322 130 44201
333	Transistor	BF450	4822 130 44237
334, 335	Transistor	BC558B	4822 130 44197
336	Transistor	BF240	4822 130 40902
337	Transistor	BF450	4822 130 44237
338	Transistor	BC548B	4822 130 40937
339	Transistor	BC558B	4822 130 44197
340	Transistor	BF240	4822 130 40902
341	Transistor	BF450	4822 130 44237
343	Transistor	BC558B	4822 130 44197
344	Transistor	BF240	4822 130 40902
345	Transistor	BF450	4822 130 44237
347	Transistor	BC558B	4822 130 44197
348	Transistor	BF240	4822 130 40902
349	Transistor	BF450	4822 130 44237
351	Transistor	BC558B	4822 130 44197
352	Transistor	BF240	4822 130 40902
353	Transistor	BF450	4822 130 44237

* (see page 10-27)

Pos. no.	Description		Ordering code
355	Transistor	BC558B	4822 130 44197
356	Transistor	BF240	4822 130 40902
357	Transistor	BF450	4822 130 44237
359	Transistor	BC558B	4822 130 44197
360	Transistor	BF240	4822 130 40902
361	Transistor	BF450	4822 130 44237
363	Transistor	BC558B	4822 130 44197
364	Transistor	BF240	4822 130 40902
365	Transistor	BSX20	4822 130 41705
366	Transistor	BC558B	4822 130 44197
367	Transistor	BC548B	4822 130 40937
368	Transistor	2N2894A	5322 130 44127
369	Transistor	BC558C	5322 130 60068
370	Transistor	2N4035	5322 130 44201
371	Transistor	BC548B	4822 130 40937
372	Transistor	BSX20	4822 130 41705
373	Transistor	BC558B	4822 130 44197
374	Transistor	BC548C	4822 130 44196
375	Transistor	2N4035	5322 130 44201
376	Transistor	BFW16A	5322 130 44015
377	Transistor	BC548B	4822 130 40937
378	Transistor	BSX20	4822 130 41705
379, 380	Transistor	BFW16A	5322 130 44015
381	Transistor	2N2894A	5322 130 44127
382, 383	Transistor	2N5583	5322 130 44033
384	Transistor	BSS61	5322 130 44714
385-387	Transistor	2N5583	5322 130 44033
388	Transistor	2N2905A	5322 130 40468
389	Transistor	2N2219A	5322 130 44034
390-392	Transistor	BFW16A	5322 130 44015
393	Transistor	BSS52	5322 130 44579
394, 395	Transistor	2N2905A	5322 130 40468
396	Transistor	BF450	4822 130 44237
397, 398	Transistor	2N2219A	5322 130 44034
399	Transistor	BF240	4822 130 40902

DIODES / UNIT 1, AMPL.

403, 404	Diode, ref.	BZV46C1V5	5322 130 34865
405, 406	Diode	BAW62	4822 130 30613
409, 411	Diode, ref.	BZV46C1V5	5322 130 34865
416, 417	Diode, ref.	BZX79C6V8	4822 130 34278
419, 420	Diode, ref.	BZX79C5V1	4822 130 34233
421, 422	Diode, ref.	BZX79C6V2	4822 130 34167
423	Diode, ref.	BZX90	5322 130 34397
424-439	Diode	BA482 (selected)	5322 130 80265
440, 441	Diode, ref.	BZV46C1V5	5322 130 34865
442	Diode. ref.	BZX90	5322 130 34397

Pos. no.	Description				Ordering code
CAPACITORS / UNIT 1, AMPL.					
501	Cap. ceramic	10 nF	+ 20/– 90 %	40 V	4822 122 30043
502	Cap. ceramic	1 nF	10 %	100 V	5322 122 32331
503	Cap. ceramic	2.2 pF	0.25 %	100 V	4822 122 31036
504, 506	Cap. ceramic	100 nF	10 %	50 V	5322 122 32941
505, 507	Cap. electrolyt.	220 µF		16 V	4822 124 40196
508-511	Cap. ceramic	100 nF	10 %	50 V	5322 122 32941
512	Cap. ceramic	39 pF	2 %	100 V	4822 122 31069
513	Cap. trimmer	5.5-65 pF		100 V	5322 125 54025
514	Cap. solid alu.	10 µF		16 V	4822 124 21314
515	Cap. ceramic	10 nF	+ 20/– 90 %	40 V	4822 122 30043
516	Cap. ceramic	100 nF	10 %	50 V	5322 122 32941
517-520	Cap. ceramic	10 nF	+ 20/– 90 %	40 V	4822 122 30043
521	Cap. ceramic	100 nF	10 %	50 V	5322 122 32941
522	Cap. solid alu.	10 µF		16 V	4822 124 21314
523	Cap. ceramic	10 nF	+ 20/– 90 %	40 V	4822 122 30043
525	Cap. ceramic	100 nF	10 %	50 V	5322 122 32941
526	Cap. ceramic	100 pF	2 %	100 V	4822 122 31316
528-531	Cap. ceramic	100 nF	10 %	50 V	5322 122 32941
532, 533	Cap. ceramic	470 pF	2 %	63 V	4822 122 32062
534	Cap. ceramic	100 nF	10 %	50 V	5322 122 32941
536, 537	Cap. solid alu.	10 µF		16 V	4822 124 21314
538	Cap. ceramic	4.7 nF	10 %	100 V	4822 122 31125
539	Cap. ceramic	150 pF	2 %	100 V	4822 122 31413
540, 542	Cap. ceramic	68 pF	2 %	100 V	4822 122 31349
544	Cap. ceramic	100 nF	10 %	50 V	5322 122 32941
545	Cap. solid alu.	1 µF		25 V	4822 124 20944
547	Cap. ceramic	10 nF	+ 20/– 90 %	40 V	4822 122 30043
548	Cap. ceramic	100 nF	10 %	50 V	5322 122 32941
549, 550	Cap. ceramic	10 nF	+ 20/– 90 %	40 V	4822 122 30043
551, 553	Cap. ceramic	100 nF	10 %	50 V	5322 122 32941
554	Cap. solid alu.	1 µF		25 V	4822 124 20944
555	Cap. ceramic	10 nF	+ 20/– 90 %	40 V	4822 122 30043
557	Cap. ceramic	15 pF	2 %	100 V	4822 122 31823
560, 561	Cap. ceramic	100 nF	10 %	50 V	5322 122 32941
562-565	Cap. ceramic	10 nF	+ 20/– 90 %	40 V	4822 122 30043
566-574	Cap. ceramic	100 nF	10 %	50 V	5322 122 32941
577, 578	Cap. ceramic	220 pF	2 %	100 V	5322 122 34047
580	Cap. ceramic	12 pF	2 %	100 V	4822 122 31056
581, 582	Cap. ceramic	470 nF	20 %	100 V	5322 122 33078
583	Cap. ceramic	1 nF	10 %	100 V	4822 122 30027

Pos. no.	Description				Ordering code
RESISTORS / UNIT 1, AMPL.					
609, 610	Res. metal film	312 Ω	0.1 %	0.25 W	5322 116 80206
611, 612	Res. metal film	412 Ω	0.1 %	0.25 W	5322 116 80211
613, 614	Res. metal film	825 Ω	0.1 %	0.25 W	5322 116 80213
644, 653	Res. network	8 x 4.7 kΩ	5 %	0.125 W	5322 116 90132
666	Potm. trimmer *	100 Ω	carb.	0.1 W	4822 100 10075
700	Potm. trimmer *	2.2 kΩ	carb.	0.1 W	4822 100 10029
702	Res. metal film	130 Ω	5 %	1.6 W	5322 116 55509
769	Potm. trimmer *	1 kΩ	carb.	0.1 W	4822 100 10037
771	Potm. trimmer *	4.7 kΩ	carb.	0.1 W	4822 100 10036
787	Res. metal film	100 Ω	0.1 %	0.25 W	5322 116 80208
788	Res. metal film	150 Ω	0.1 %	0.25 W	5322 116 80209
789	Res. metal film	261 Ω	0.1 %	0.25 W	5322 116 80205
792, 793	Res. metal film	100 Ω	0.1 %	0.25 W	5322 116 80208
794	Res. metal film	150 Ω	0.1 %	0.25 W	5322 116 80209
795	Res. metal film	261 Ω	0.1 %	0.25 W	5322 116 80205
805	Potm. trimmer *	2.2 kΩ	carb.	0.1 W	4822 100 10029
809	Potm. trimmer *	10 kΩ	carb.	0.1 W	4822 100 10035
825-828	Res. metal film	39 Ω	5 %	0.5 W	4822 116 52193
874	Potm. trimmer *	470 Ω	carb.	0.1 W	4822 100 10038
COILS / UNIT 1, AMPL.					
831, 832	Wide band choke				5322 158 10271
833, 835	Choke	220 µH			5322 157 53012
838	Wide band choke				5322 157 53015
873	Choke	220 µH			5322 157 53012
RELAIS / UNIT 1, AMPL.					
841-850	Reed relais	5 V			5322 280 20281

* (see page 10-27)

Pos. no.	Description		Ordering code
UNIT 1, MODULATOR			
INTEGRATED CIRCUITS / UNIT 1, MOD.			
301	Integr. circuit	HEF4053BP	5322 209 10576
302	Integr. circuit	HEF4094BP	5322 209 10421
303	Integr. circuit	N74LS02N	5322 209 85312
304	Integr. circuit	N74LS27N	5322 209 85561
305	Integr. circuit	MC1495L	5322 209 71638
306	Integr. circuit	LF356N	5322 209 86451
307	Integr. circuit	HEF4094BP	5322 209 10421
308	Integr. circuit	DAC–08EN	5322 209 11254
309	Integr. circuit	TL072ACP–00	5322 209 71644
310	Integr. circuit	XR–2206CP	5322 209 86453
311	Integr. circuit	AD7523JN	5322 209 70195
313, 316	Integr. circuit	HEF4094BP	5322 209 10421
314, 315	Integr. circuit	HEF4053BP	5322 209 10576
317	Integr. circuit	HEF4001BP	4822 209 10246
TRANSISTORS / UNIT 1, MOD.			
350	Transistor	BC558B	4822 130 44197
352, 355	Transistor	BC548B	4822 130 40937
358	Transistor	BSX20	4822 130 41705
359	Transistor	2N2894A	5322 130 44127
360, 361	Transistor	BSX20	4822 130 41705
362	Transistor	BC548B	4822 130 40937
363	Transistor	BC558B	4822 130 44197
364, 365	Transistor	2N2894A	5322 130 44127
366, 367	Transistor	BSX20	4822 130 41705
378, 379	Transistor	BF450	4822 130 44237
380, 381	Transistor	BF240	4822 130 40902
382	Transistor	BC548B	4822 130 40937
383	Transistor	BC558B	4822 130 44197
384, 385	Transistor	BC548B	4822 130 40937

Pos. no.	Description				Ordering code
DIODES / UNIT 1, MOD.					
401, 402	Diode, ref.	BZX79B4V7			4822 130 34174
403-408	Diode, ref.	BZX79B6V8			4822 130 34278
410-418	Diode	BA481			5322 130 32239
421	Diode, ref.	BZX79C8V2			4822 130 34382
422, 423	Diode, ref.	BZX79C6V8			4822 130 34278
425	Diode, ref.	BZX79B4V7			4822 130 34174
426	Diode	BAW62			4822 130 30613
427, 428	Diode, ref.	BZX79B4V7			4822 130 34174
429, 430	Diode, ref.	BZX79B4V3			4822 130 31554
431	Diode, ref.	BZX79B10			4822 130 34297
432, 433	Diode	BA481			5322 130 32239
CAPACITORS / UNIT 1, MOD.					
503	Cap. trimmer	2-22 pF		100 V	4822 125 50045
504	Cap. ceramic	100 nF	10 %	50 V	5322 122 32941
505, 511	Cap. trimmer	2-22 pF		100 V	4822 125 50045
513	Cap. ceramic	120 pF	2 %	100 V	4822 122 31685
514-516	Cap. ceramic	100 nF	10 %	20 V	5322 122 30108
517, 519	Cap. ceramic	180 pF	2 %	100 V	5322 122 31907
520	Cap. ceramic	10 nF		40 V	4822 122 30043
521	Cap. ceramic	100 nF	10 %	50 V	5322 122 32941
522	Cap. solid alu.	15 μF		16 V	4822 124 20977
523	Cap. solid alu.	1 μF		25 V	4822 124 20944
524	Cap. trimmer	11-120 pF		150 V	5322 125 50183
525	Cap. ceramic	100 pF	2 %	100 V	4822 122 31316
526	Cap. foil	1.6 nF	1 %	160 V	5322 121 51123
527	Cap. foil	1.82 nF	1 %	160 V	5322 121 54259
528	Cap. ceramic	100 nF	10 %	50 V	5322 122 32941
529	Cap. solid alu.	15 μF		16 V	4822 124 20977
530	Cap. ceramic	100 nF	10 %	50 V	5322 122 32941
532	Cap. foil	33 nF	1 %	63 V	5322 121 54111
533	Cap. foil	330 nF	1 %	63 V	5322 121 54171
534	Cap. ceramic	100 nF	10 %	50 V	5322 122 32941
536	Cap. ceramic	33 pF	2 %	100 V	5322 122 32072
537	Cap. electrolyt.	47 μF		25 V	4822 124 22027
540-544	Cap. ceramic	100 nF	10 %	100 V	5322 122 32941
545-546	Cap. ceramic	100 pF	2 %	100 V	4822 122 31316
547	Cap. ceramic	22 pF	2 %	100 V	5322 122 32143
548-549	Cap. ceramic	82 pF	2 %	100 V	4822 122 31237
550	Cap. ceramic	2.2 nF	10 %	100 V	4822 122 30114

Pos. no.	Description				Ordering code
RESISTORS / UNIT 1, MOD.					
601	Res. metal film	1 kΩ	0.1 %	0.25 W	5322 116 52384
602, 607	Potm. trimmer *	4.7 kΩ	CERMET	0.5 W	5322 101 10509
604, 606	Res. metal film	2 kΩ	0.1 %	0.25 W	5322 116 51812
609, 611	Res. metal film	2 kΩ	0.1 %	0.25 W	5322 116 51812
613	Potm. trimmer *	470 Ω	CERMET	0.5 W	5322 101 14047
624, 627	Potm. trimmer *	100 Ω	CERMET	0.5 W	5322 101 14011
663, 681	Potm. trimmer *	10 kΩ	carb.	0.1 W	4822 100 10035
684	Potm. trimmer *	2.2 kΩ	carb.	0.1 W	4822 100 10029
686	Potm. trimmer *	470 Ω	carb.	0.1 W	4822 100 10038
696	Potm. trimmer *	1 kΩ	CERMET	0.5 W	4822 100 10254
699	Potm. trimmer *	10 kΩ	carb.	0.1 W	4822 100 10035
700	Potm. trimmer *	220 Ω	carb.	0.1 W	4822 100 10019
702, 709	Potm. trimmer *	22 kΩ	carb.	0.1 W	4822 100 10051
707	Potm. trimmer *	1 kΩ	carb.	0.1 W	4822 100 10037
714	Res. N. T. C.	4.7 kΩ	10 %	0.25 W	5322 116 30215
COILS / UNIT 1, MOD.					
801	Choke	0.33 µH			5322 157 53013
802	Choke	220 µH			5322 157 53012
RELAIS / UNIT 1, MOD.					
810–816	Reed relais	5 V			5322 280 20281

* (see page 10-27)

Pos. no.	Description		Ordering code
UNIT 1, PULSE GENERATOR			
INTEGRATED CIRCUITS / UNIT 1, PULSE GEN.			
301	Integr. circuit	NE521N	5322 209 14441
302	Integr. circuit	N74LS86N	5322 209 84997
303	Integr. circuit	N74S258N	5322 209 85674
304	Integr. circuit	HEF4094BP	5322 209 10421
305	Integr. circuit	N74S00N	5322 209 84167
306	Integr. circuit	DAC–08EN	5322 209 11254
307	Integr. circuit	MC1458N	4822 209 81349
308, 309	Integr. circuit	LF356N	5322 209 86422
TRANSISTORS / UNIT 1, PULSE GEN.			
351, 353	Transistor	BSX20	4822 130 41705
352, 354	Transistor	2N2894A	5322 130 44127
355, 360	Transistor	BSX20	4822 130 41705
356, 357	Transistor	2N2894A	5322 130 44127
358	Transistor	2N5583	5322 130 44033
359	Transistor	2N2894A	5322 130 44127
361, 365	Transistor	2N5583	5322 130 44033
362, 366	Transistor	BFW16A	5322 130 44015
363	Transistor	2N2905A	5322 130 40468
364	Transistor	2N2219A	5322 130 44034
DIODES / UNIT 1, PULSE GEN.			
401, 402	Diode, ref.	BZX79B4V7	4822 130 34174
403	Diode, ref.	BZV46C2V0	4822 130 31248
404	Diode, ref.	BZX79B6V2	4822 130 34167
405–408	Diode	BA481	5322 130 32239
409, 410	Diode, ref.	BZX75C2V8	4822 130 34048
411	Diode, ref.	BZX79B4V7	4822 130 34174
412, 413	Diode	BA481	5322 130 32239
414	Diode, ref.	BZX79B3V3	5322 130 31504
415, 416	Diode, ref.	BZX75B16	4822 130 34268
417	Diode, ref.	BZX79B9V1	4822 130 30862
418	Diode, ref.	BZX79B15	4822 130 34281
419	Diode, ref.	BZX79B10	4822 130 34297
420	Diode, ref.	BZX79B13	4822 130 34195
421–424	Diode	BAT14036	5322 130 80266
425, 426	Diode, ref.	BZX79B12	4822 130 34197
427, 428	Diode	BAW62	4822 130 30613

Pos. no.	Description				Ordering code
CAPACITORS / UNIT 1, PULSE GEN.					
501, 502	Cap. ceramic	10 nF	+ 50/– 20 %	100 V	4822 122 31414
503	Cap. ceramic	220 pF	2 %	100 V	5322 122 34047
504, 505	Cap. ceramic	100 nF	10 %	50 V	5322 122 32941
506, 507	Cap. ceramic	10 nF	+ 50/– 20 %	100 V	4822 122 31414
508, 509	Cap. ceramic	100 nF	10 %	50 V	5322 122 32941
510, 511	Cap. ceramic	10 nF	+ 50/– 20 %	100 V	4822 122 31414
512–517	Cap. ceramic	100 nF	10 %	50 V	5322 122 32941
518, 519	Cap. solid alu.	10 µF		16 V	4822 124 21314
520	Cap. ceramic	100 nF	10 %	50 V	5322 122 32941
521	Cap. ceramic	33 pF	2 %	100 V	5322 122 32072
522, 523	Cap. ceramic	1 nF	10 %	100 V	4822 122 30027
525	Cap. ceramic	10 nF	+ 50/– 20 %	100 V	4822 122 31414
526, 527	Cap. ceramic	100 nF	10 %	50 V	5322 122 32941
530, 531	Cap. ceramic	10 nF	+ 50/– 20 %	100 V	4822 122 31414
532, 533	Cap. solid alu.	10 µF		16 V	4822 124 21314
534, 535	Cap. ceramic	10 pF	2 %	100 V	4822 122 32185
536, 539	Cap. ceramic	100 nF	10 %	50 V	5322 122 32941
537, 538	Cap. trimmer	2-22 pF		100 V	4822 125 50045
541	Cap. ceramic	10 nF	+ 50/– 20 %	100 V	4822 122 31414
542	Cap. ceramic	1 nF	10 %	100 V	4822 122 30027
RESISTORS / UNIT 1, PULSE GEN.					
603	Potm. trimmer *	100 kΩ	carb.	0.1 W	4822 100 10052
614	Potm. trimmer *	4.7 kΩ	carb.	0.1 W	4822 100 10036
624, 627	Potm. trimmer *	4.7 kΩ	carb.	0.1 W	4822 100 10036
650	Res. metal film	150 Ω	5 %	1.6 W	4822 116 51142
654, 659	Potm. trimmer *	4.7 kΩ	carb.	0.1 W	4822 100 10036
662	Potm. trimmer *	4.7 kΩ	carb.	0.1 W	4822 100 10036
664	Potm. trimmer *	10 kΩ	carb.	0.1 W	4822 100 10035
684	Potm. trimmer *	2.2 kΩ	carb.	0.1 W	4822 100 10029
COILS / UNIT 1, PULSE GEN.					
805	Damping bead				5322 526 10365
806	Choke	22 µH			5322 157 50317
811	Wide band choke				5322 157 53015
812	Damping bead				5322 526 10015

* (see page 10-27)

Pos. no.	Description		Ordering code
UNIT 1, PLL / VCO			
INTEGRATED CIRCUITS / UNIT 1, PLL / VCO			
301	Integr. circuit	HEF4094BP	5322 209 10421
302	Integr. circuit	DAC–08EN	5322 209 11254
303, 312	Integr. circuit	LF356N	5322 209 86451
304, 307	Integr. circuit	LF256H	5322 209 71642
306	Integr. circuit	TL072IP	5322 209 71646
309	Integr. circuit	MC4044P	5322 209 85821
311	Integr. circuit	MC1456P1	5322 209 71647
313	Integr. circuit	HEF4053BP	5322 209 10576
314	Integr. circuit	N74S00N	5322 209 84167
316	Integr. circuit	SN74197N	5322 209 84516
317	Integr. circuit	N74LS393N	4822 209 80447
318	Integr. circuit	N74LS00N	5322 209 84823
320	Integr. circuit	MC3346P (CA3086)	5322 209 84111
TRANSISTORS / UNIT 1, PLL / VCO			
351, 354	Transistor	BC548B	4822 130 40937
352, 353	Transistor	BC558B	4822 130 44197
356	Transistor	BF450	4822 130 44237
357, 358	Transistor	2N4035	5322 130 44201
359	Transistor	BF240	4822 130 40902
361	Transistor	BSV79	5322 130 44017
362	Transistor	BFX89	5322 130 40542
363	Transistor	BFW16A	5322 130 44015
364, 366	Transistor	BFX89	5322 130 40542
367, 368	Transistor	2N2894A	5322 130 44127
369, 371	Transistor	PH2369	4822 130 41594
372	Transistor	BC548B	4822 130 40937
373	Transistor	BC558B	4822 130 44197
374, 376	Transistor	2N4035	5322 130 44201
375, 377	Transistor	BF240	4822 130 40902
378	Transistor	2N4035	5322 130 44201
379	Transistor	BF450	4822 130 44237
380	Transistor	BF240	4822 130 40902
381	Transistor	BC558B	4822 130 44197
382	Integr. circuit	Regul. UA7815UC	4822 209 80808
DIODES / UNIT 1, PLL / VCO			
401, 402	Diode, ref.	BZX79C4V7	4822 130 34174
403	Diode, ref.	BZX91	5322 130 34397
404–407	Diode, ref.	BZX79C4V7	4822 130 34174
408	Diode, ref.	BZX79C4V3	4822 130 31554
409, 411	Diode, ref.	BZX79C5V1	4822 130 34233
412	Diode, ref.	BZX91	5322 130 34397
413, 417	Diode, ref.	BZX79C4V7	4822 130 34174
414, 420	Diode	BAW62	4822 130 30613
416	Diode, ref.	BZX79C6V2	4822 130 34167
418	Diode, ref.	BZV46C1V5	5322 130 34865
419	Diode, ref.	BZX79B3V3	5322 130 31504

Pos. no.	Description				Ordering code
CAPACITORS / UNIT 1, PLL / VCO					
502	Cap. ceramic	10 nF	+ 50/– 20 %	100 V	4822 122 31414
503	Cap. solid alu.	10 µF		16 V	4822 124 21314
504-508	Cap. ceramic	100 nF	10 %	50 V	5322 122 32941
509	Cap. ceramic	33 pF	2 %	100 V	5322 122 32072
511	Cap. ceramic	220 pF	2 %	100 V	5322 122 34047
512	Cap. ceramic	100 nF	10 %	20 V	5322 122 30108
513, 514	Cap. tantal	47 µF		6.3 V	4822 124 10197
516	Cap. foil	4.7 nF	5 %	63 V	4822 121 50539
517	Cap. ceramic	470 pF	2 %	63 V	4822 122 32062
518, 519	Cap. ceramic	100 nF	10 %	50 V	5322 122 32941
521, 522	Cap. electrolyt.	100 µF		25 V	4822 124 40207
523, 524	Cap. ceramic	4.7 nF	10 %	100 V	4822 122 31125
526	Cap. trimmer	2-10 pF		100 V	4822 125 50062
527	Cap. ceramic	18 pF	2 %	100 V	4822 122 31061
528, 529	Cap. ceramic	4.7 nF	10 %	100 V	4822 122 31125
530	Cap. ceramic	100 nF	10 %	50 V	5322 122 32941
533, 547	Cap. ceramic	10 nF	+ 50/– 20 %	100 V	4822 122 31414
536	Cap. trimmer	2-22 pF		100 V	4822 125 50045
537	Cap. ceramic	22 pF	2 %	100 V	5322 122 32143
539	Cap. ceramic	100 nF	10 %	20 V	5322 122 30108
541	Cap. ceramic	470 pF	2 %	63 V	4822 122 32062
542	Cap. ceramic	100 nF	10 %	20 V	5322 122 30108
544	Cap. ceramic	2.2 nF	10 %	100 V	4822 122 30114
548-552	Cap. ceramic	100 nF	10 %	50 V	5322 122 32941
556	Cap. tantal	47 µF		6.3 V	5322 124 10197
557, 566	Cap. ceramic	100 nF	10 %	50 V	5322 122 32941
558	Cap. solid alu.	10 µF		16 V	4822 124 21314
559-562	Cap. ceramic	10 nF	+ 50/– 20 %	100 V	4822 122 31414
563	Cap. ceramic	27 pF	2 %	100 V	4822 122 30045
564-565	Cap. ceramic	10 nF	+ 50/– 20 %	100 V	4822 122 31414
568, 569	Cap. ceramic	100 nF	10 %	20 V	5322 122 30108
570	Cap. ceramic	220 pF	2 %	100 V	5322 122 34047
571	Cap. ceramic	100 nF	10 %	20 V	5322 122 30108
572	Cap. ceramic	10 nF	+ 50/– 20 %	100 V	4822 122 31414
573, 574	Cap. ceramic	100 nF	10 %	50 V	5322 122 32941
RESISTORS / UNIT 1, PLL / VCO					
611	Potm. trimmer *	470 Ω	carb.	0.1 W	4822 100 10038
614, 621	Potm. trimmer *	10 kΩ	carb.	0.1 W	4822 100 10035
620	Potm. trimmer *	22 kΩ	carb.	0.1 W	4822 100 10051
625	Resistor	10 MΩ	5 %	0.25 W	4822 110 72214
636	Potm. trimmer *	220 Ω	carb.	0.1 W	4822 100 10019
650, 655	Res. metal film	39 Ω	5 %	0.5 W	4822 116 52193
684	Potm. trimmer *	100 Ω	carb.	0.1 W	4822 100 10075
706, 709	Potm. trimmer *	22 kΩ	carb.	0.1 W	4822 100 10051
721	Potm. trimmer *	100 Ω	carb.	0.1 W	4822 100 10075
COILS / UNIT 1, PLL / VCO					
801-803	Damping lead	FXC3B			5322 526 10366
805	Damping lead	FXC3B			5322 526 10366
806	Coil	0.15 µH			5322 157 53014
804, 807	Coil	4.7 µH			5322 158 10628
808	Coil	15 µH			5322 158 14004

* (see page 10-27)

Pos. no.	Description				Ordering code
UNIT 2, CPU					
INTEGRATED CIRCUITS / UNIT 2, CPU					
301-304	Integr. circuit	MC3441AP			5322 209 85464
305	Integr. circuit	HEF4093BP			5322 209 14927
306	Integr. circuit	HEF4738VP			5322 209 14509
307	Integr. circuit	HEF40244BP			5322 209 10489
308	Integr. circuit	HEF40373BP			5322 209 10491
309, 310	Integr. circuit	HEF4014BP			4822 209 10296
311	Integr. circuit	HEF4094BP			5322 209 10421
312	Integr. circuit	HEF4514BP			5322 209 14051
313	Integr. circuit	N74LS175N			5322 209 84999
314	Integr. circuit	N74LS363N			5322 209 81776
315	I. C. P27128	(PROM, software version, see page 10-5)			
317	Integr. circuit	PC74HCUO4P			5322 209 11323
318	Integr. circuit	P8031U processor			5322 209 82034
319	Integr. circuit	N74LS390N			5322 209 86362
320	Integr. circuit	HEF4049BP			4822 209 10306
321	Integr. circuit	HEF4094BP			5322 209 10421
322	Integr. circuit	LM741CN			4822 209 80617
323	Integr. circuit	DAC-08EN			5322 209 11254
324, 325	Integr. circuit	PCD8571P			4822 209 83571
TRANSISTOR / UNIT 2, CPU					
351	Transistor	BC337-16			4822 130 41095
DIODE / UNIT 2, CPU					
401-404	Diode	BAW62			4822 130 30613
CAPACITORS / UNIT 2, CPU					
501	Cap. solid alu.	3.3 µF		16 V	4822 124 20947
502	Cap. ceramic	220 pF	10 %	100 V	4822 122 30094
503, 505	Cap. ceramic	22 pF	2 %	100 V	5322 122 32143
504	Cap. ceramic	27 pF	2 %	100 V	4822 122 30045
506-511	Cap. ceramic	22 nF	+ 20/- 90 %	40 V	4822 122 30103
512	Cap. electrolyt.	220 µF		16 V	4822 124 40196
513-515	Cap. ceramic	22 nF	+ 20/- 90 %	40 V	4822 122 30103
517	Cap. ceramic	100 nF	10 %	50 V	5322 122 32941

Pos. no.	Description				Ordering code
RESISTORS / UNIT 2, CPU					
601, 602	Res. network	8 x 4.7 kΩ	5 %	0.125 W	5322 116 90132
604, 605	Res. network	8 x 4.7 kΩ	5 %	0.125 W	5322 116 90132
609	Res. network	8 x 4.7 kΩ	5 %	0.125 W	5322 116 90132
CRYSTAL / UNIT 2, CPU					
801	Crystal	10 MHz			5322 242 71724
MISCELLANEOUS / UNIT 2, CPU					
802	Lithium cell	3V/160mAh			5322 138 10144

Pos. no.	Description		Ordering code
UNIT 2, DFS			
INTEGRATED CIRCUITS / UNIT 2, DFS			
301	Integr. circuit	PC74HCUO4P	5322 209 11323
302, 306	Integr. circuit	N74LS132N	5322 209 85201
303	Integr. circuit	SN74LS109AN	5322 209 85974
304, 305	Integr. circuit	N74LS02N	5322 209 85312
307-311	Integr. circuit	HEF4094BP	5322 209 10421
312-321	Integr. circuit	N74LS283N	5322 209 86052
322, 323	Integr. circuit	N74LS273N	5322 209 85792
324	Integr. circuit	N74LS174N	5322 209 81632
325, 326	Integr. circuit	N74LS273N	5322 209 85792
327	Integr. circuit	N74LS86N	5322 209 84997
328	Integr. circuit	N74LS153N	5322 209 85488
329	Integr. circuit	SN74LS151N	5322 209 86452
330	Integr. circuit	N74LS00N	5322 209 84823
331, 332	Integr. circuit	N74LS86N	5322 209 84997
333	Integr. circuit	N74LS174N	5322 209 81632
334	Integr. circuit	N74LS175N	5322 209 84999
335	Integr. circuit	N82S115N (sine ROM)	5322 209 82603
336, 337	Integr. circuit	N74LS157N	5322 209 81521
338	Integr. circuit	N74LS174N	5322 209 81632
339	Integr. circuit	N74LS175N	5322 209 84999
340, 341	Integr. circuit	N74LS86N	5322 209 84997
342	Integr. circuit	N74LS273N	5322 209 85792
343	Integr. circuit	N74LS175N	5322 209 84999
344, 345	Integr. circuit	N74S04N	5322 209 84475
346	Integr. circuit	MC1458N	4822 209 81349
347	Integr. circuit	SN74LS151N	5322 209 86452
348	Integr. circuit	HEF4050BP	4822 209 10261
360	Integr. circuit	NE521N	5322 209 14441
361	Integr. circuit	N74S153N	5322 209 85688
362	Integr. circuit	HEF4094BP	5322 209 10421
363	Integr. circuit	N74LS00N	5322 209 84823
364	Integr. circuit	N74LS107N	5322 209 85816
365	Integr. circuit	N74S02N	5322 209 85407
366, 367	Integr. circuit	N74LS191N	5322 209 84989
368, 369	Integr. circuit	N74LS157N	5322 209 81521
370, 371	Integr. circuit	HEF4094BP	5322 209 10421
372	Integr. circuit	SN74S112N	5322 209 85741
373	Integr. circuit	N74LS32N	5322 209 85311
374	Integr. circuit	SN74LS123N	5322 209 85266
375	Integr. circuit	N74LS107N	5322 209 85816
376	Integr. circuit	N74LS37N	4822 209 80916
377	Integr. circuit	N74LS0PN	5322 209 84995
378	Integr. circuit	SN74LS123N	5322 209 85266

Pos. no.	Description				Ordering code
TRANSISTORS / UNIT 2, DFS					
379, 402	Transistor	BC548B			4822 130 40937
401, 403	Transistor	BC558C			5322 130 60068
404, 407	Transistor	BC558B			4822 130 44197
405, 406	Transistor	BC558C			5322 130 60068
408, 409	Transistor	BC558C			5322 130 60068
410, 413	Transistor	BC558B			4822 130 44197
411, 412	Transistor	BC558C			5322 130 60068
414, 415	Transistor	BC558C			5322 130 60068
416, 419	Transistor	BC558B			4822 130 44197
417, 418	Transistor	BC558C			5322 130 60068
420, 421	Transistor	BC558C			5322 130 60068
422, 425	Transistor	BC558B			4822 130 44197
423, 424	Transistor	BC558C			5322 130 60068
426, 427	Transistor	BC558C			5322 130 60068
428, 430	Transistor	BC558B			4822 130 44197
429	Transistor	BC558C			5322 130 60068
431, 441	Transistor	BC548B			4822 130 40937
DIODES / UNIT 2, DFS					
451-460	Diode	BAW62			4822 130 30613
461, 463	Diode, ref.	BZX79B4V3			4822 130 31554
462, 464	Diode	BAW62			4822 130 30613
465, 467	Diode, ref.	BZW79B4V3			4822 130 31554
466, 468	Diode	BAW62			4822 130 30613
469, 471	Diode, ref.	BZX79B4V3			4822 130 31554
470, 472	Diode	BAW62			4822 130 30613
473, 475	Diode, ref.	BZX79B4V3			4822 130 31554
474, 476	Diode	BAW62			4822 130 30613
477	Diode, ref.	BZX79B4V3			4822 130 31554
478	Diode, ref.	BZV46X2V0			4822 130 31248
480	Diode, ref.	BZX79B5V1			4822 130 34233
CAPACITORS / UNIT 2, DFS					
501, 507	Cap. ceramic	22 nF	+ 20/– 90 %	40 V	4822 122 30103
502	Cap. ceramic	22 pF	2 %	100 V	5322 122 32143
503	Cap. ceramic	56 pF	2 %	100 V	4822 122 32027
504	Cap. ceramic	27 pF	2 %	100 V	5322 122 32072
505	Cap. trimmer	2.5-27 pF		100 V	5322 125 54083

Pos. no.	Description				Ordering code
506	Cap. solid alu.	1 µF		25 V	4822 124 20944
511-517	Cap. ceramic	22 nF	+ 20/– 90 %	40 V	4822 122 30103
518	Cap. electrolyt.	220 µF		16 V	4822 124 40196
519	Cap. ceramic	22 nF	+ 20/– 90 %	40 V	4822 122 30103
520, 521	Cap. ceramic	4.7 nF	10 %	100 V	4822 122 31125
522	Cap. ceramic	82 pF	2 %	100 V	4822 122 31237
523, 524	Cap. ceramic	33 pF	2 %	100 V	5322 122 32072
525, 526	Cap. ceramic	4.7 nF	10 %	100 V	4822 122 31125
527	Cap. ceramic	82 pF	2 %	100 V	4822 122 31237
528	Cap. ceramic	33 pF	2 %	100 V	5322 122 32072
529, 530	Cap. ceramic	4.7 nF	10 %	100 V	4822 122 31125
531	Cap. ceramic	82 pF	2 %	100 V	4822 122 31237
532	Cap. ceramic	33 pF	2 %	100 V	5322 122 32072
533, 534	Cap. ceramic	4.7 nF	10 %	100 V	4822 122 31125
535	Cap. ceramic	82 pF	2 %	100 V	4822 122 31237
536	Cap. ceramic	33 pF	2 %	100 V	5322 122 32072
537, 538	Cap. ceramic	4.7 nF	10 %	100 V	4822 122 31125
539	Cap. ceramic	82 pF	2 %	100 V	4822 122 31237
540	Cap. ceramic	33 pF	2 %	100 V	5322 122 32072
541, 542	Cap. ceramic	4.7 nF	10 %	100 V	4822 122 31125
543	Cap. ceramic	82 pF	2 %	100 V	4822 122 31237
544, 548	Cap. ceramic	33 pF	2 %	100 V	5322 122 32072
545, 546	Cap. ceramic	4.7 nF	10 %	100 V	4822 122 31125
547	Cap. ceramic	82 pF	2 %	100 V	4822 122 31237
549	Cap. ceramic	22 nF	+ 20/– 90 %	40 V	4822 122 30103
550, 551	Cap. ceramic	4.7 nF	10 %	100 V	4822 122 31125
553	Cap. ceramic	82 pF	2 %	100 V	4822 122 31237
554	Cap. ceramic	22 nF	+ 20/– 90 %	40 V	4822 122 30103
555, 556	Cap. ceramic	4.7 nF	10 %	100 V	4822 122 31125
558	Cap. ceramic	22 nF	+ 20/– 90 %	40 V	4822 122 30103
559	Cap. ceramic	22 pF	2 %	100 V	5322 122 32143
560, 562	Cap. ceramic	180 pF	2 %	100 V	5322 122 31907
561	Cap. ceramic	10 pF	2 %	100 V	4822 122 32185
563	Cap. solid alu.	6.8 µF		25 V	5322 124 14081
564, 566	Cap. solid alu.	10 µF		16 V	4822 124 21314
565, 567	Cap. ceramic	22 nF	+ 20/– 90 %	40 V	4822 122 30103
568	Cap. ceramic	47 pF	2 %	100 V	4822 122 31072
569	Cap. ceramic	4.7 nF	10 %	100 V	4822 122 31125
570	Cap. ceramic	12 pF	2 %	100 V	4822 122 31056
571, 572	Cap. ceramic	22 nF	+ 20/– 90 %	40 V	4822 122 30103
573, 574	Cap. ceramic	22 pF	2 %	100 V	5322 122 32143
575, 576	Cap. ceramic	470 nF	20 %	50 V	5322 122 33078
577	Cap. ceramic	330 pF	2 %	100 V	4822 122 31353
578, 579	Cap. ceramic	100 nF	10 %	50 V	5322 122 32941
580	Cap. ceramic	22 nF	+ 20/–90 %	40 V	4822 122 30103
581	Cap. ceramic	22 pF	2 %	100 V	5322 122 32143
582	Cap. ceramic	12 pF	2 %	100 V	4822 122 31056

Pos. no.	Description				Ordering code
RESISTORS / UNIT 2, DFS					
637	Res. metal film	619 Ω	0.1 %	0.25 W	5322 116 80212
639, 646	Res. metal film	1.87 kΩ	0.1 %	0.25 W	5322 116 80215
642, 649	Res. metal film	4.64 kΩ	0.1 %	0.25 W	5322 116 80216
643, 650	Res. metal film	1.69 kΩ	0.1 %	0.25 W	5322 116 80214
644, 651	Res. metal film	619 Ω	0.1 %	0.25 W	5322 116 80212
653, 660	Res. metal film	1.87 kΩ	0.1 %	0.25 W	5322 116 80215
656, 663	Res. metal film	4.64 kΩ	0.1 %	0.25 W	5322 116 80216
657, 664	Res. metal film	1.69 kΩ	0.1 %	0.25 W	5322 116 80214
658, 665	Res. metal film	619 Ω	0.1 %	0.25 W	5322 116 80212
667	Res. metal film	1.87 kΩ	0.1 %	0.25 W	5322 116 80215
670	Res. metal film	4.64 kΩ	0.1 %	0.25 W	5322 116 80216
671	Res. metal film	1.69 kΩ	0.1 %	0.25 W	5322 116 80214
672	Res. metal film	619 Ω	0.1 %	0.25 W	5322 116 80212
673	Res. metal film	11.5 kΩ	0.1 %	0.25 W	5322 116 51742
674	Res. metal film	9.53 kΩ	0.1 %	0.25 W	5322 116 80207
676	Potm. trimmer *	470 Ω	carb.	0.1 W	4822 100 10038
679	Res. metal film	1.87 kΩ	0.1 %	0.25 W	5322 116 80215
682, 683	Res. metal film	4.64 kΩ	0.1 %	0.25 W	5322 116 80216
684, 685	Res. metal film	1.69 kΩ	0.1 %	0.25 W	5322 116 80214
686	Res. metal film	11.5 kΩ	0.1 %	0.25 W	5322 116 51742
687	Res. metal film	9.53 kΩ	0.1 %	0.25 W	5322 116 80207
689	Potm. trimmer *	1 kΩ	carb.	0.1 W	4822 100 10037
693	Potm. trimmer *	4.7 kΩ	CERMET	0.5 W	5322 101 10509
701	Potm. trimmer *	220 Ω	carb.	0.1 W	4822 100 10019
CRYSTAL / UNIT 2, DFS					
810	Crystal	8.59 MHz			5322 242 72047
COILS / UNIT 2, DFS					
802	Wide band choke				5322 158 10271
803	Choke				5322 158 20458
804	Choke				5322 158 20459

* (see page 10-27)

Pos. no.	Description		Ordering code
UNIT 3, KEYBOARD DISPLAY			
INTEGRATED CIRCUITS / UNIT 3			
351	Integr. circuit	HEF4049BP	4822 209 10306
352	Integr. circuit	MM5450N	4822 209 10199
353	Integr. circuit	SAA3007	5322 209 72061
TRANSISTOR / UNIT 3			
301	Transistor	BD646	4822 130 41212
DIODE / UNIT 3			
409, 410	Diode	BAW62	4822 130 30613
LEDs, DISPLAYS / UNIT 3			
401-404	LED	PLED P314N-2	5322 130 80692
405-408	Display	LTM8628 unt. LO 08 1250	5322 130 90375
		SI35035 onw. LO 08 1251	5322 130 90491
CAPACITORS / UNIT 3			
501	Cap. electrolyt.	220 µH 16 V	4822 124 40196
502-504	Cap. ceramic	22 nF + 20/– 90 % 40 V	4822 122 30103
505, 506	Cap. ceramic	100 pF 2 % 100 V	4822 122 31316
507, 508	Cap. ceramic	22 nF + 20/– 90 % 40 V	4822 122 30103
SWITCHES / UNIT 3			
801	Key switch	M75120001	5322 276 14338
802-818	Key switch	M75120051	5322 276 14418
819, 820	Key switch	M75120001	5322 276 14338
821-828	Key switch	M75120051	5322 276 14418
829, 834	Key switch	M75120001	5322 276 14338
830-833	Key switch	M75120051	5322 276 14418
835-840	Key switch	M75120051	5322 276 14418
841	Key switch	M75120001	5322 276 14338
842	Key switch	M75120051	5322 276 14418
843-858	Key switch	M75120001	5322 276 14338
MISCELLANEOUS / UNIT 3			
860	Cer. resonator	455 kHz	5322 242 71606

Pos. no.	Description				Ordering code
UNIT 4, VIDEO AMPLIFIER (PM 5193 V)					
INTEGRATED CIRCUIT / UNIT 4					
301	Integrated circuit	HEF4001BP			4822 209 10246
TRANSISTORS / UNIT 4					
351, 352, 354	Transistor	BC548B			4822 130 40937
353	Transistor	BC548C			4822 130 44196
355, 356	Transistor	BC558C			5322 130 60068
DIODE / UNIT 4					
401	Diode	BA482			5322 130 34955
CAPACITORS / UNIT 4					
501, 506	Cap. electrolyt.	22 µF	20 %	35 V	4822 124 40434
502, 504, 505	Cap. electrolyt.	47 µF	20 %	10 V	5322 124 21391
503	Cap. ceramic	100 nF	10 %	50 V	5322 122 32941
507	Cap. ceramic	10 nF	+ 50/– 20 %	100 V	4822 122 31414
RESISTORS / UNIT 4					
604	Potm. trimmer*	1 kΩ	carb.	0.1 W	4822 100 10037
618	Potm. trimmer*	470 Ω	carb.	0.1 W	4822 100 10038
RELAIS / UNIT 4					
801, 802	Reed relais	5 V			5322 280 20281

* (see page 10-27)

Pos. no.	Description		Ordering code
UNIT 5, 10 MHz SYNCHRONISER (PM 5193 S)			
INTEGRATED CIRCUITS / UNIT 5			
315	Integr. circuit	N74F132N	5322 209 83342
317	Integr. circuit	PC74HCU04P	5322 209 11323
318	Integr. circuit	PC74HCT132P	4822 209 83044
319	Integr. circuit	PC74HCT390P	5322 209 11483
320, 322	Integr. circuit	PC74HCT4020P	5322 209 73329
321	Integr. circuit	PC74HCT21P	5322 209 11491
323	Integr. circuit	PC74HCT4046AP	5322 209 73332
325	Integr. circuit	LF356N	5322 209 86422
327	Integr. circuit	UA78GU1C	5322 209 85565
328	Integr. circuit	UA79GU1C	5322 209 86349
TRANSISTORS / UNIT 5			
355-358	Transistor	BC548B	4822 130 40937
359	Transistor	2N4035	5322 130 44201
360	Transistor	BC558B	4822 130 44197
361	Transistor	BF450	4822 130 44237
362, 363	Transistor	BC548B6	4822 130 40937
364, 365	Transistor	BC450	4822 130 44237
366	Transistor	BC558C	5322 130 60068
367	Transistor	2N4035	5322 130 44201
369	Transistor	BF240	4822 130 40902
DIODES / UNIT 5			
410, 411	Diode	BAW62	4822 130 30613
412	Diode	BAV45	5322 130 34037
413, 417	Diode	BAW62	4822 130 30613
414	Diode	BA481	5322 130 32239
415	Diode	BB112	4822 130 32227
418	Diode, ref.	BZX79C7V5	4822 130 30861
419	Diode, ref.	BZX79C3V9	4822 130 31981
420	Diode, ref.	BZX79C3V0	4822 130 31881
421	Diode, ref.	BZV462V0	4822 130 31248
422	Diode	BAW62	4822 130 30613
423	Diode, ref.	BZX79C9V1	4822 130 30862

Pos. no.	Description				Ordering code
CAPACITORS / UNIT 5					
510	Cap. ceramic	56 pF	2 %	100 V	4822 122 32027
511	Cap. foil	1 nF	1 %	250 V	4822 121 50566
512, 514	Cap. ceramic	100 nF	10 %	50 V	5322 122 33108
513	Cap. ceramic	10 nF	+ 50/– 20 %	100 V	4822 122 31414
515, 516	Cap. ceramic	100 pF	2 %	100 V	4822 122 31316
517	Cap. trimmer	2,5 – 60 pF		100 V	5322 125 50243
518, 525	Cap. ceramic	100 nF	10 %	50 V	5322 122 33108
519-521	Cap. ceramic	1 nF	10 %	50 V	4822 122 30027
522	Cap. electrolyt.	1 µF	20 %	63 V	4822 124 21913
523	Cap. ceramic	100 pF	2 %	100 V	4822 122 31316
524	Cap. trimmer	2,5 – 27 pF		100 V	5322 125 54083
526	Cap. ceramic	27 pF	2 %	100 V	4822 122 30045
528	Cap. ceramic	56 pF	2 %	100 V	4822 122 32027
529	Cap. ceramic	22 pF	2 %	100 V	5322 122 32143
530-532	Cap. ceramic	10 nF	+ 50/– 20 %	100 V	4822 122 31414
533	Cap. ceramic	100 nF	10 %	50 V	5322 122 33108
534, 536	Cap. ceramic	100 nF	5 %	50 V	5322 122 30108
535	Capacitor	1 µF	5 %		5322 121 42398
537-539	Cap. electrolyt.	100 µF	20 %	16 V	4822 124 21912
540	Cap. ceramic	1,5 nF	10 %	500 V	4822 122 31169
541, 544	Cap. ceramic	100 nF	10 %	50 V	5322 122 33108
542	Cap. ceramic	22 pF	2 %	100 V	5322 122 32143
543	Cap. ceramic	470 nF	20 %	100 V	5322 122 33078
546	Cap. electrolyt.	2,2 µF	20 %	63 V	4822 124 40244
547	Cap. electrolyt.	1 µF	20 %	63 V	4822 124 21913
548	Cap. electrolyt.	100 µF	20 %	16 V	4822 124 21912
549	Cap. ceramic	33 pF	2 %	100 V	5322 122 32072
552	Cap. ceramic	1 nF	10 %	100 V	4822 122 30027
554	Cap. ceramic	10 nF	+ 50/– 20 %	100 V	4822 122 31414
555	Cap. ceramic	100 nF	10 %	50 V	5322 122 33108
556	Cap. ceramic	27 pF	2 %	100 V	4822 122 30045
557-559	Cap. ceramic	10 nF	+ 50/– 20 %	100 V	4822 122 31414
560, 561	Cap. ceramic	100 nF	10 %	50 V	5322 122 33108
562-564	Cap. electrolyt.	100 µF	20 %	16 V	4822 124 21912
565	Cap. electrolyt.	220 µF	20 %	25 V	4822 124 41393
566	Cap. electrolyt.	150 µF	50 %	35 V	5322 124 41613
567-570	Cap. ceramic	100 nF	10 %	50 V	5322 122 33108
RESISTORS / UNIT 5					
624	Potm. trimmer	1 kΩ			4822 101 10792
663	Potm. trimmer	10 kΩ			5322 100 20692
CRYSTAL / UNIT 5					
800	Crystal	10 MHz			5322 242 72235
COILS / UNIT 5					
810	Coil	2.2 µH			5322 152 20694
813	Coil	1 µH			5322 152 20693

CODING SYSTEM FOR STANDARD RESISTORS

All resistors not listed are type MRS 16, 1 %, 0.4 W coding as follows:

4822 050 1 xxx x

Value in Ω — xxx; x Factor

8 ≙ x 0.01
9 ≙ x 0.1
1 ≙ x 1
2 ≙ x 10
3 ≙ x 100
4 ≙ x 1000
5 ≙ x 10000

e.g. 4822 050 11052 ≙ 1K05
4822 050 12059 ≙ 20.5 Ω
4822 050 17874 ≙ 787 kΩ

From LO-10 1451 onwards:

CERMET and carbon potentiometers replaced by dustproof potentiometers

Value		Service code no.	Value	Service code no.
47 Ω	carb.	4822 100 10476	—— see note	————
100 Ω	CERMET	5322 101 14011	100 Ω	5322 101 10873
100 Ω	carb.	4822 100 10075		
220 Ω	CERMET	4822 100 10359	250 Ω	5322 101 10874
220 Ω	carb.	4822 100 10019		
470 Ω	CERMET	5322 101 14047	500 Ω	5322 101 10871
470 Ω	carb.	4822 100 10038		
1 kΩ	CERMET	4822 100 10254	1 kΩ	5322 101 10872
1 kΩ	carb.	4822 100 10037		
2.2 kΩ	CERMET	5322 101 14008	2.5 kΩ	5322 101 10875
2.2 kΩ	carb.	4822 100 10029		
4.7 kΩ	CERMET	5322 101 10509	5 kΩ	5322 101 10876
4.7 kΩ	carb.	4822 100 10036		
10 kΩ	carb.	4822 100 10035	10 kΩ	5322 101 10869
22 kΩ	carb.	4822 100 10051	25 kΩ	5322 101 10877
100 kΩ	carb.	4822 100 10052	100 kΩ	5322 101 10878

Note: Potentiometer used for UNIT 1, PLL/VCO pos. no. 721; altered to 100 Ω.

The dustproof potentiometers are mechanical compatible.
For instruments with CERMET and carbon potentiometers spare parts are available on stock too.

CONTENTS OF FIGURES

Fig. 28 Unit 1, adjusting elements
Fig. 29 Unit 2, adjusting elements
Fig. 30 Blockdiagram
Fig. 31 Front view
Fig. 32 Rear view
Fig. 33 Overall circuit diagram
Fig. 34 Unit 3, keyboard/display, component lay-out
Fig. 35 Unit 3, keyboard/display, circuit diagram
Fig. 36 Unit 4, video amplifier; component lay-out, circuit diagram
Fig. 37 Unit 1, component lay-out (overview)
Fig. 38 Unit 1, power supply, component lay-out
Fig. 39 Unit 1, power supply, circuit diagram
Fig. 40 Unit 1, pulse generator, component lay-out
Fig. 41 Unit 1, pulse generator, circuit diagram
Fig. 42 Unit 1, PLL/VCO, component lay-out
Fig. 43 Unit 1, PLL/VCO, circuit diagram
Fig. 44 Unit 1, output amplifier, circuit diagram
Fig. 45 Unit 1, output amplifier, component lay-out
Fig. 46 Unit 1, modulator, component lay-out
Fig. 47 Unit 1, modulator, circuit diagram
Fig. 48 Unit 2, CPU/DFS, component lay-out
Fig. 49 Unit 2, CPU (Central Processing Unit), circuit diagram
Fig. 50 Unit 2, DFS (Digital Frequency Synthesizer), circuit diagram
Fig. 51 Unit 5, 10 MHz synchroniser; component lay-out, circuit diagram

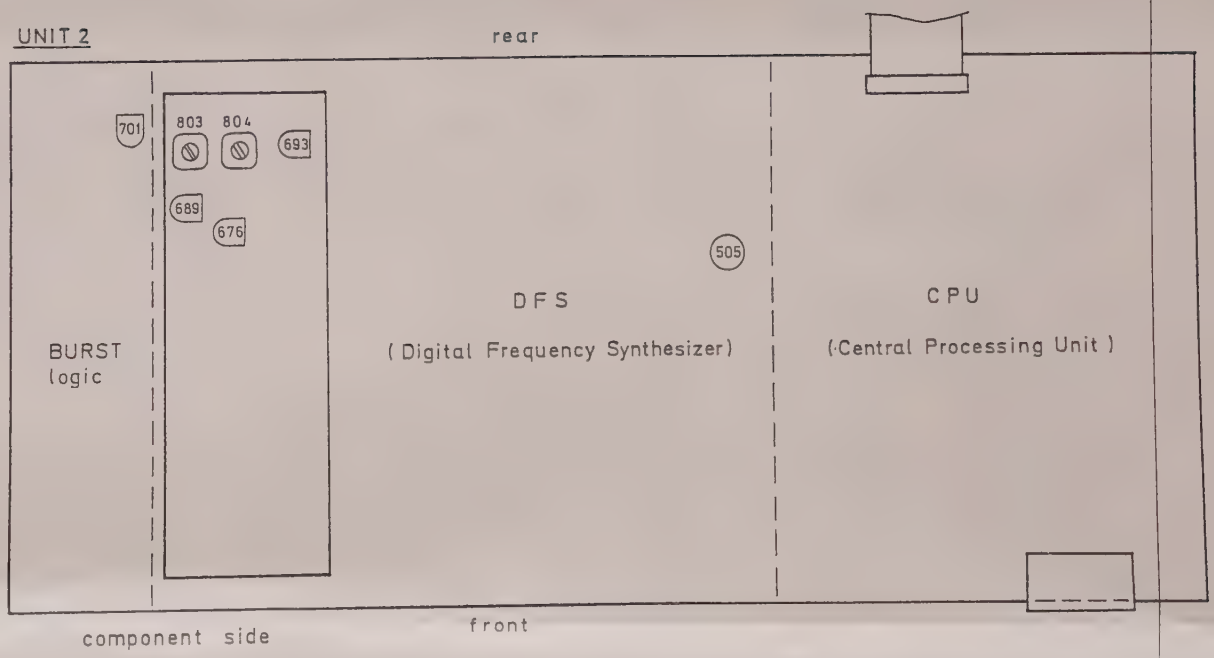

Fig. 28 Unit 1, adjusting elements

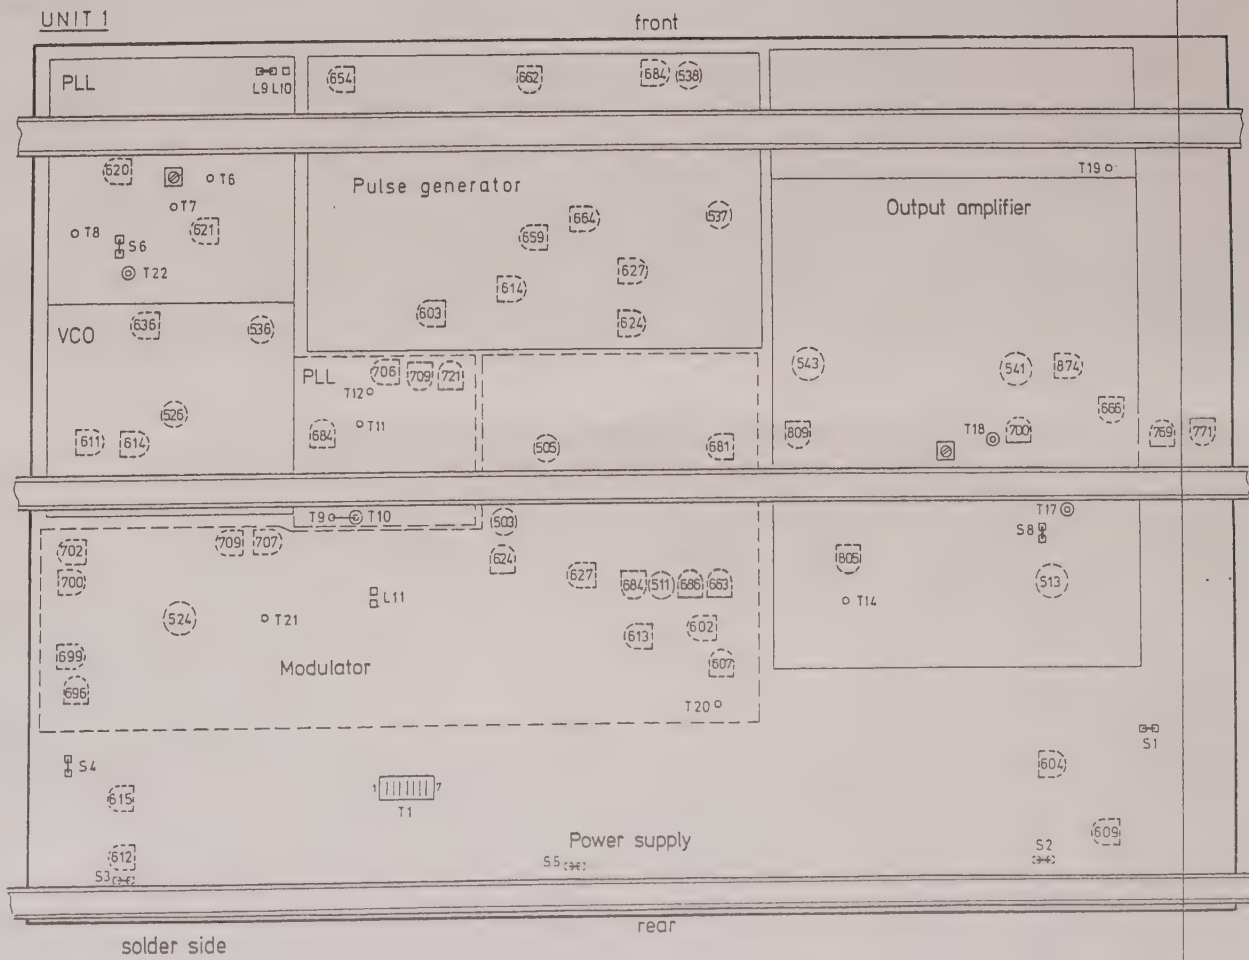

Fig. 29 Unit 2, adjusting elements

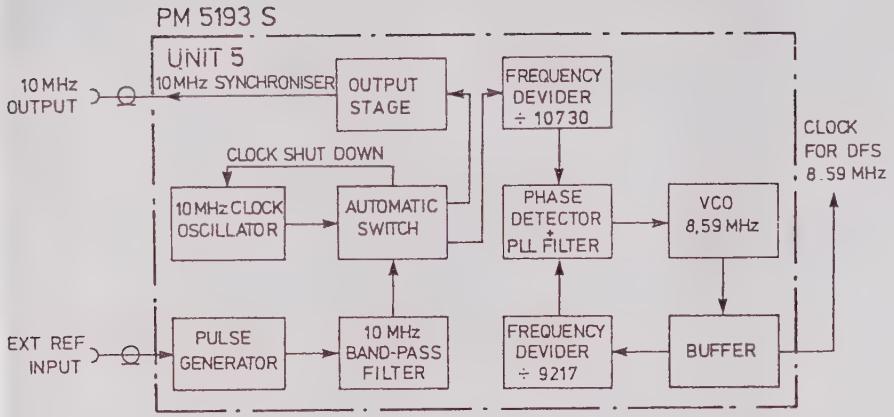

Fig. 30 A

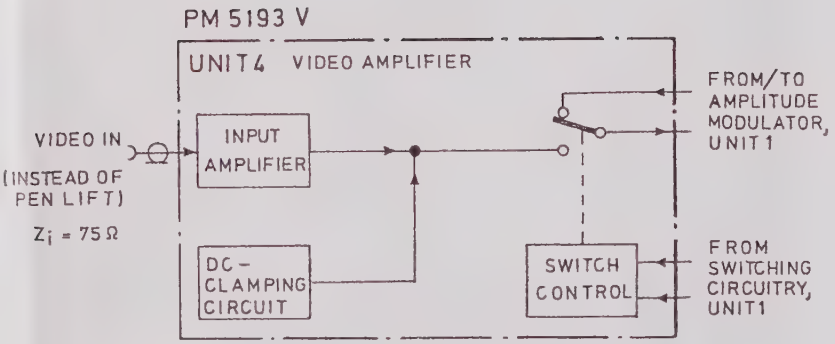

Fig. 30 B

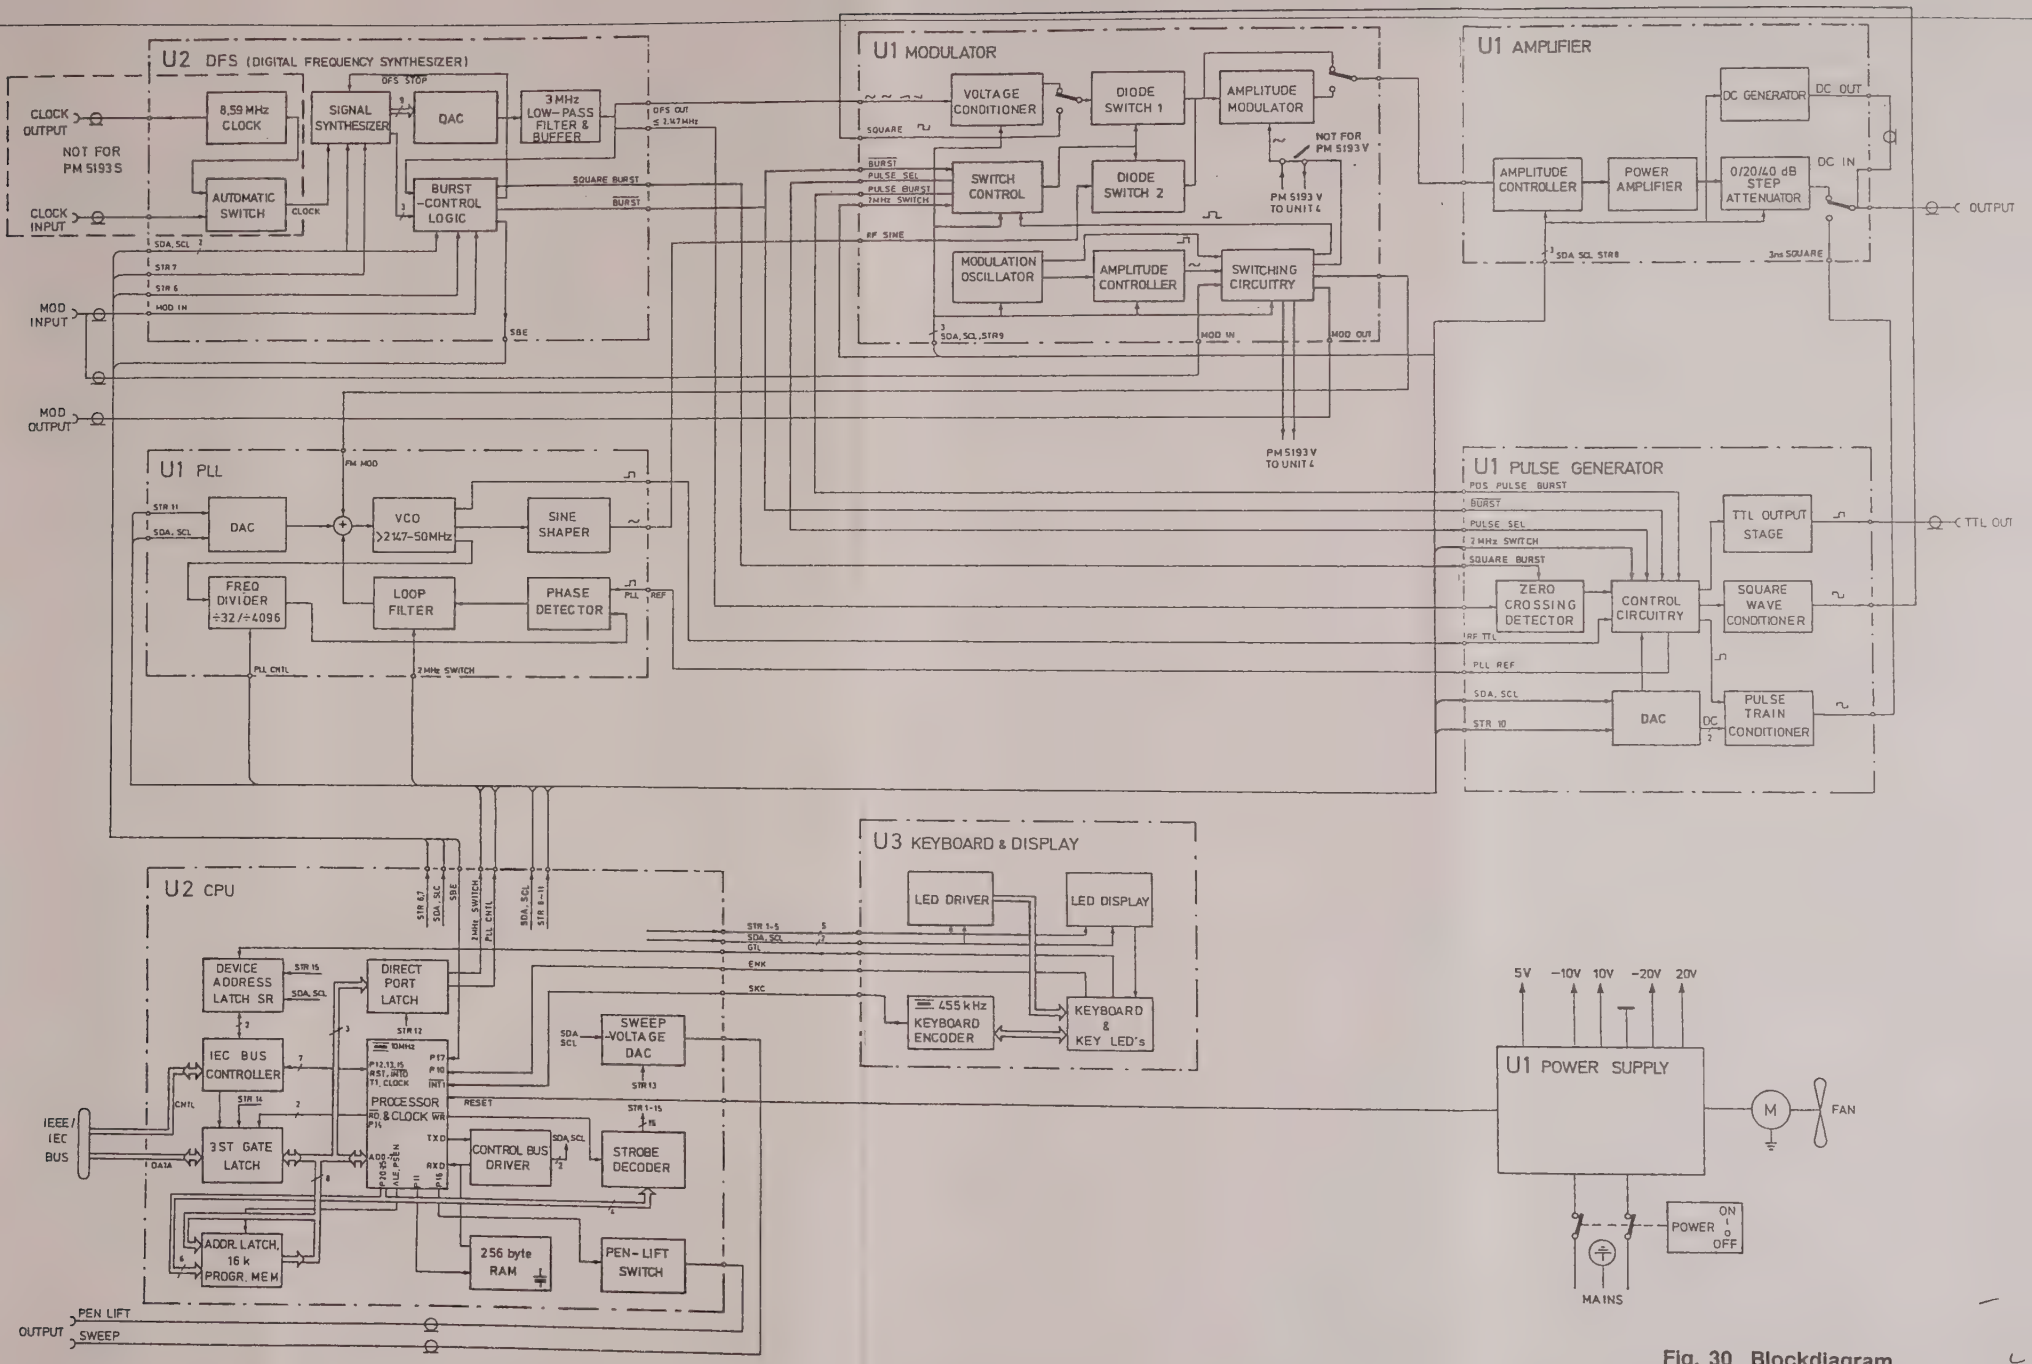

Fig. 30 Blockdiagram

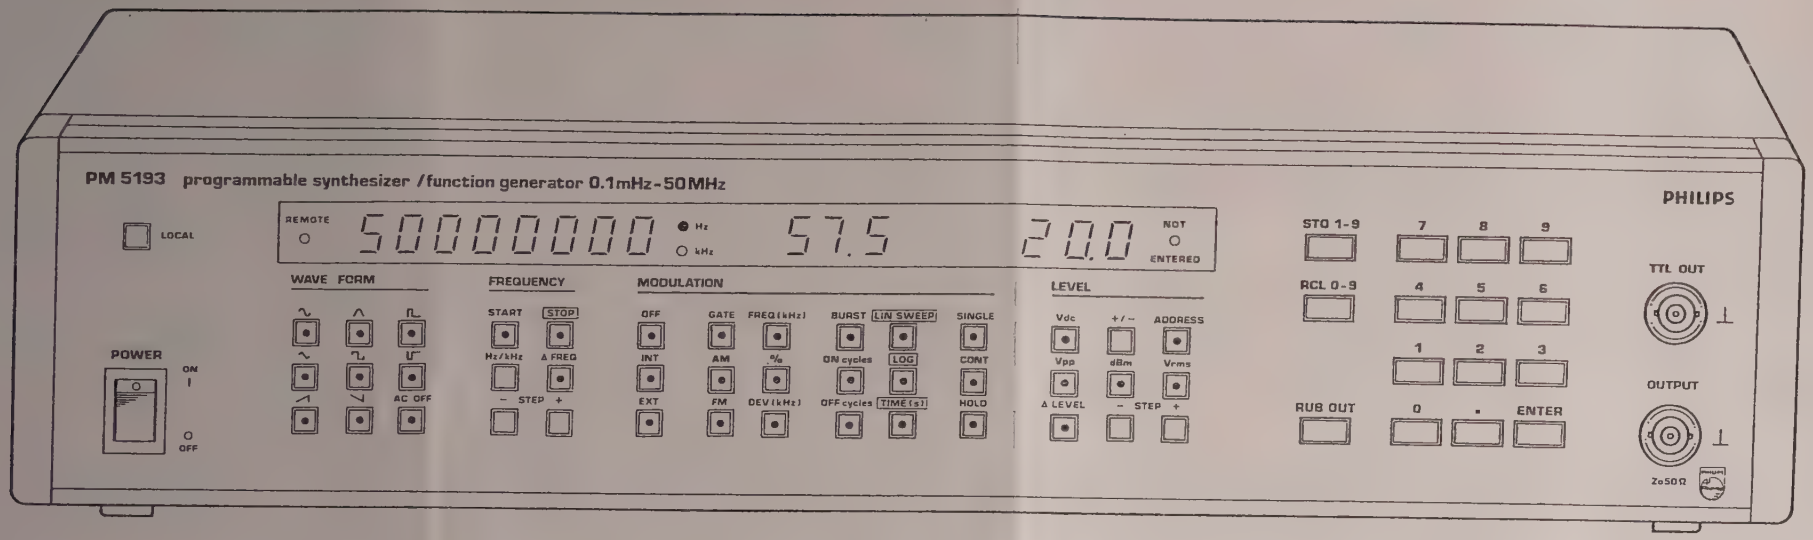

Fig. 31 Front view

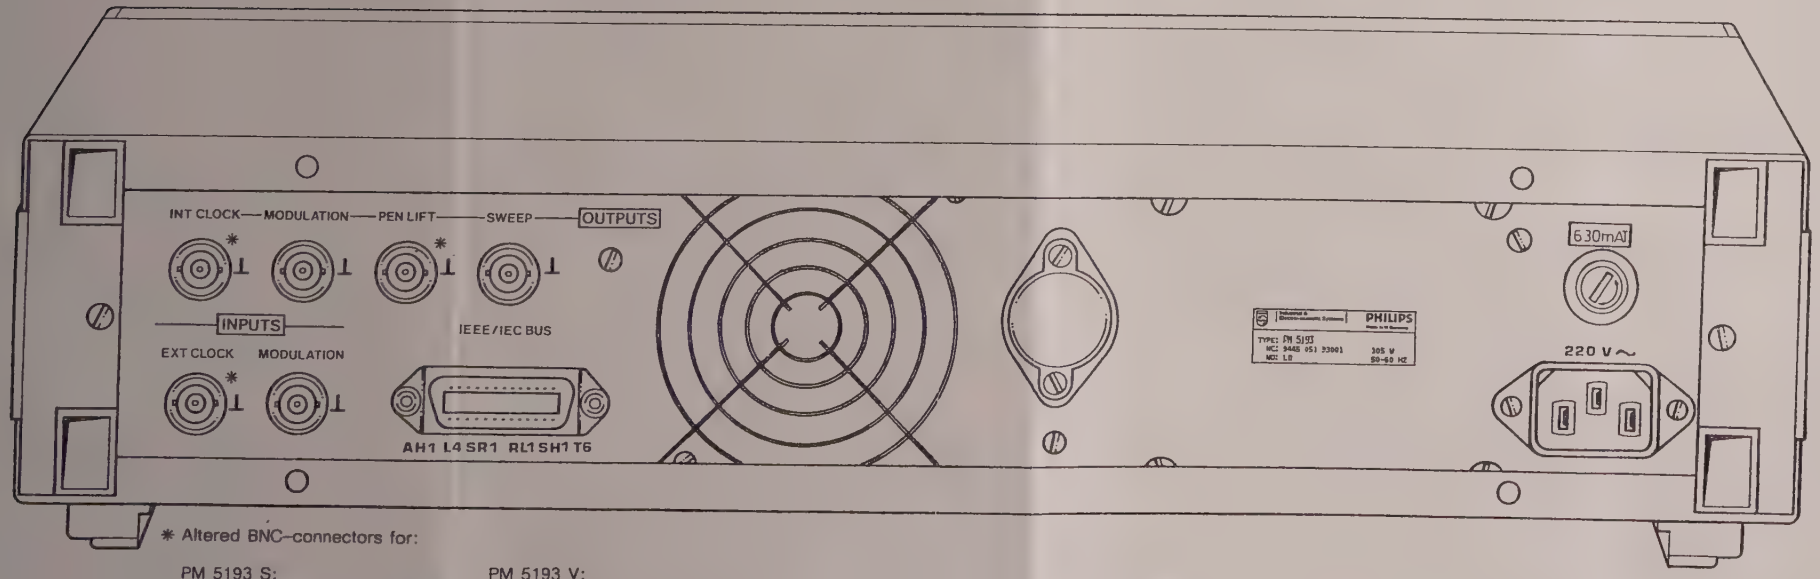

* Altered BNC-connectors for:

PM 5193 S:
EXT REF instead of EXT CLOCK
10 MHz instead of INT CLOCK

PM 5193 V:
VIDEO IN instead of PEN LIFT

Fig. 32 Rear view

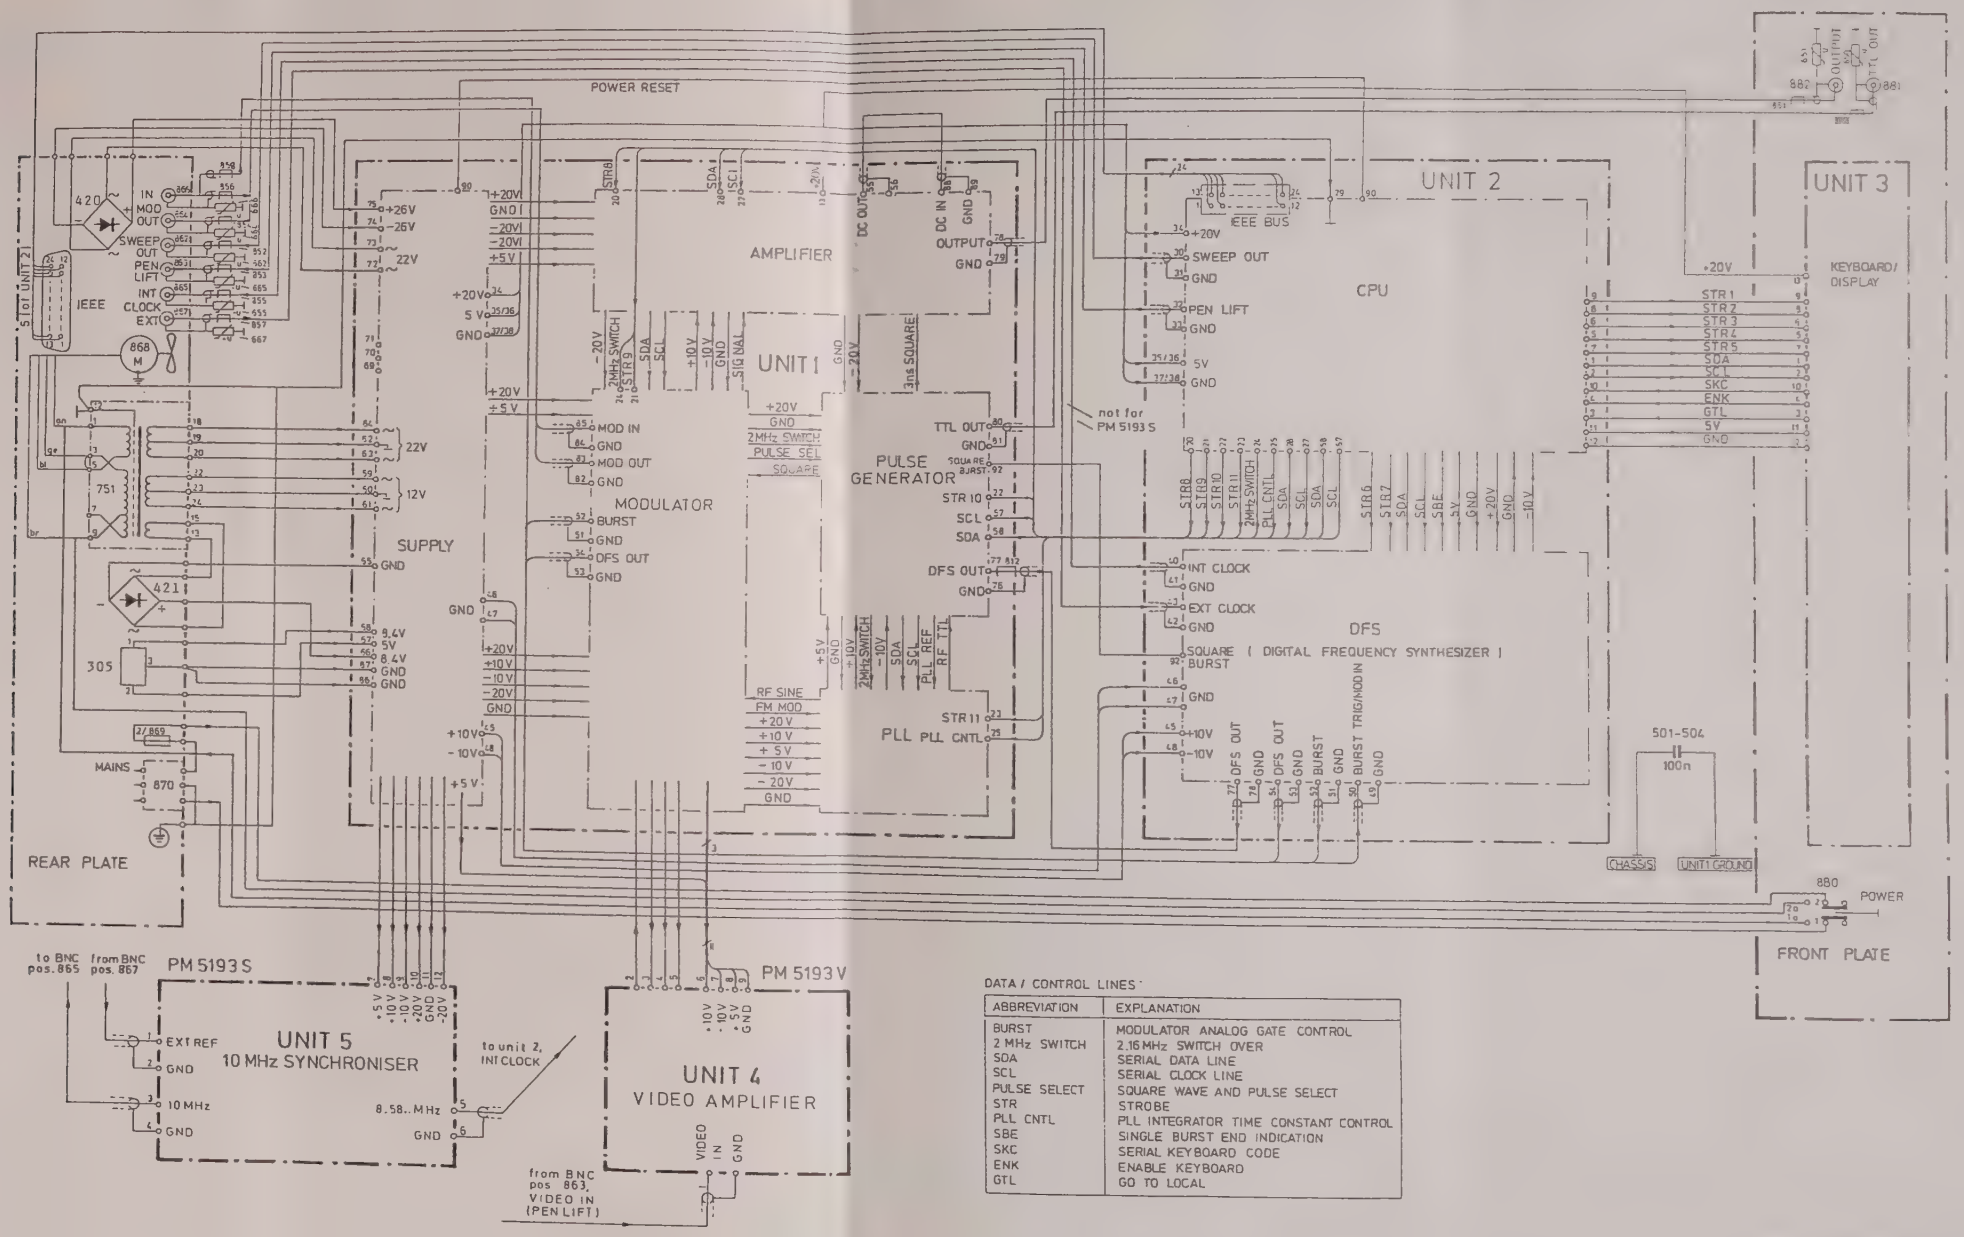

DATA / CONTROL LINES

ABBREVIATION	EXPLANATION
BURST	MODULATOR ANALOG GATE CONTROL
2 MHz SWITCH	2.16 MHz SWITCH OVER
SDA	SERIAL DATA LINE
SCL	SERIAL CLOCK LINE
PULSE SELECT	SQUARE WAVE AND PULSE SELECT
STR	STROBE
PLL CNTL	PLL INTEGRATOR TIME CONSTANT CONTROL
SBE	SINGLE BURST END INDICATION
SKC	SERIAL KEYBOARD CODE
ENK	ENABLE KEYBOARD
GTL	GO TO LOCAL

Fig. 33 Overall circuitdiagram

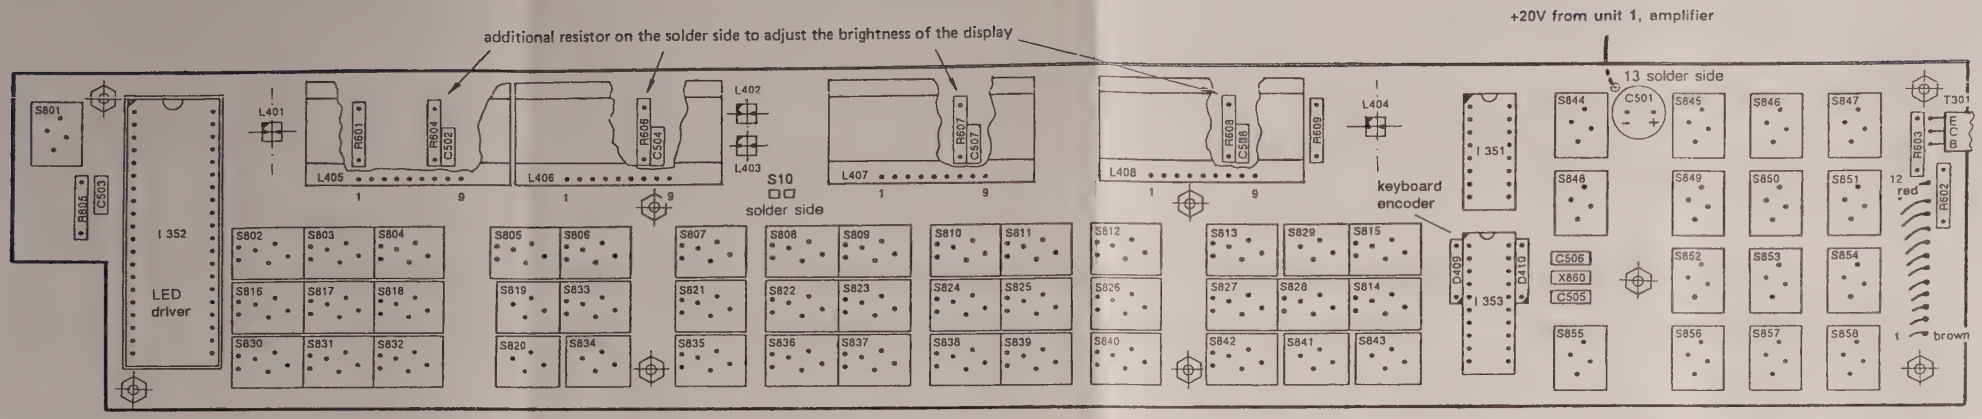

Brightness adjustment of displays

1. Open + 5 V supply of UNIT 3 at CIS-connector, pin 11, and connect an amperemeter.
   (It is recommended to use the extension cable of the service kit.)
2. Set the display you want to adjust to e. g. digit 1 (two segments) and measure current.
3. Set the display to e. g. 11 (two segments more than before) and measure current again.
   The difference may not exceed 10 mA per segment, in this case 20 mA;
   note that the decimal point is a segment too.
   Adjustment is done by resistor 604, 606, 607 resp. 608

Observe that no further display segments or LEDs are switched on or off, between both measurements.

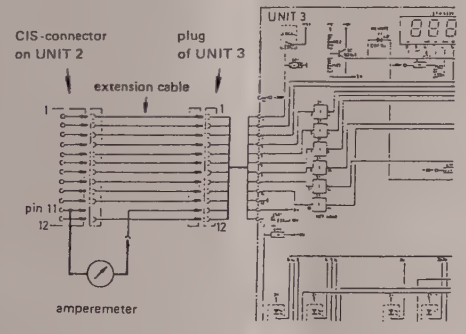

PM 5193 from LO - 08 1251 onwards
is equipped with displays type SI 35035, serv. code no. 5322 130 90491

Distinction can easily be done by the space between the digits

- For instruments from LO - . . . onwards (see above) you should only build in the type SI 35035.
- For instruments up to above-mentioned LO - no. it is recommended to use still type LTM 86 . . ..
  If the stock is empty a new display can be built in;
  for this adjustment to the same brightness is necessary for the new one.
- If you want to replace all displays by new ones, you may do so.
  In this case a new adjustment for each display is necessary.

Mounting position of LEDs

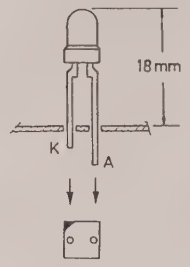

Symbol identification:

Distinction of displays

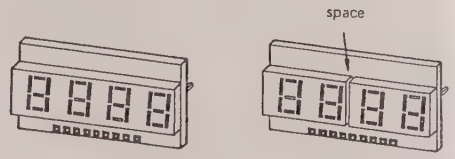

LTM 8639 KP

SI 35035

Fig. 34 Unit 3, keyboard/display component lay-out

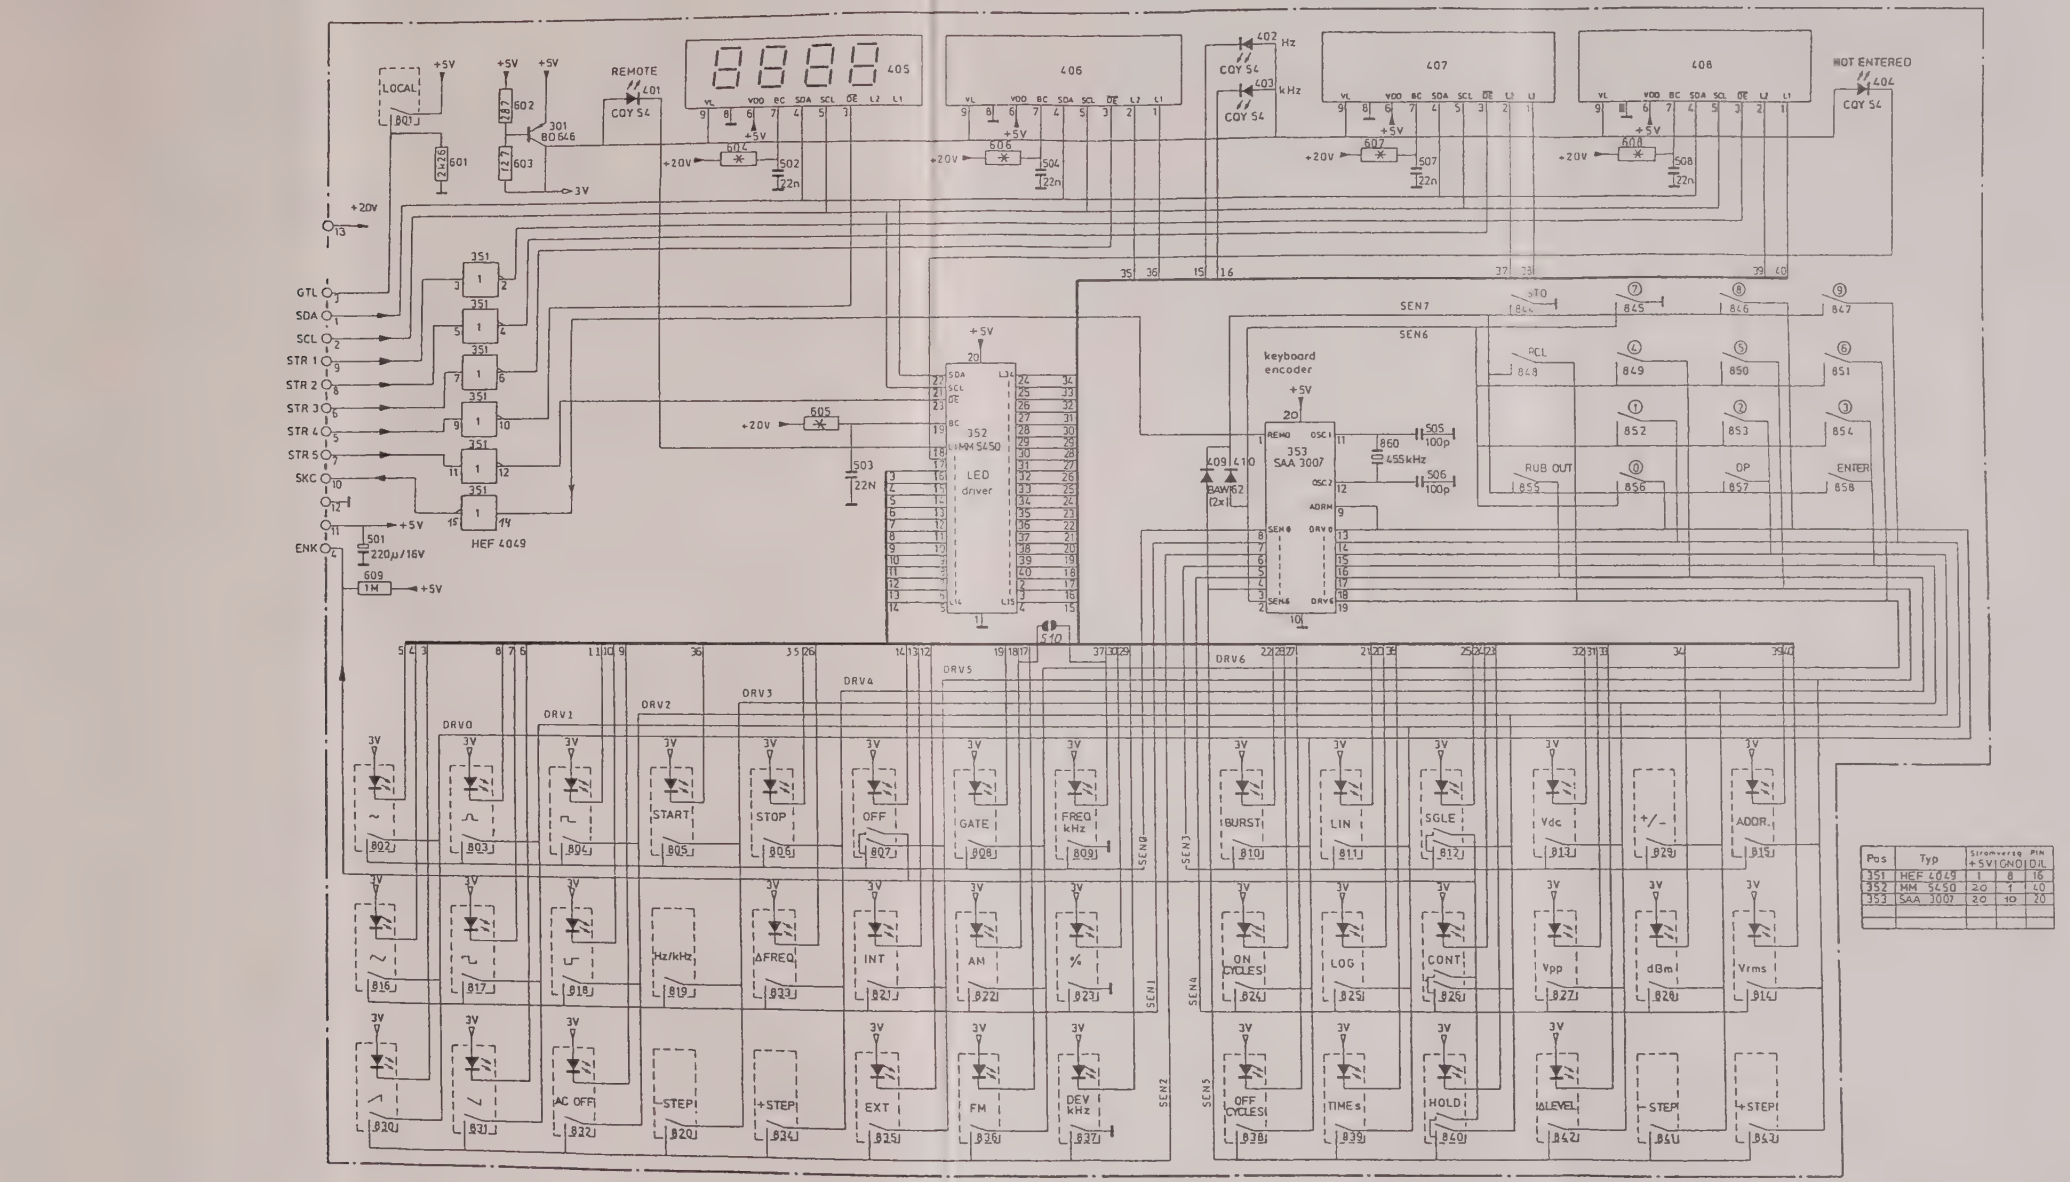

Pos	Typ	Stromversorg	+5V	GND	DIL
351	HEF 4049		1	8	16
352	MM 5450		20	1	40
353	SAA 3007		20	10	20

Fig. 35 Unit 3, keyboard/display

PM 5193 V only

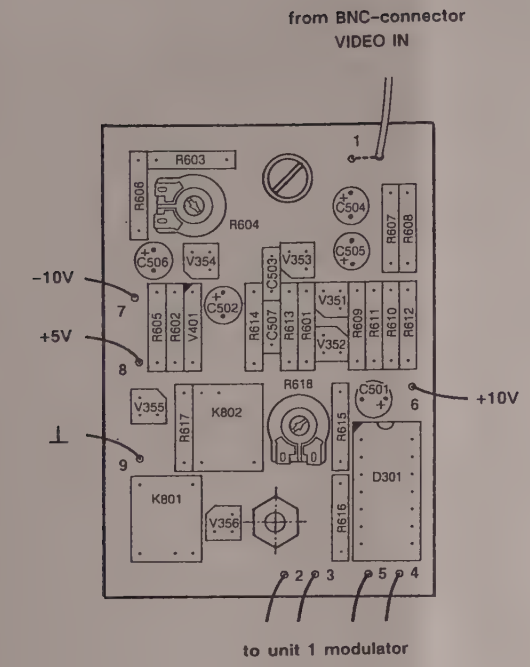

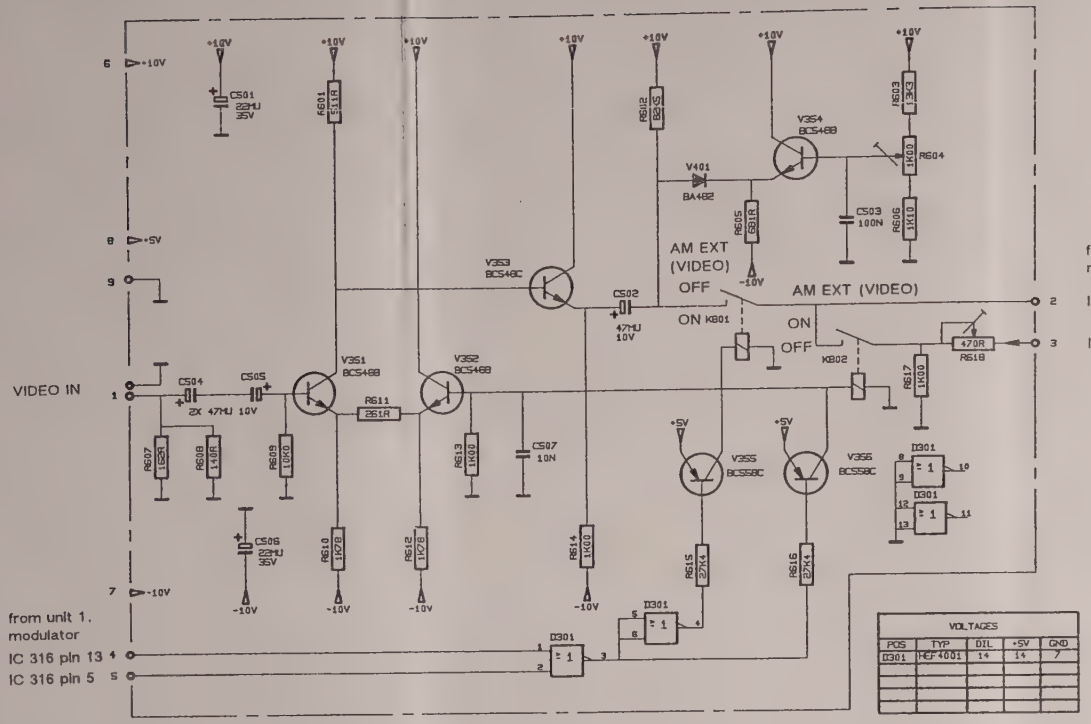

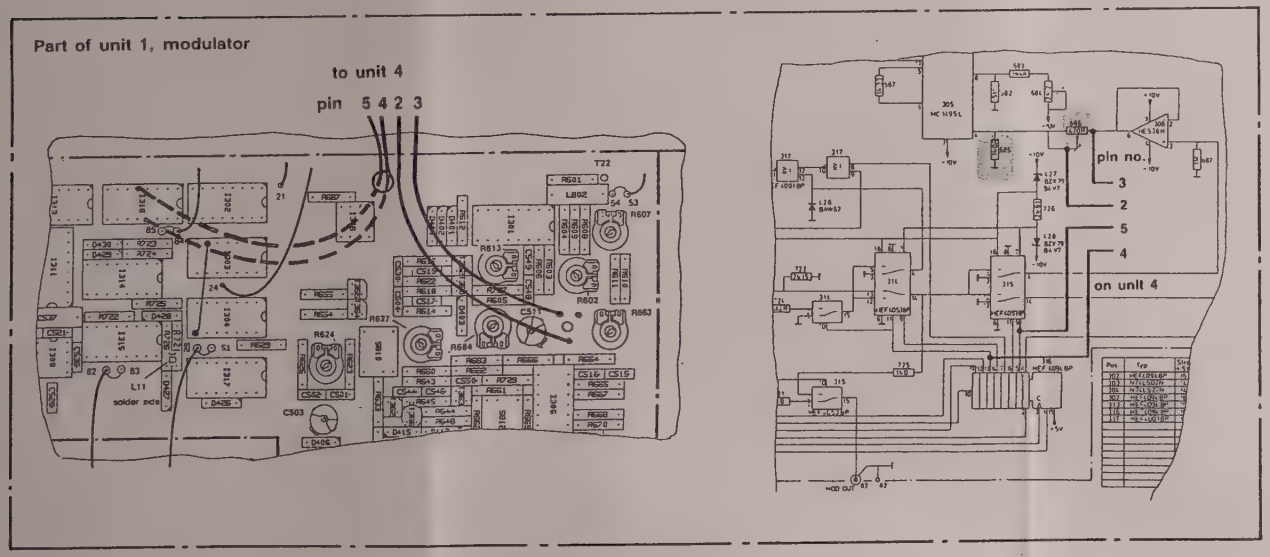

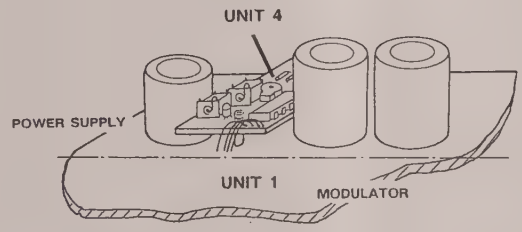

Location of unit 4

Fig. 36 Unit 4, video amplifier: component lay-out
circuit diagramm

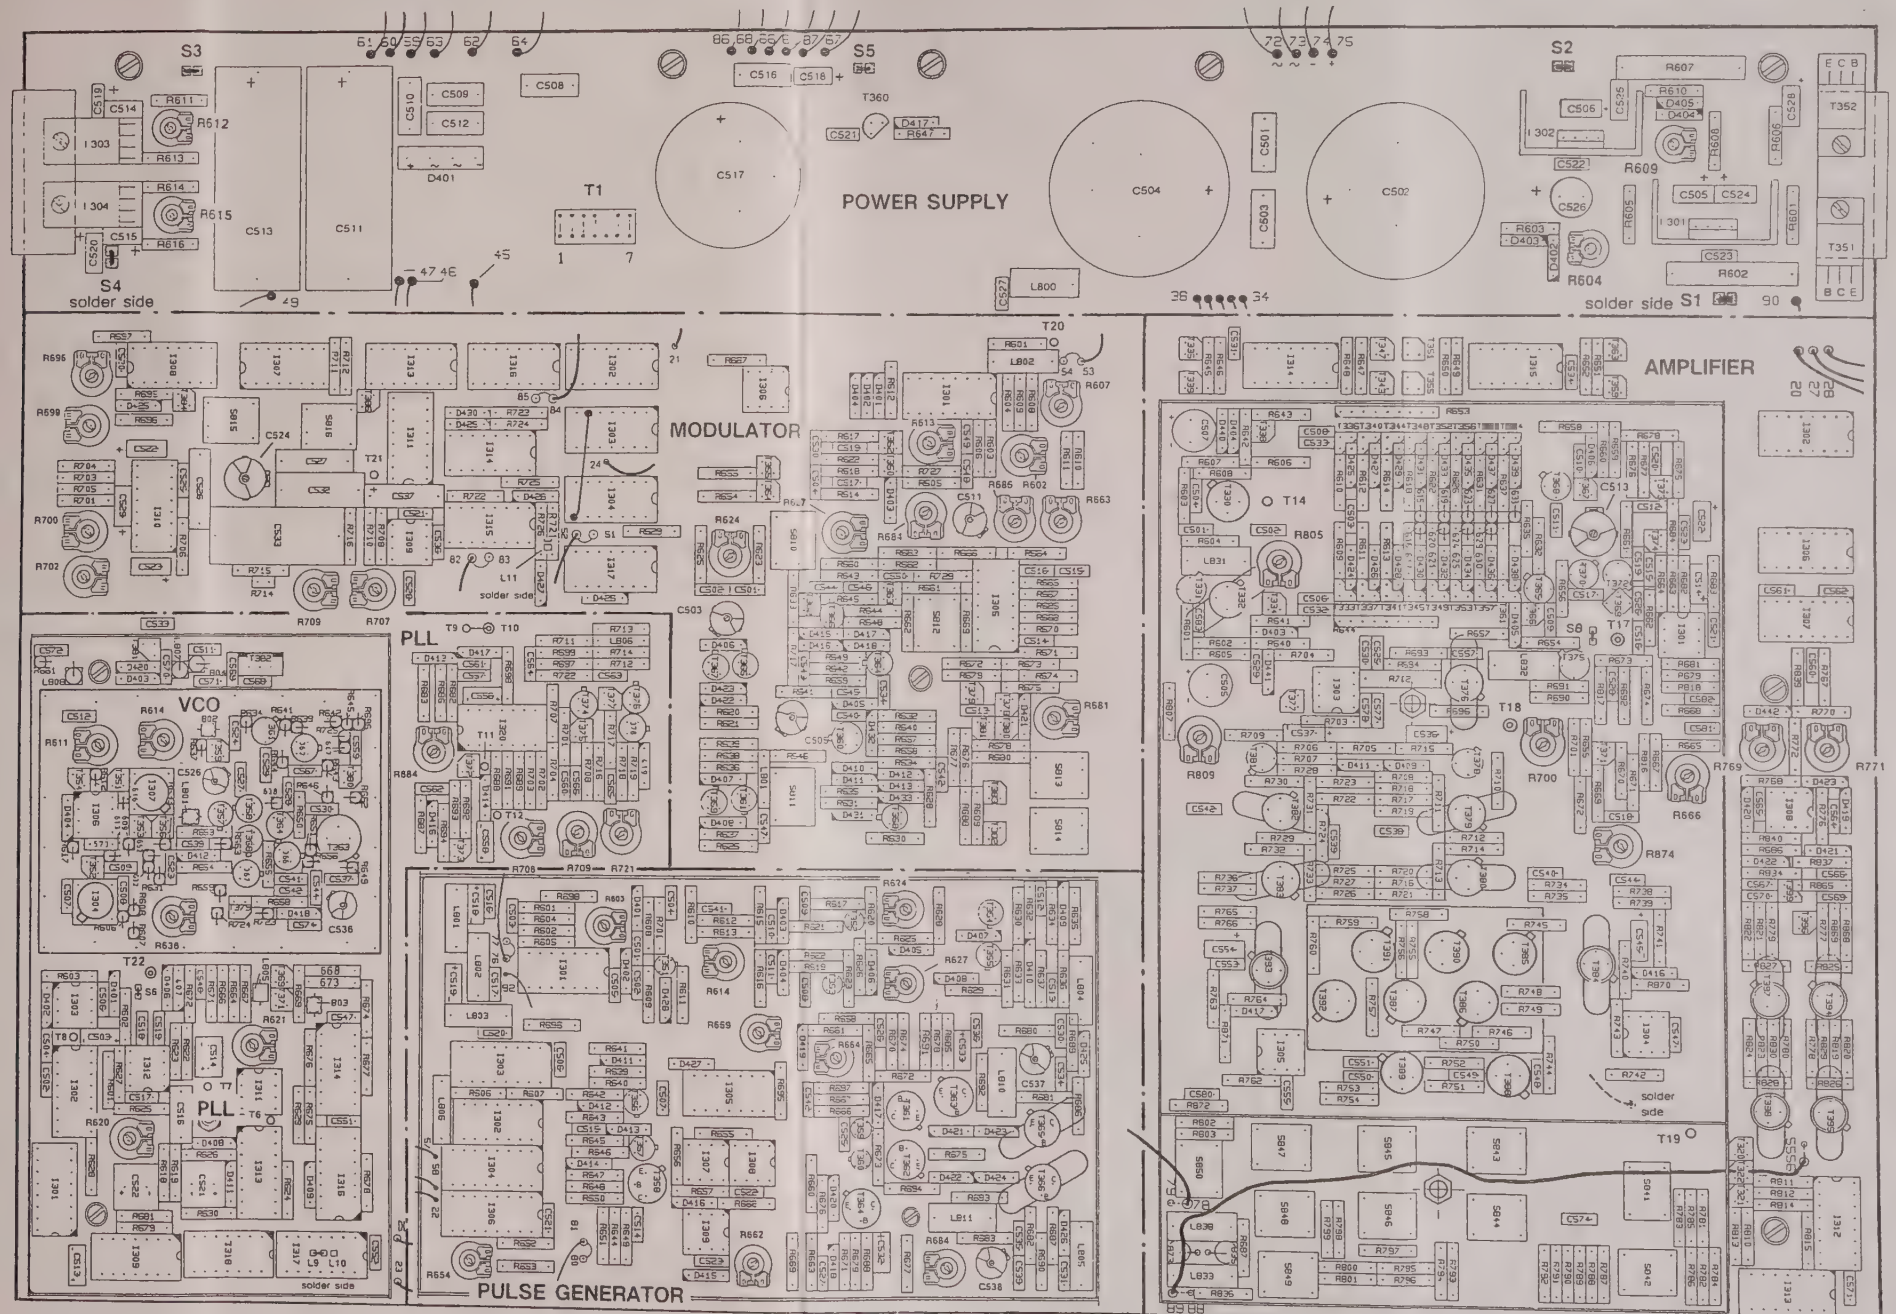

Details see figures 38, 40, 42, 44, 46

Fig. 37 Unit 1, component lay-out (overview)

Connections to components mounted on the rear plate see fig. 33, "Overall circuitdiagram"

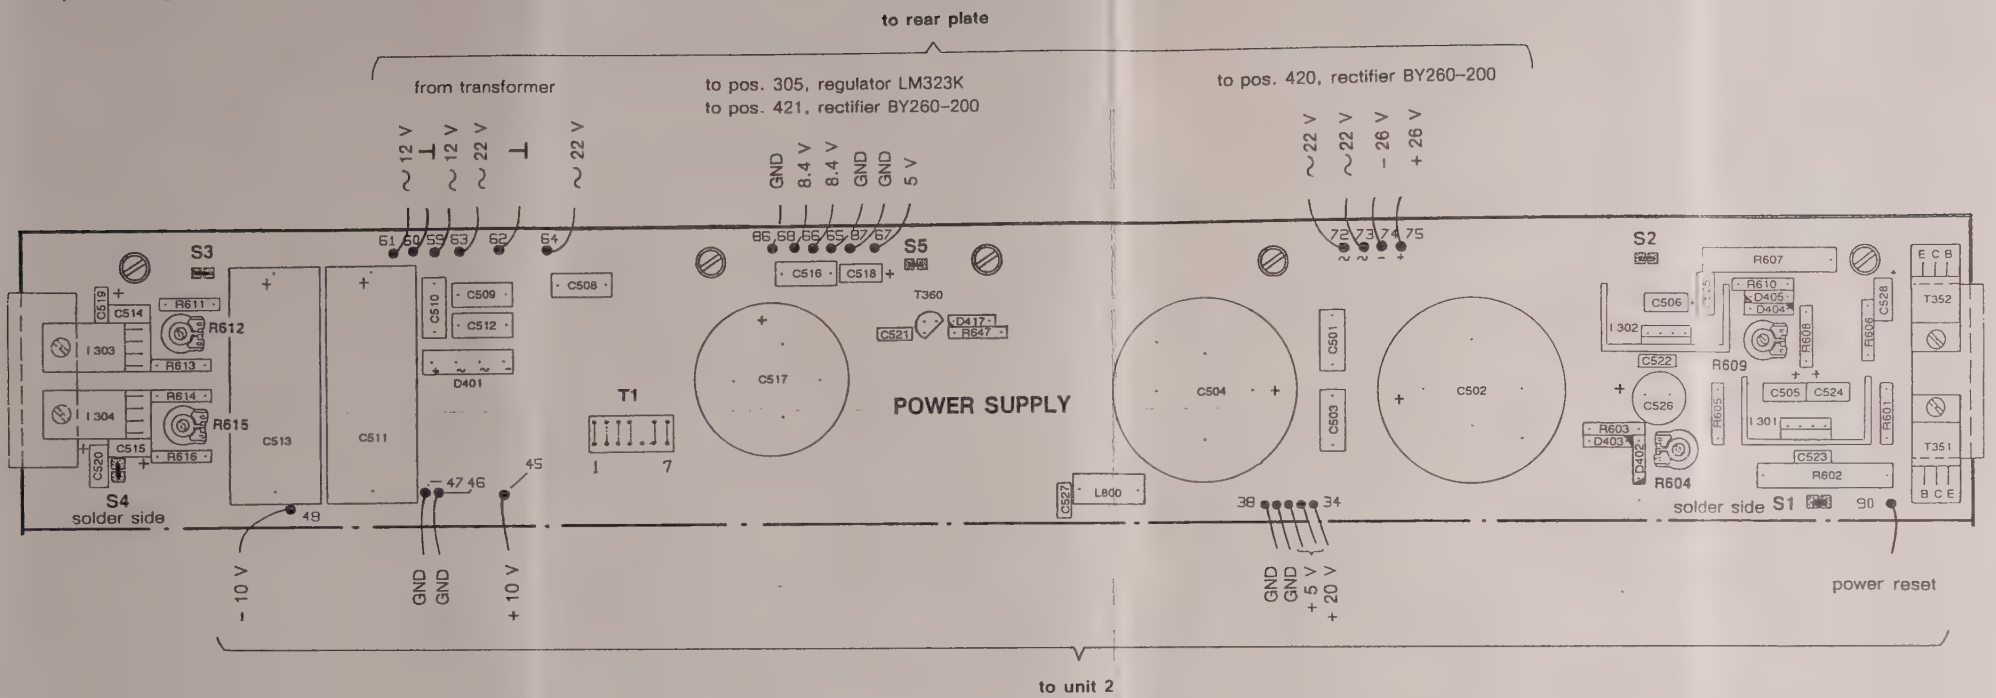

Location on unit 1

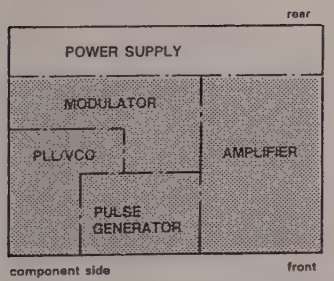

Symbol identification:

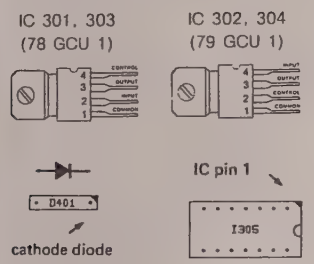

Fig. 38 Unit 1, power supply component lay-out

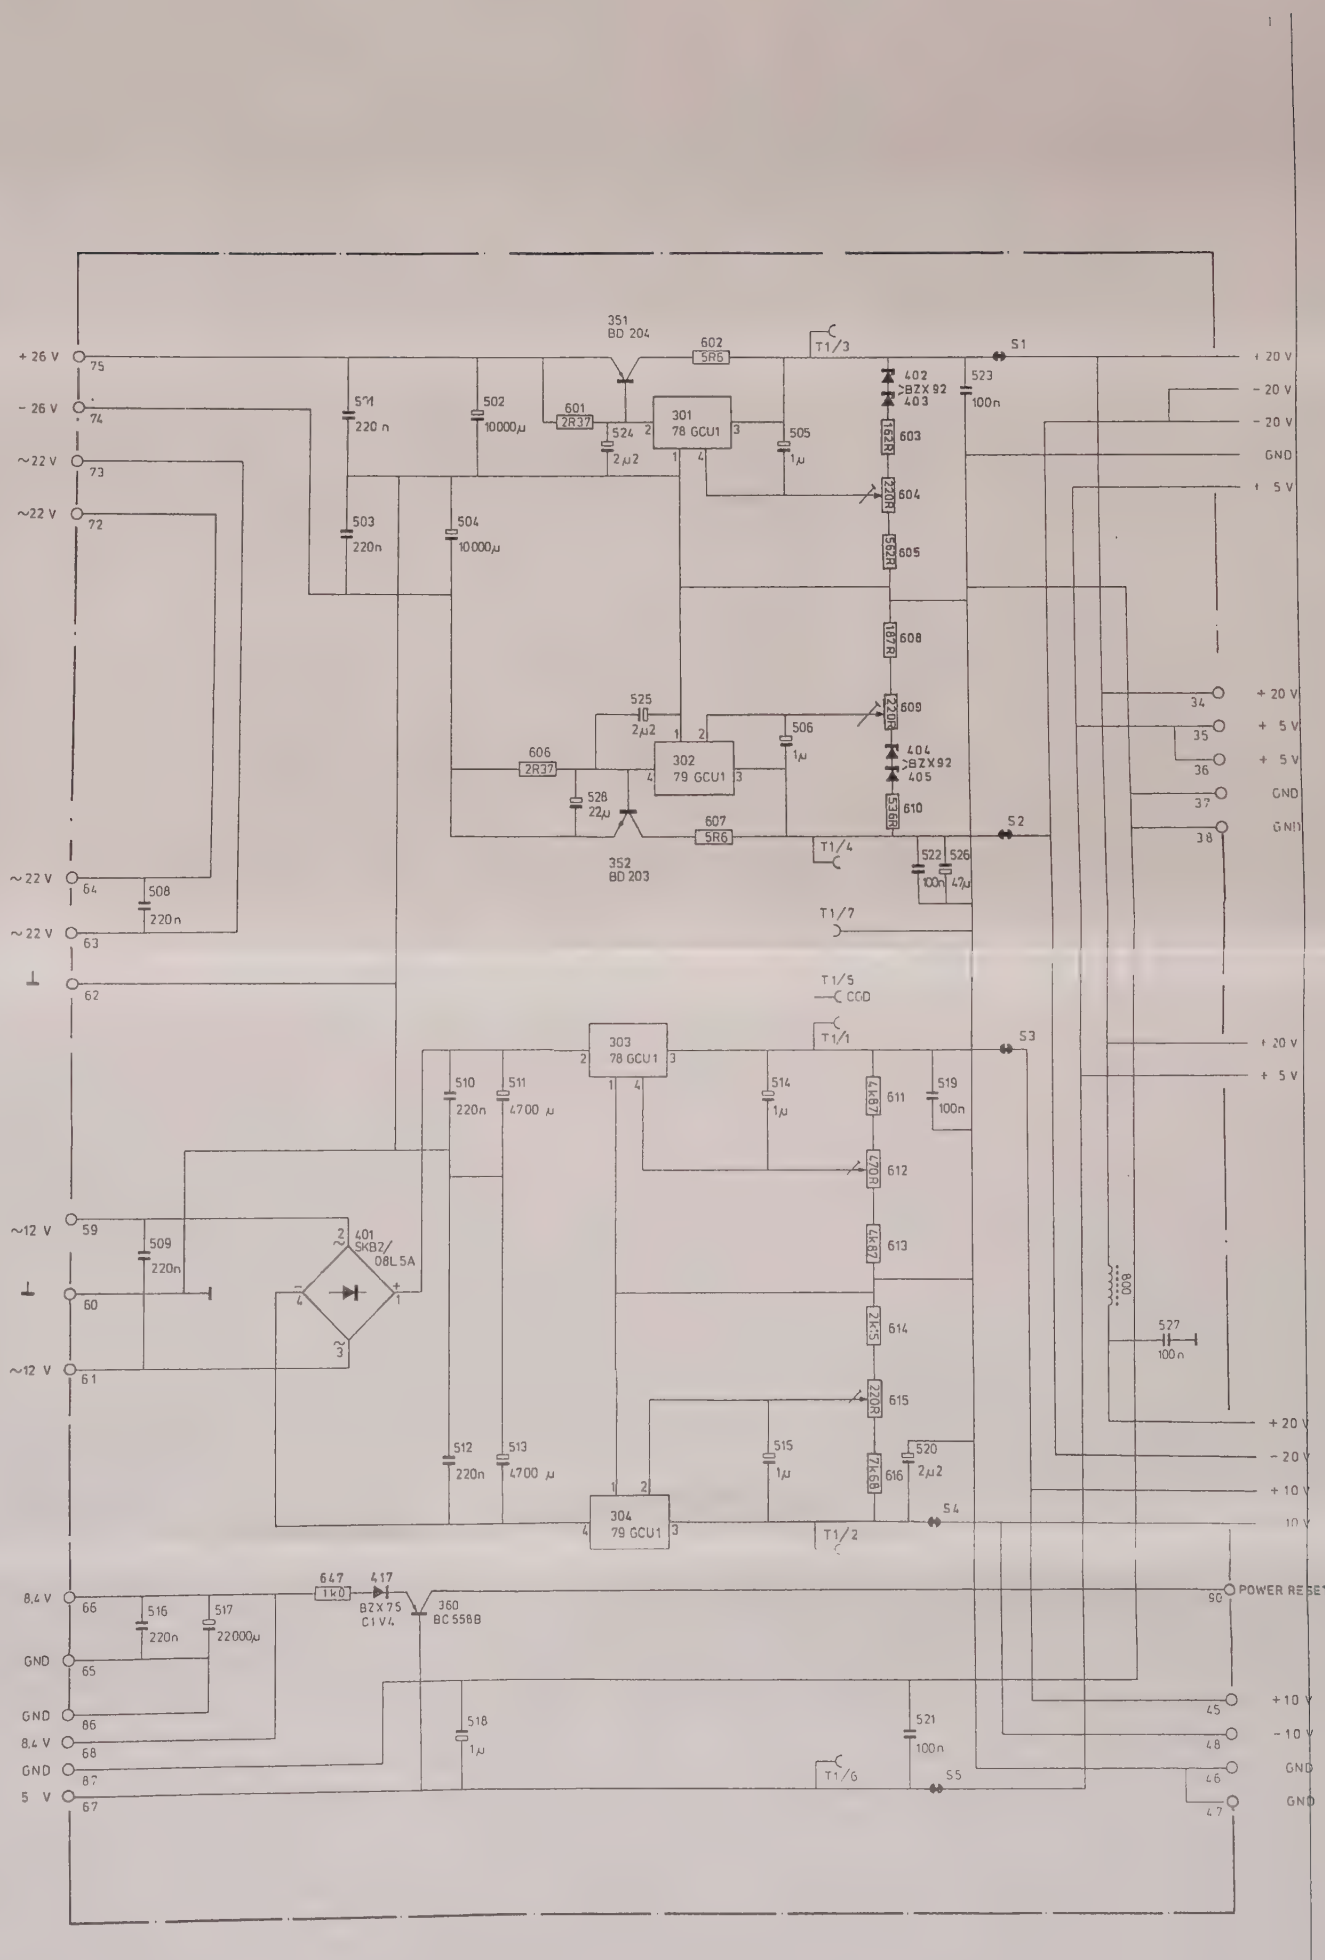

Fig. 39 Unit 1, power supply

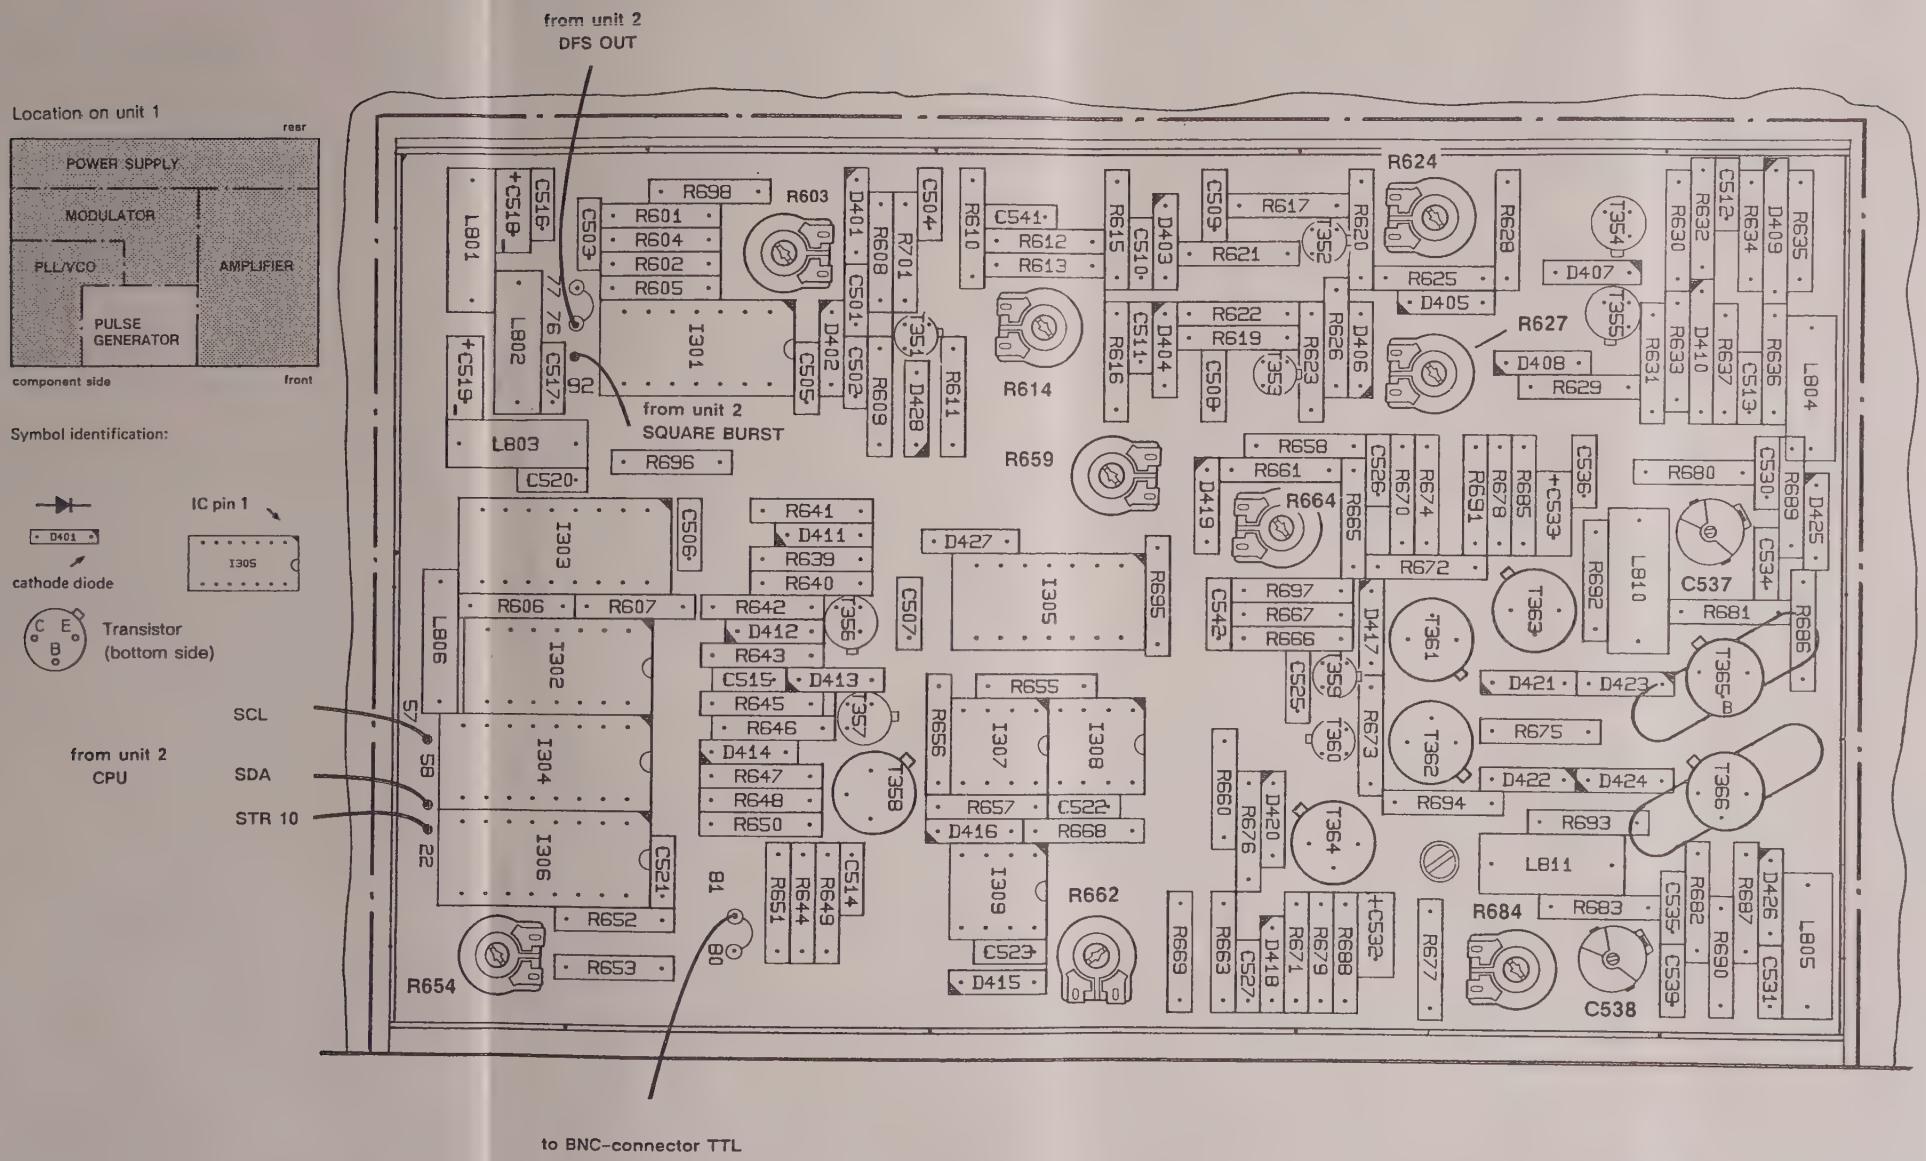

Fig. 40 Unit 1, pulse generator component lay-out

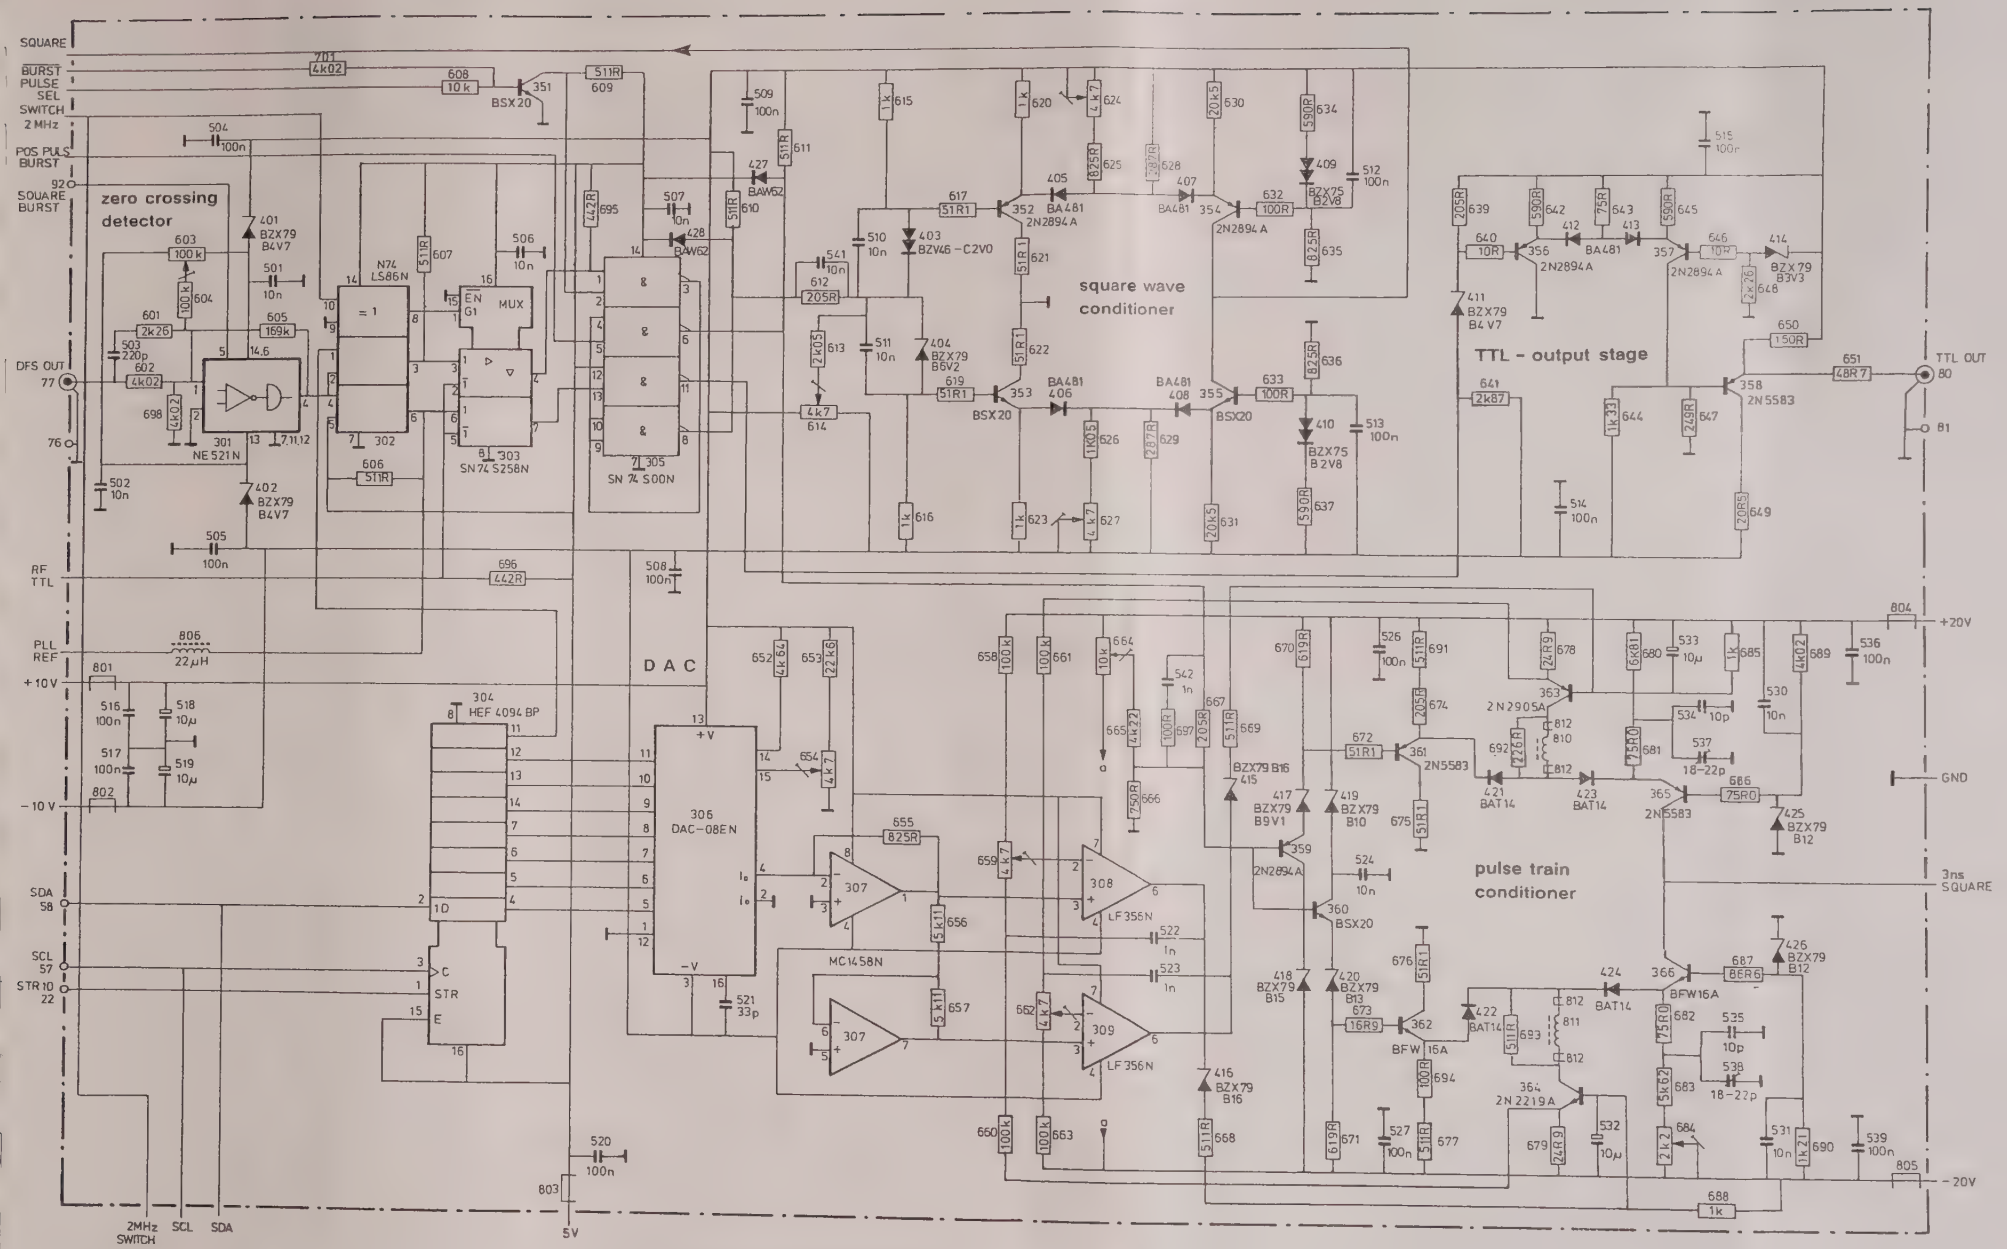

Fig. 41 Unit 1, pulse generator

Symbol identification:



Transistor
(bottom side)

Regulator pos.T382
(UA 7815 UC)

Op.ampl.pos.304, 307
(LF 256 H)

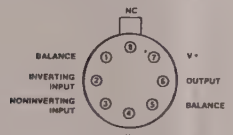

bottom side

Location on unit 1

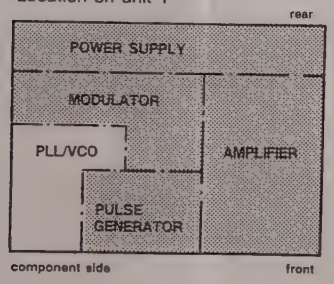

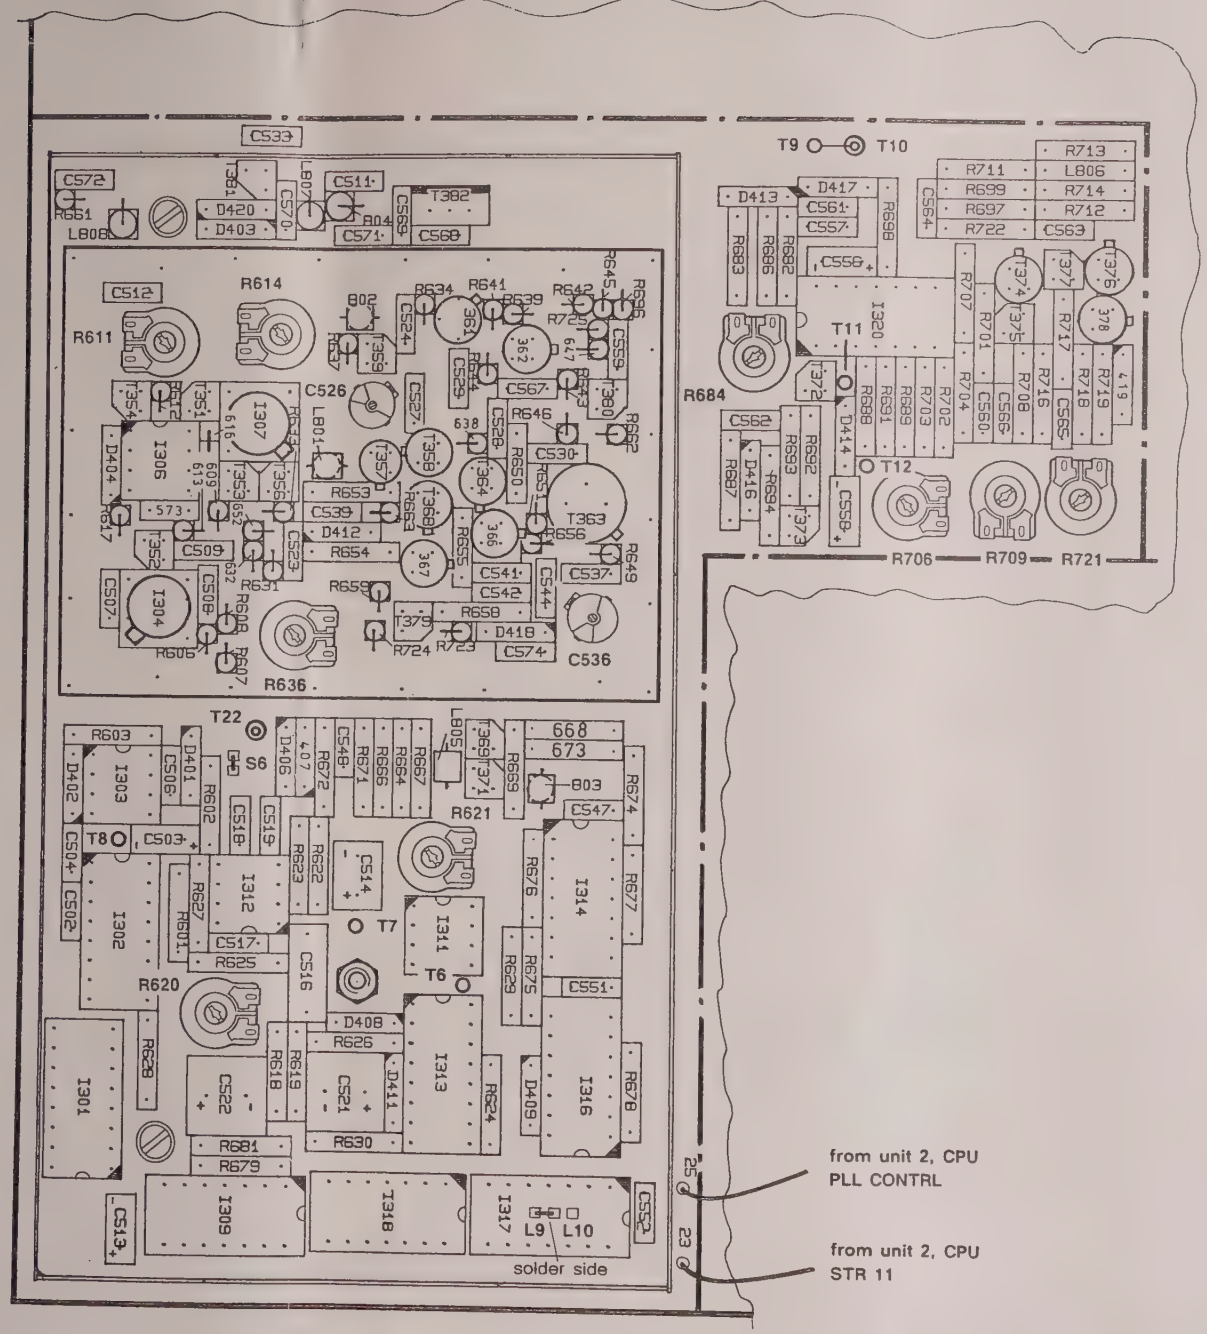

Fig. 42 Unit 1, PLL/VCO
component lay-out

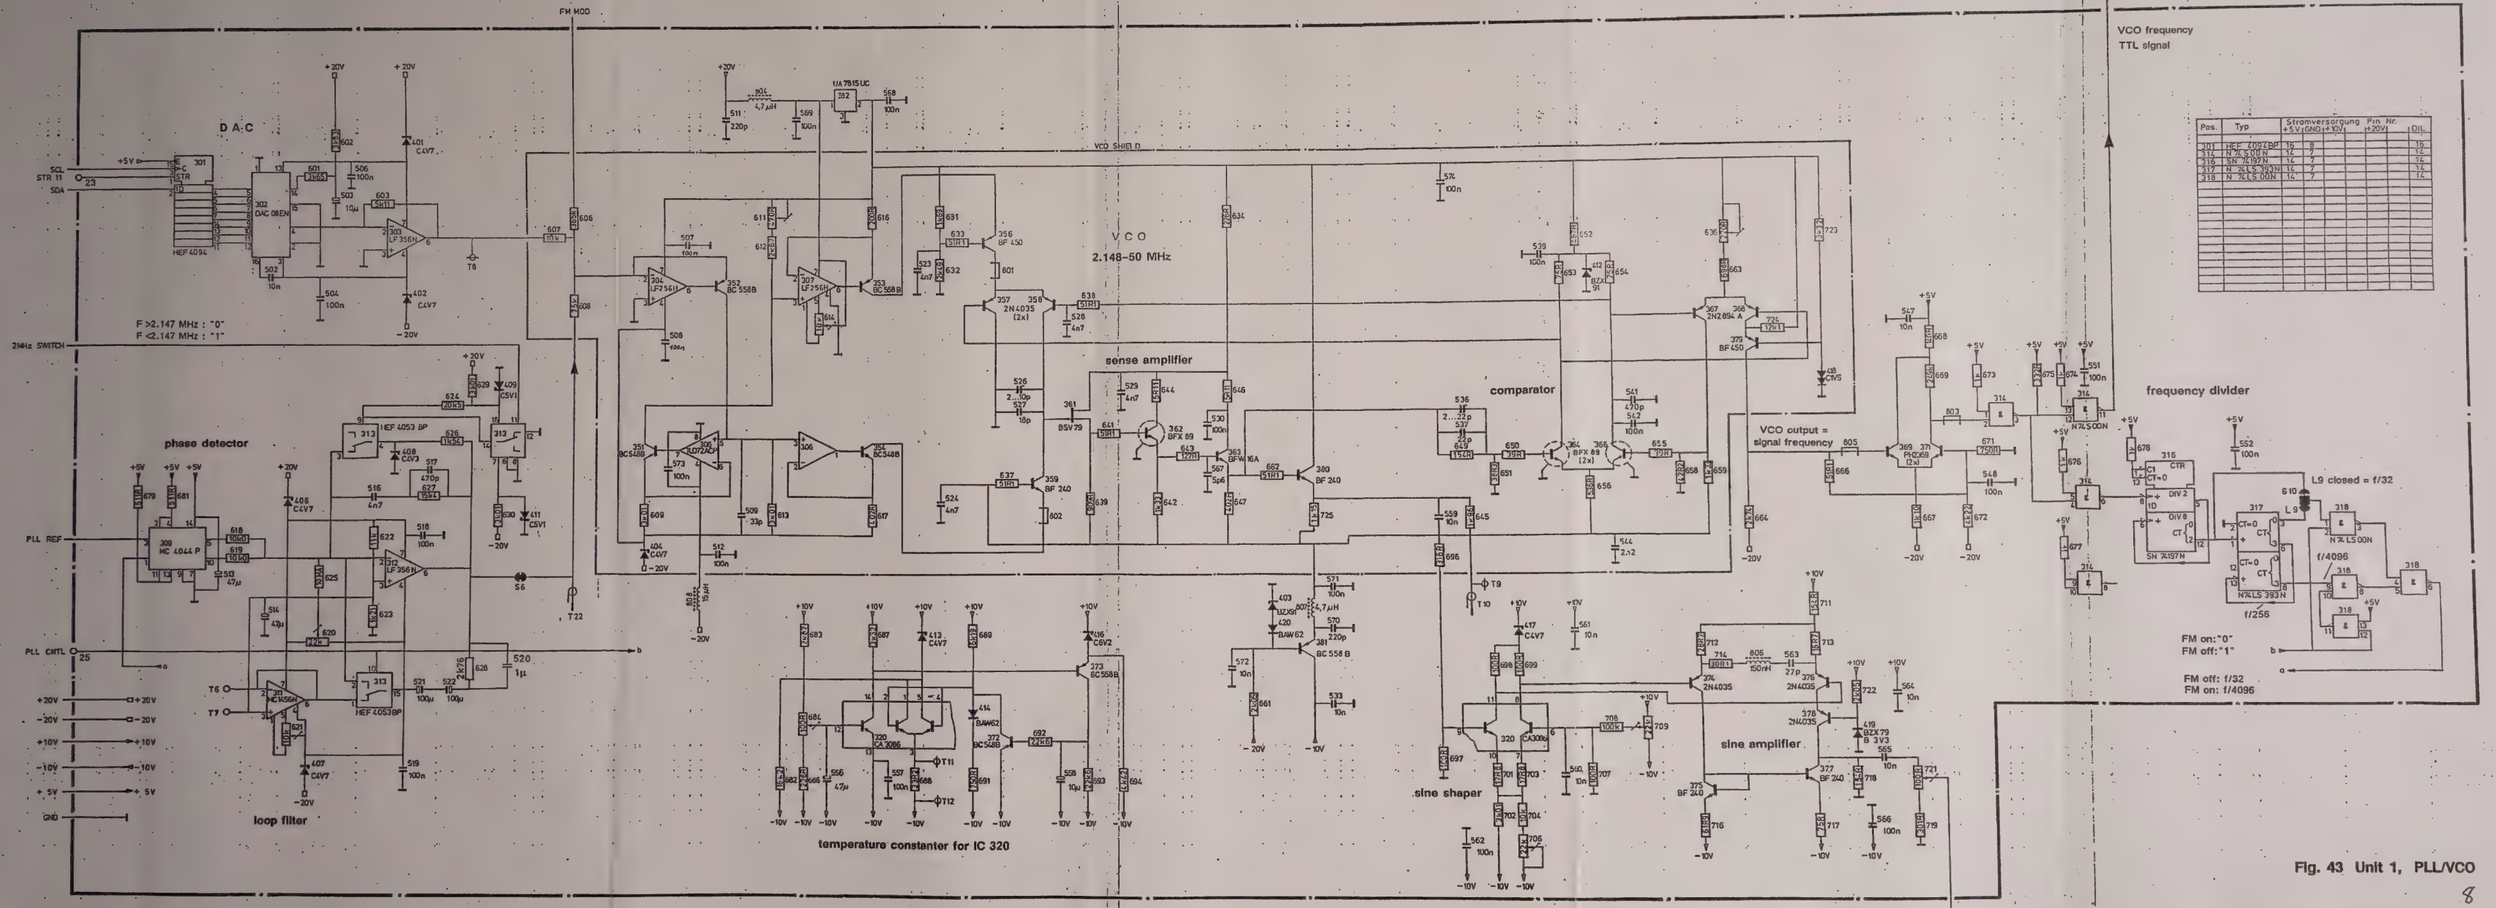

Fig. 43 Unit 1, PLL/VCO

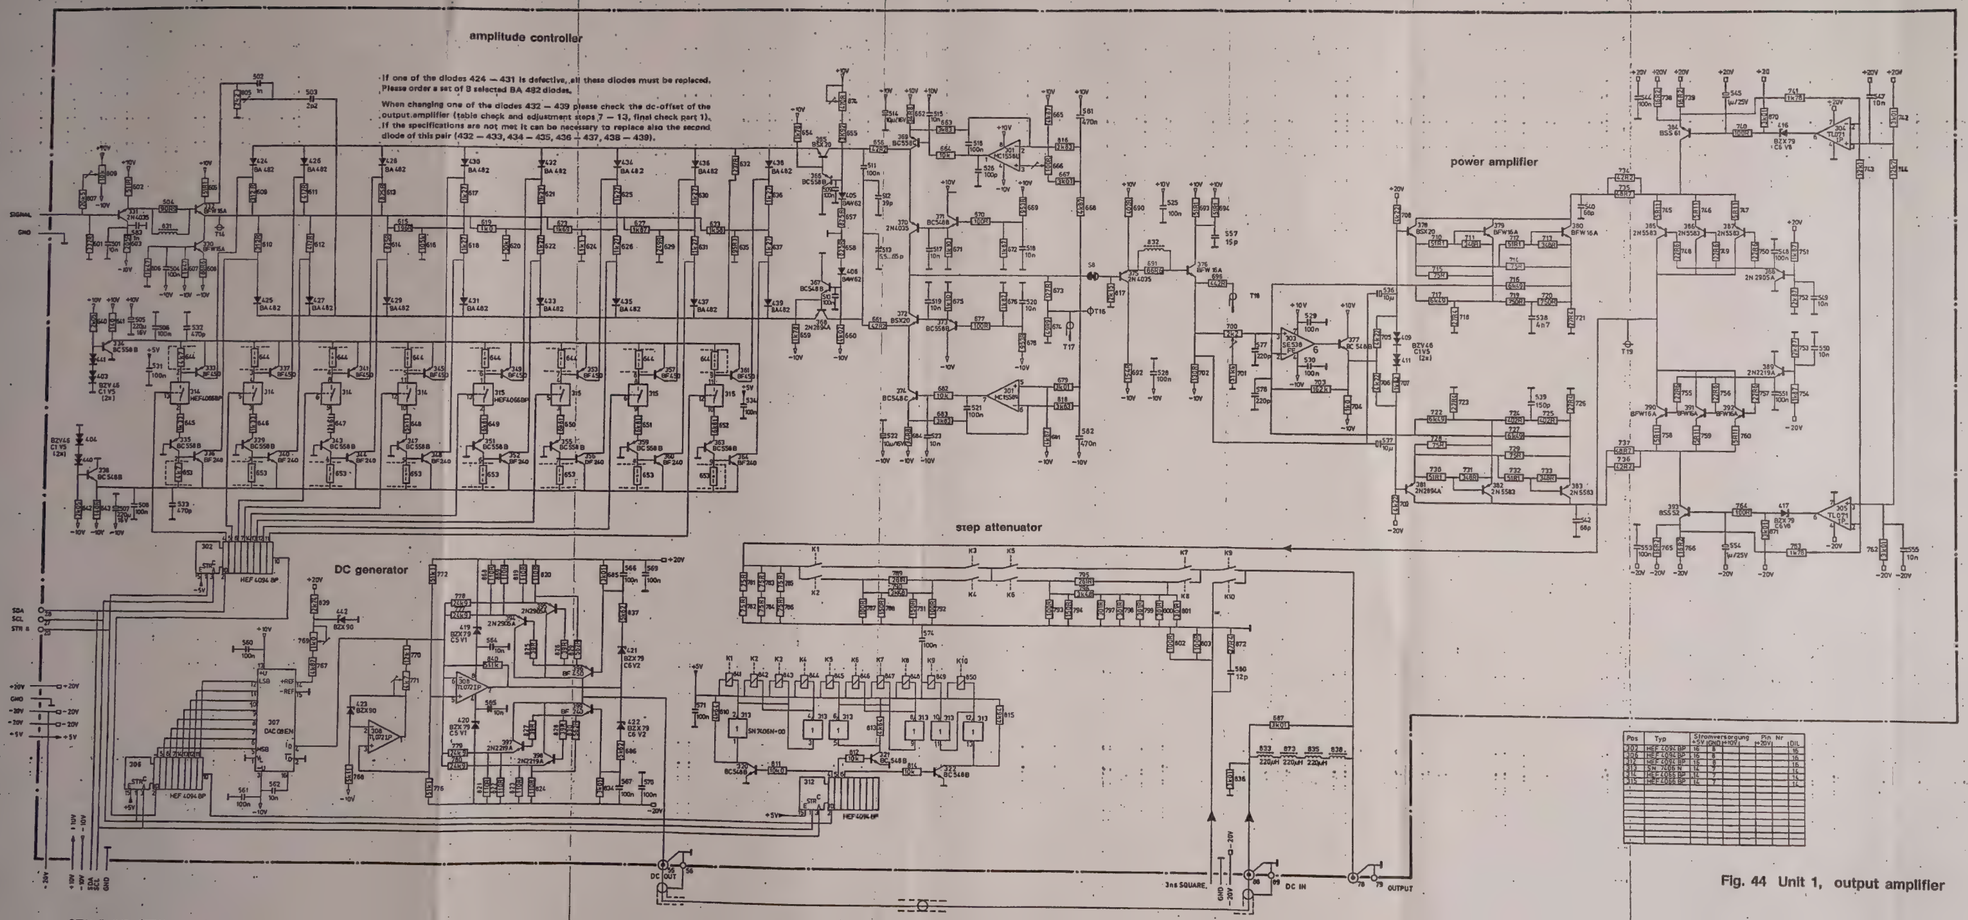
amplitude controller
If one of the diodes 424 — 431 is defective, all these diodes must be replaced. Please order a set of 8 selected BA 482 diodes.
When changing one of the diodes 432 — 439 please check the dc-offset of the output amplifier (table check and adjustment steps 7 — 13, final check part 1). If the specifications are not met it can be necessary to replace also the second diode of this pair (432 — 433, 434 — 435, 436 — 437, 438 — 439).
power amplifier
step attenuator
DC generator
SIGNAL
GND
SDA
SCL
STR II
DC OUT
3ns SQUARE
DC IN
OUTPUT

Pos	Typ	Stromversorgung +5V pin Nr	+20V	Pin Nr +20V	DIL
302	HEF 4094 BP	16	8		16
303	HEF 4094 BP	16	8		16
304	HEF 4094 BP	16	8		16
305	HEF 4094 BP	16	8		16
306	HEF 4094 BP	16	8		16
307	DAC-BEN	14	7		14

Fig. 44 Unit 1, output amplifier

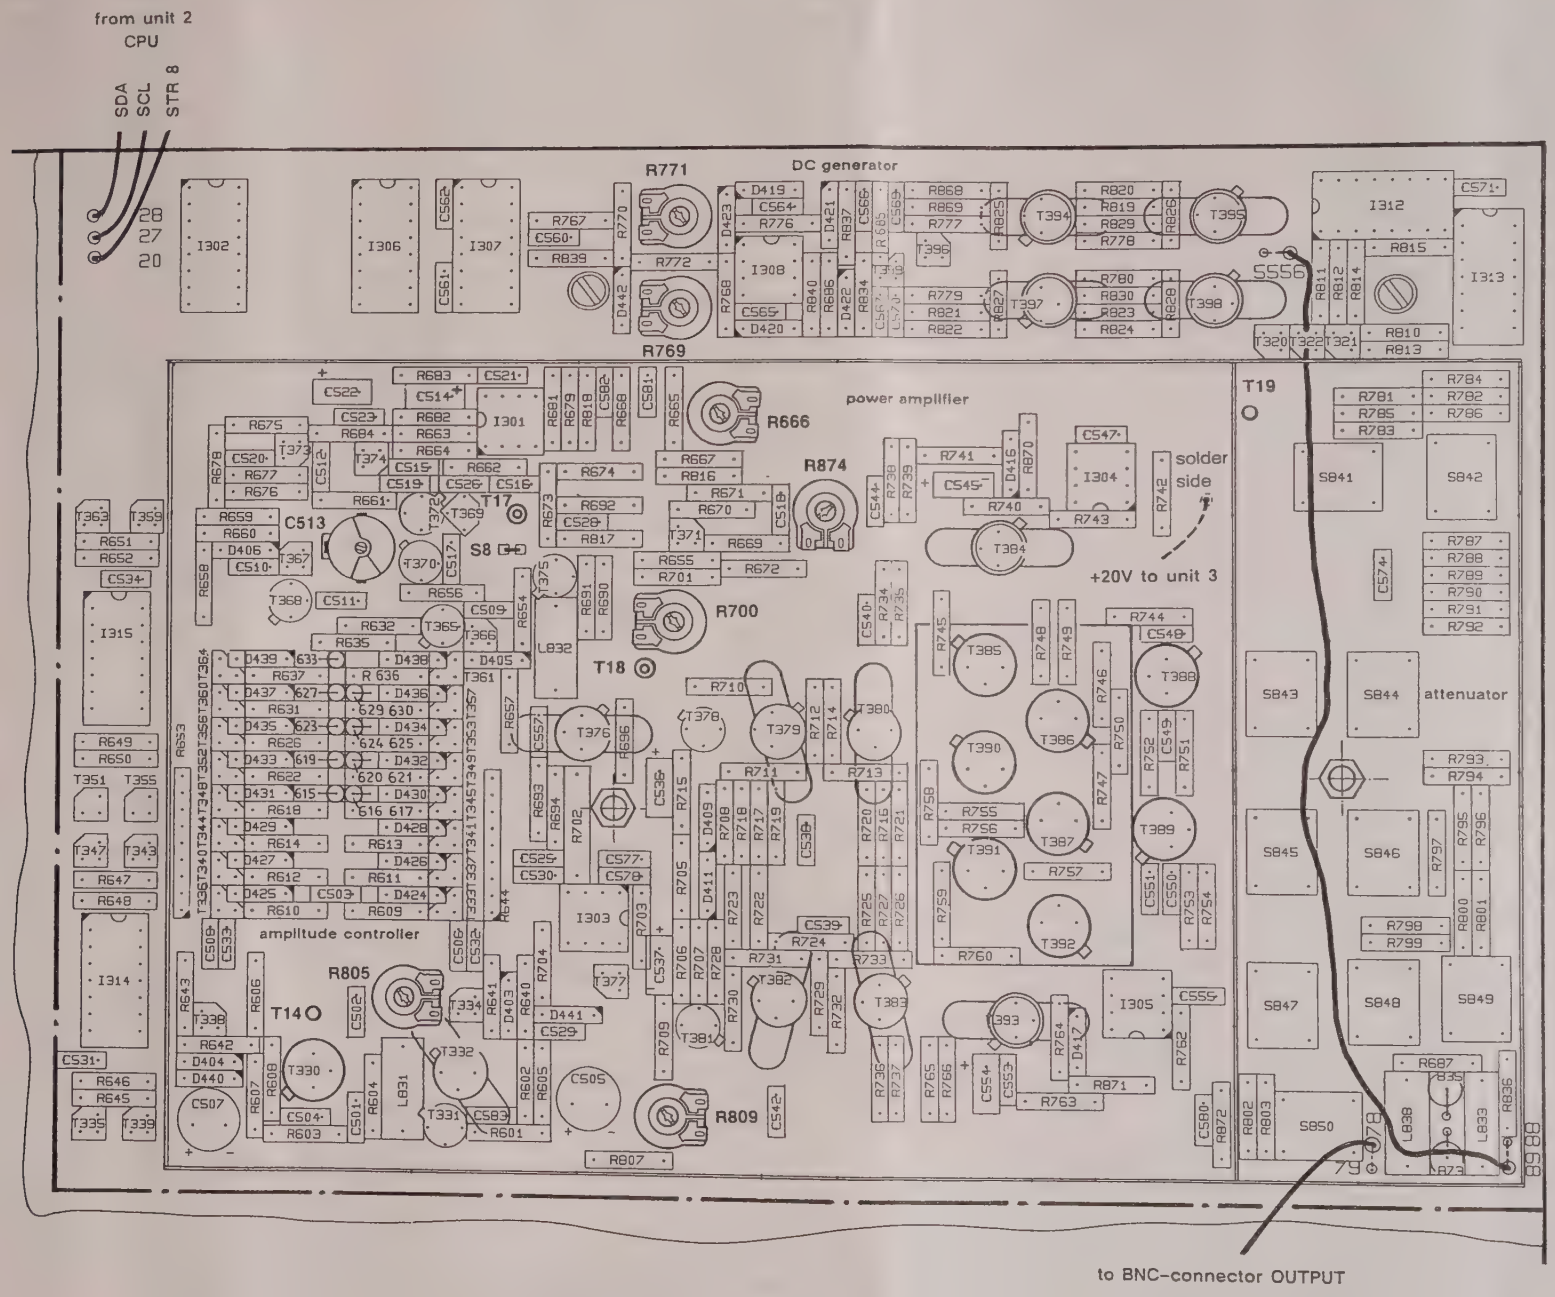

Symbol identification:

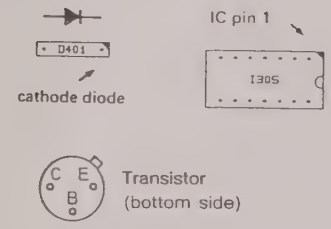

Location on unit 1
(lay-out turned by 90°)

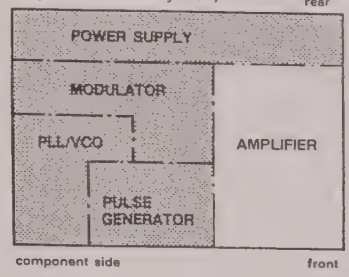

Fig. 45 Unit 1, output amplifier component lay-out

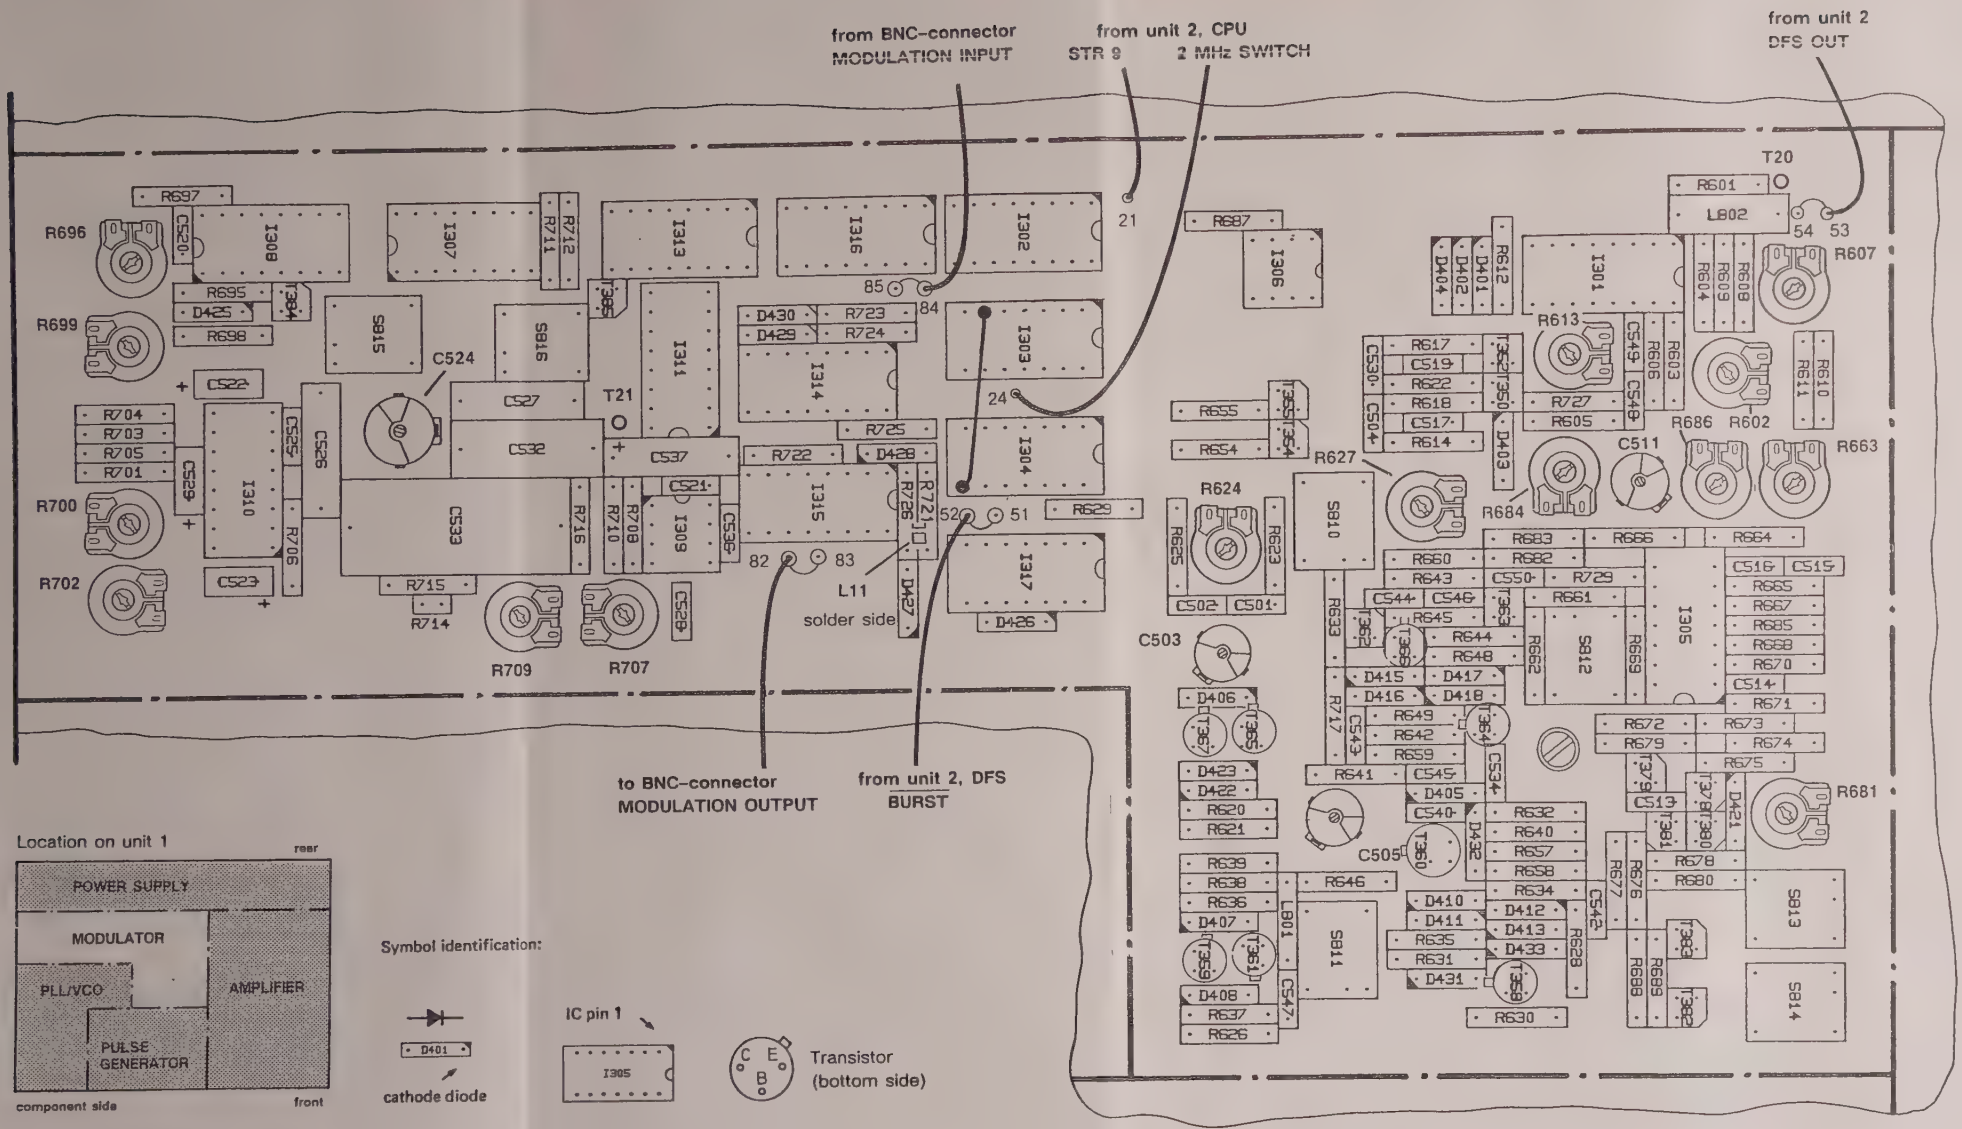

Fig. 46 Unit 1, modulator
component lay-out

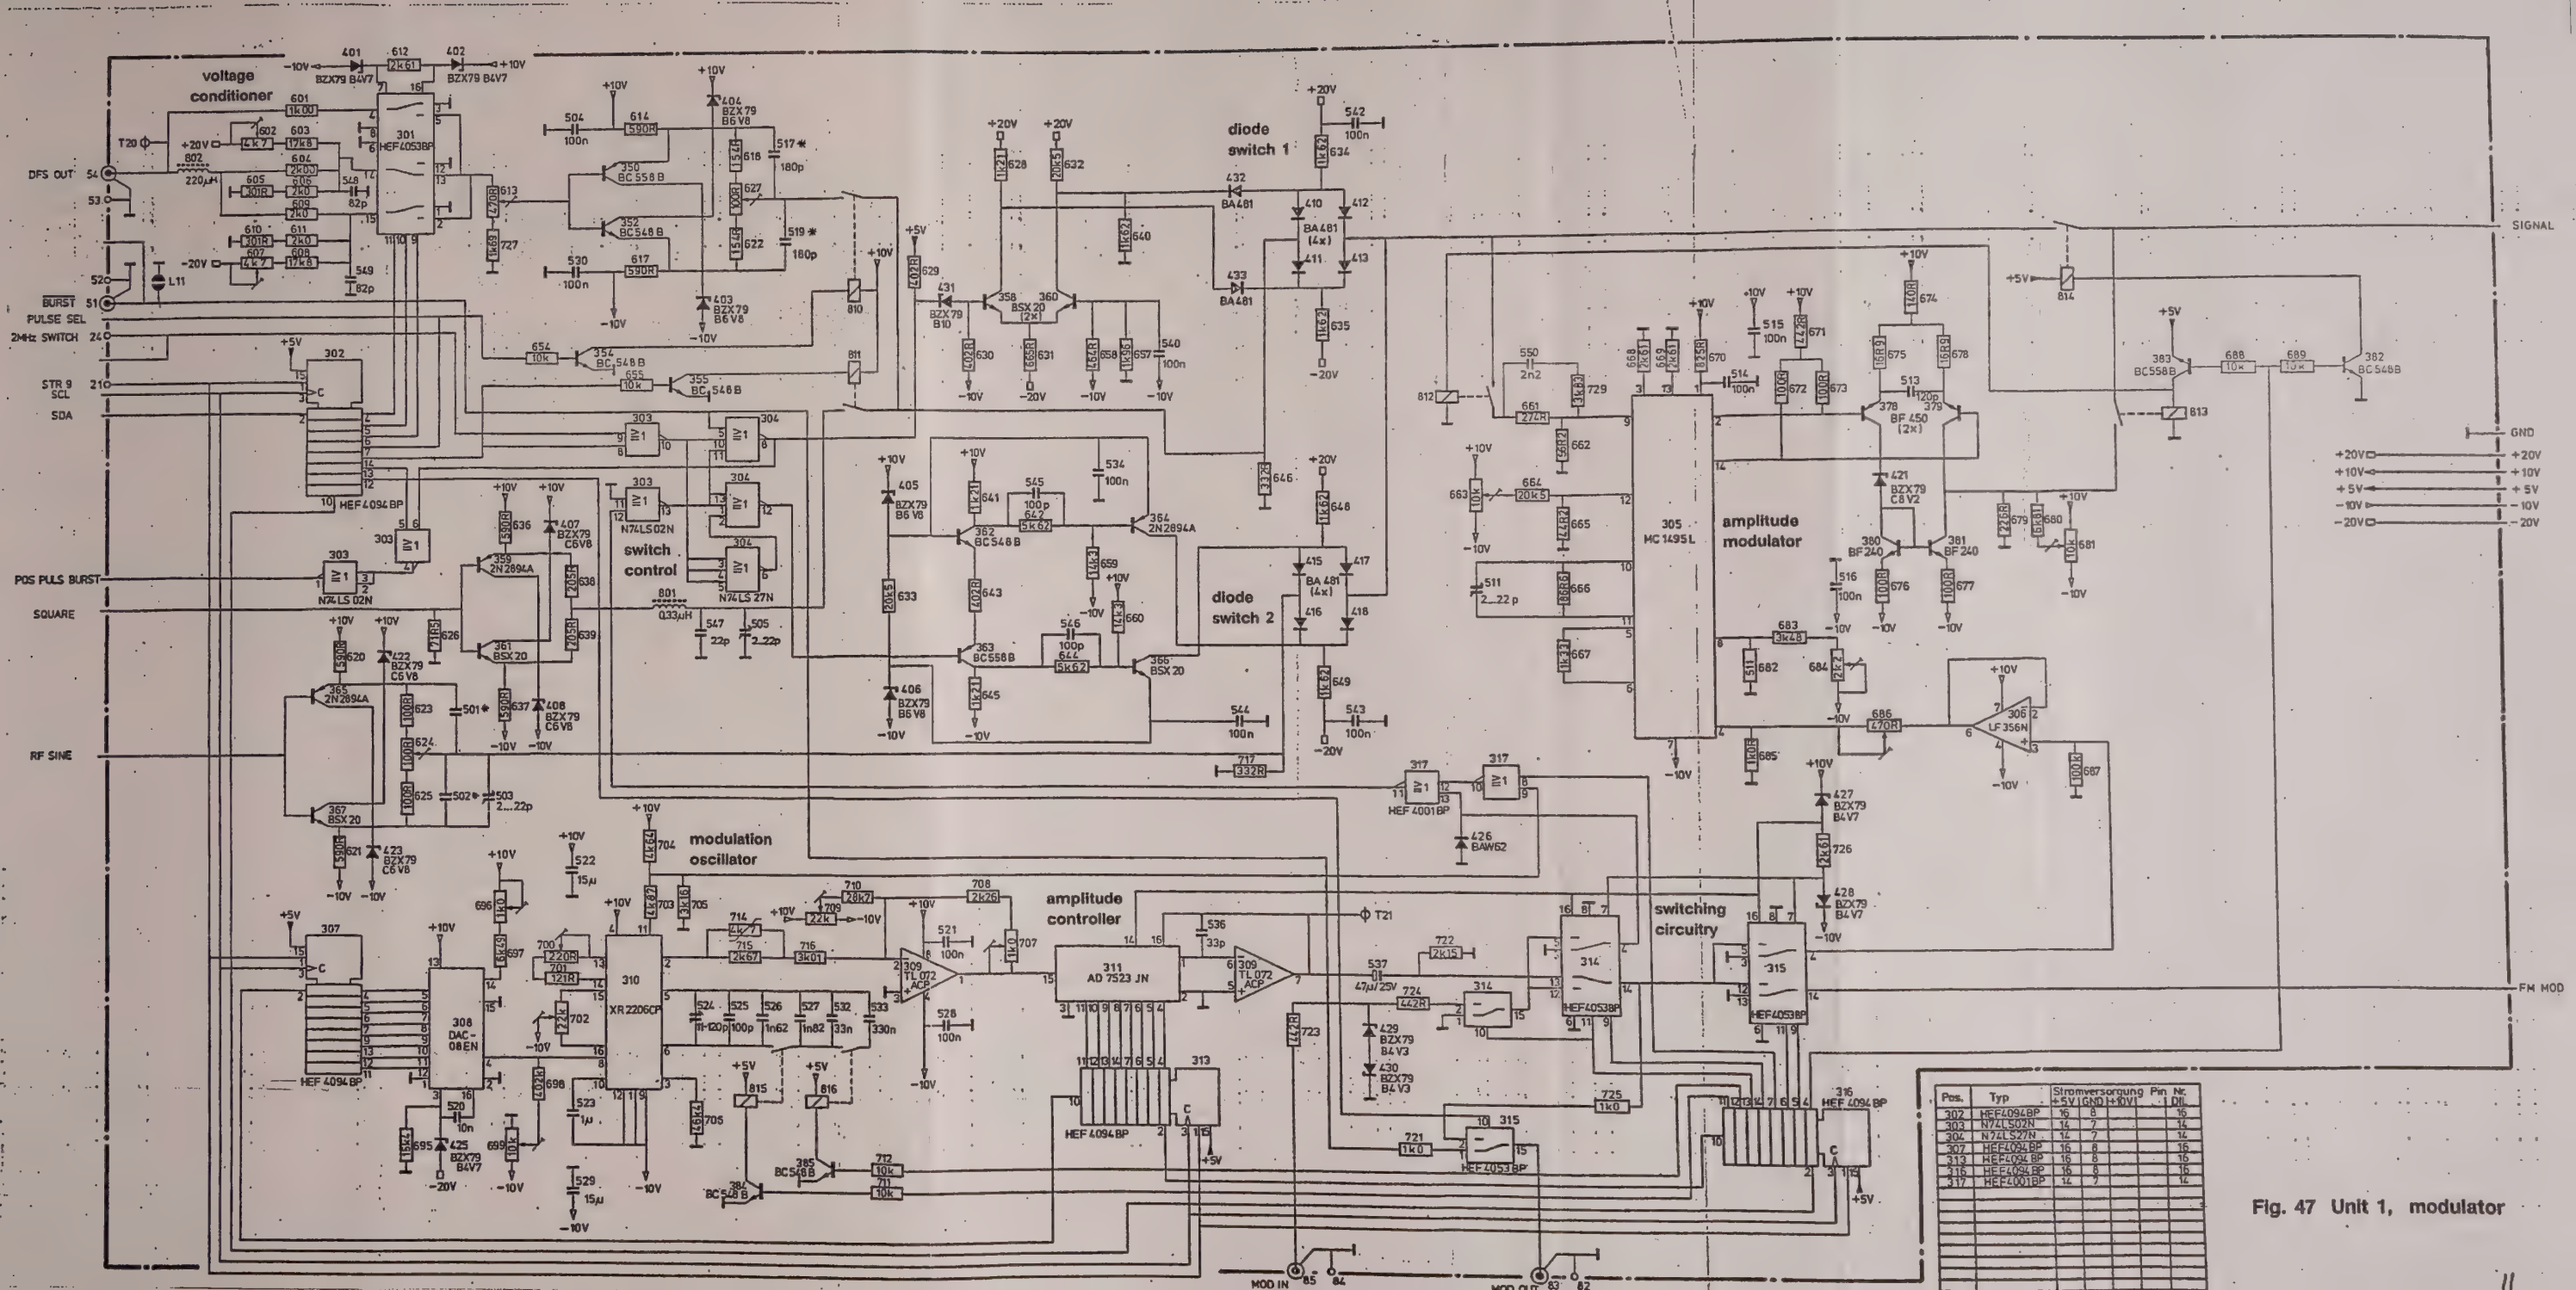

Pos.	Typ	Stromversorgung +5V	GND	+10V	-10V	Pin Nr.	DIL
302	HEF4094BP	16	8			16	
303	N74LS02N	14	7			14	
304	N74LS27N	14	7			14	
307	HEF4094BP	16	8			16	
313	HEF4094BP	16	8			16	
315	HEF4094BP	16	8			16	
317	HEF4001BP	14	7			14	

Fig. 47 Unit 1, modulator

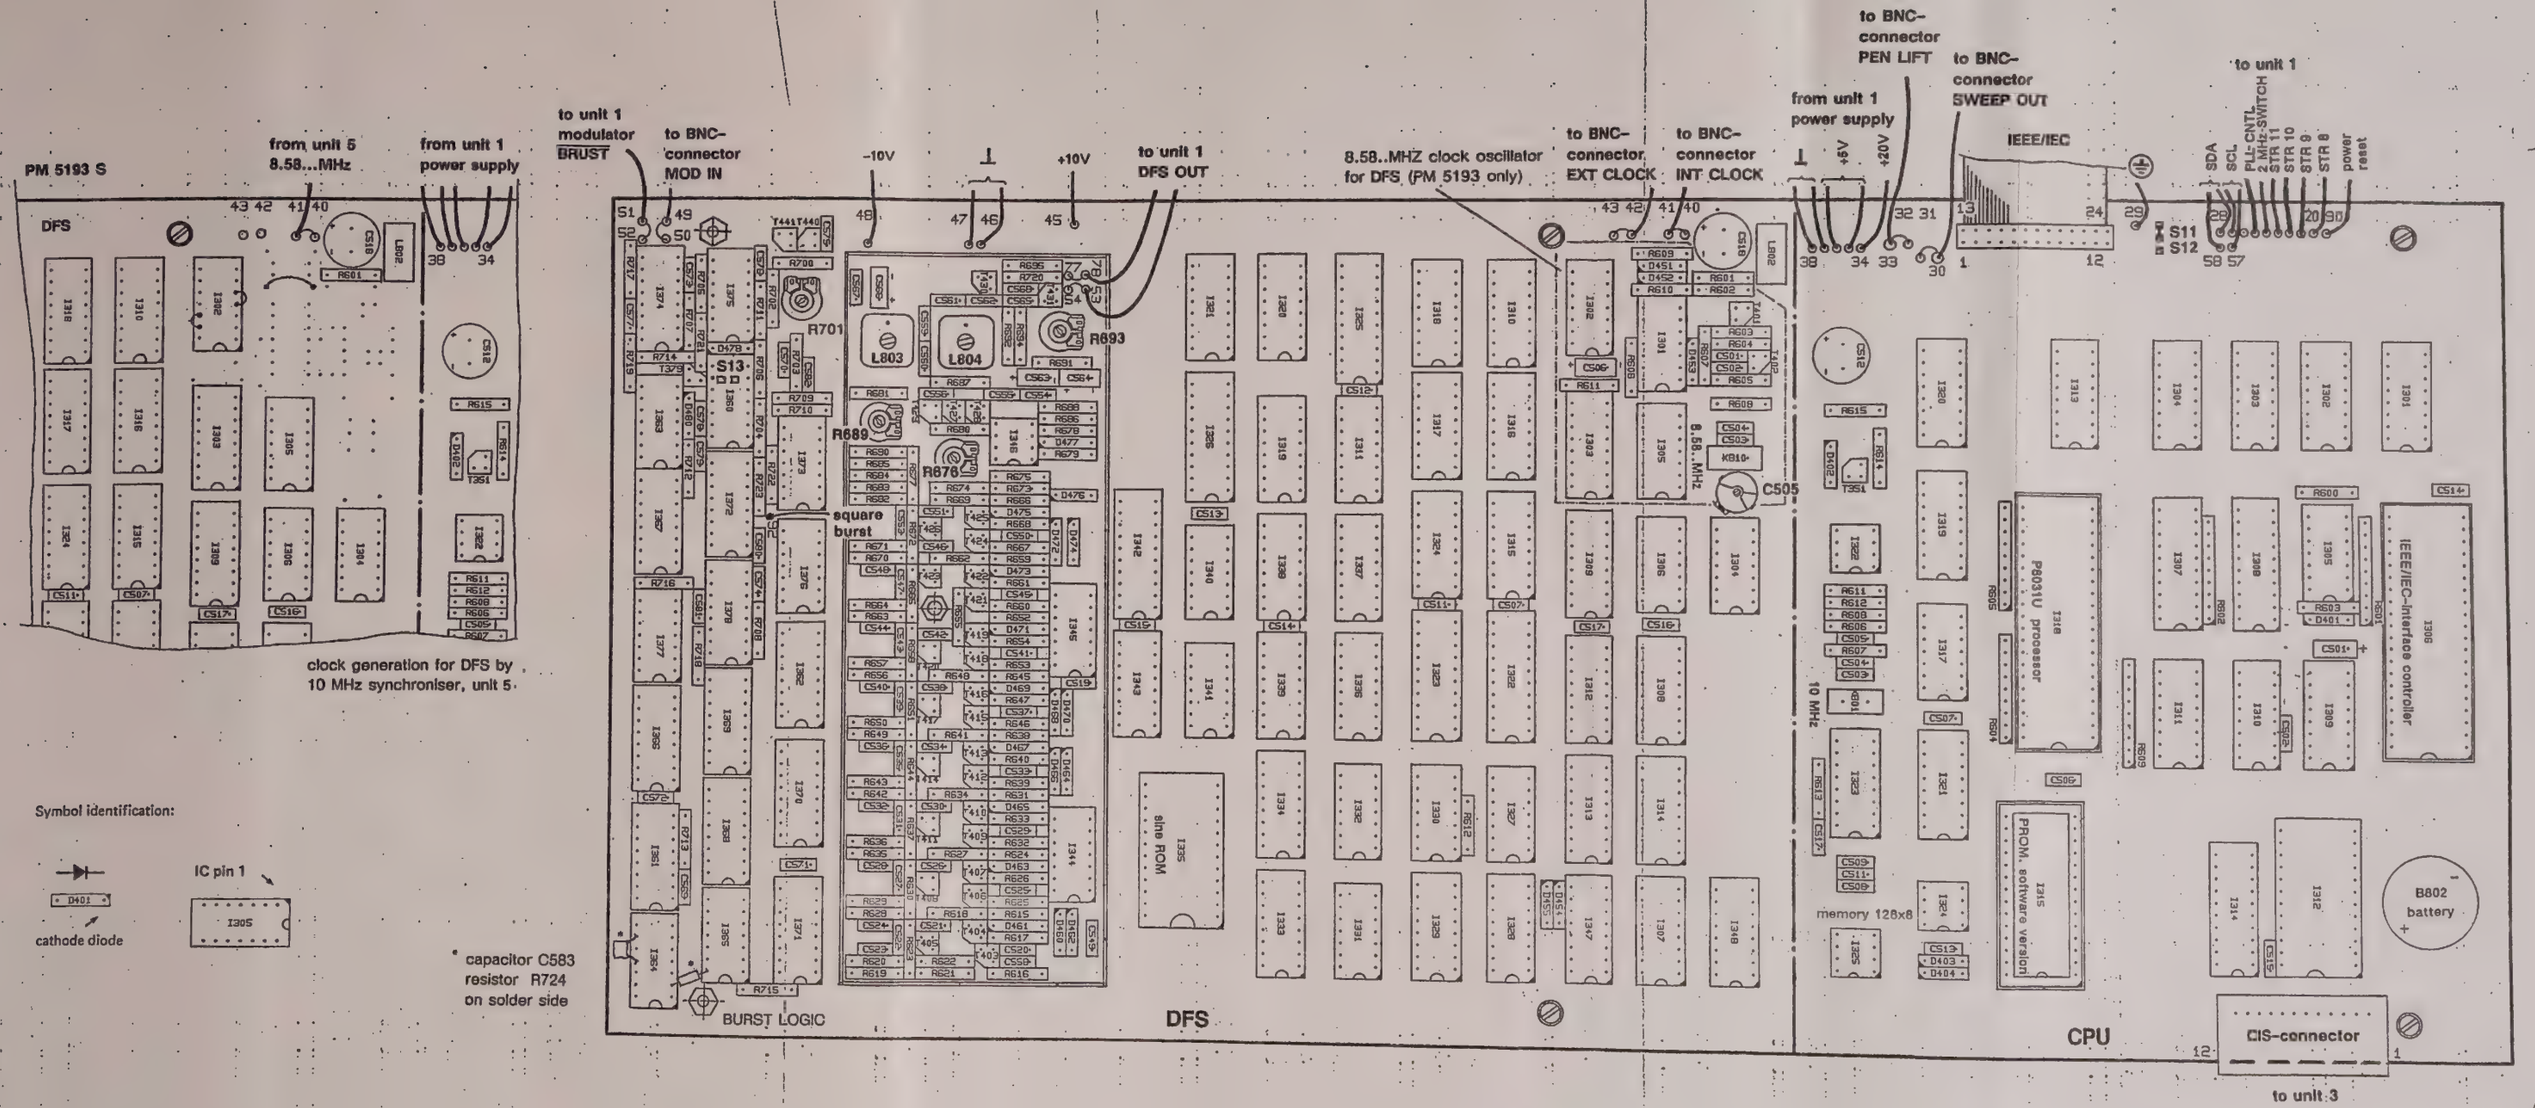

Fig. 48 Unit 2, CPU/DFS
component lay-out

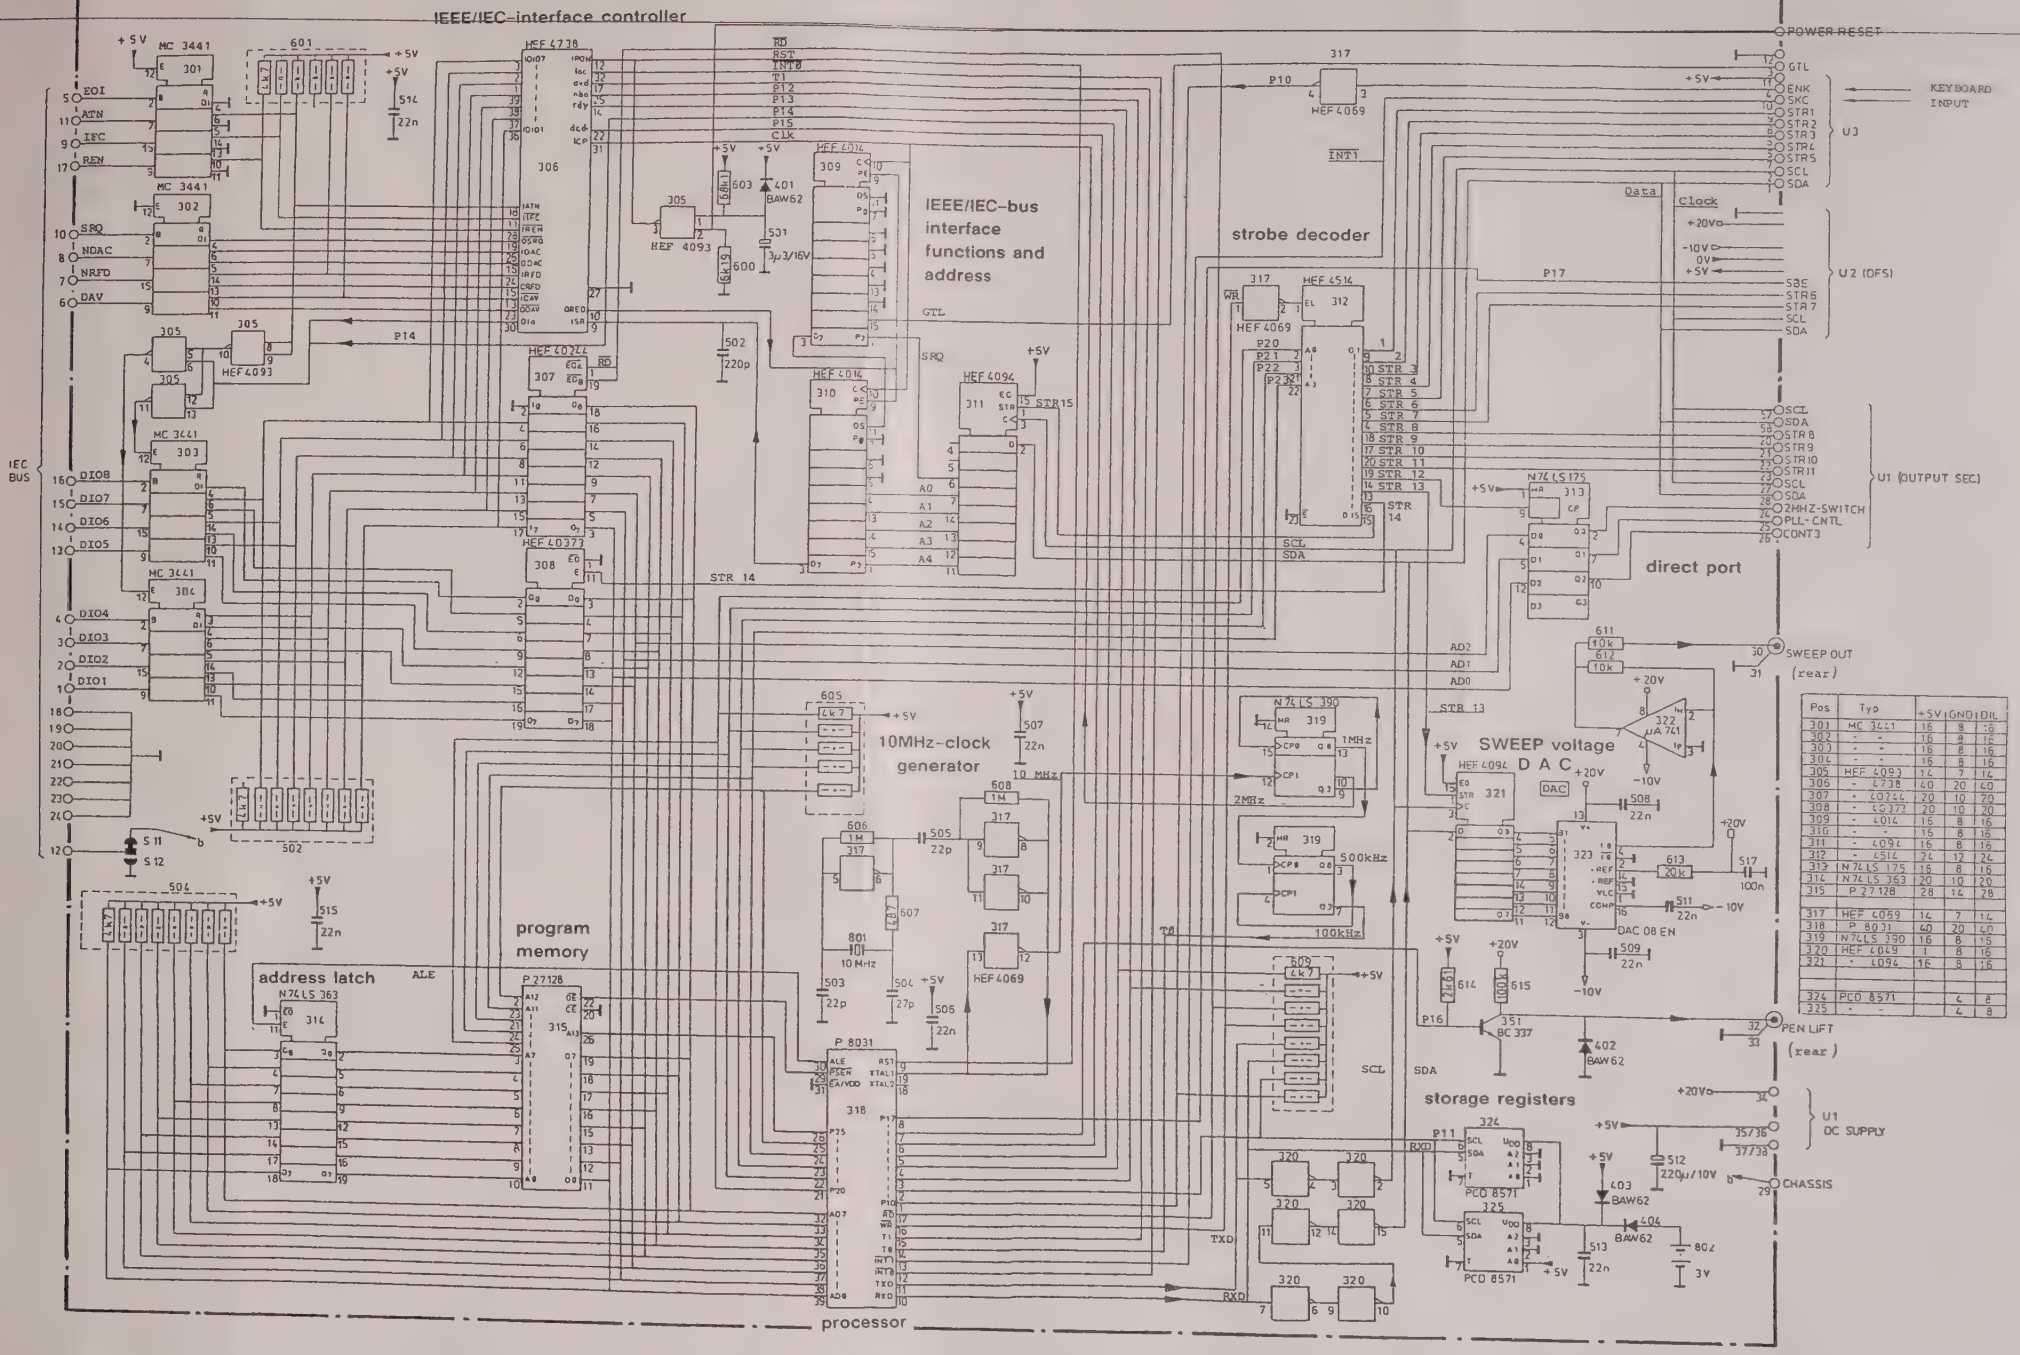

Pos	Typ	+5V	GND	DIL
301	MC 3441	16	8	16
302	- -	16	8	16
303	- -	16	8	16
304	- -	16	8	16
305	HEF 4093	14	7	14
306	- 4738	40	20	40
307	- 40244	20	10	20
308	- 40377	20	10	20
309	- 4014	16	8	16
310	- -	16	8	16
311	- 4094	16	8	16
312	- 4514	24	12	24
313	N74LS 175	16	8	16
314	N74LS 363	20	10	20
315	P 27128	28	14	28
317	HEF 4069	14	7	14
318	P 8031	40	20	40
319	N74LS 390	16	8	16
320	HEF 4069	1	8	16
321	- 4094	16	8	16
324	PCD 8571		4	8
325	- -		4	8

Fig. 49 Unit 2, CPU

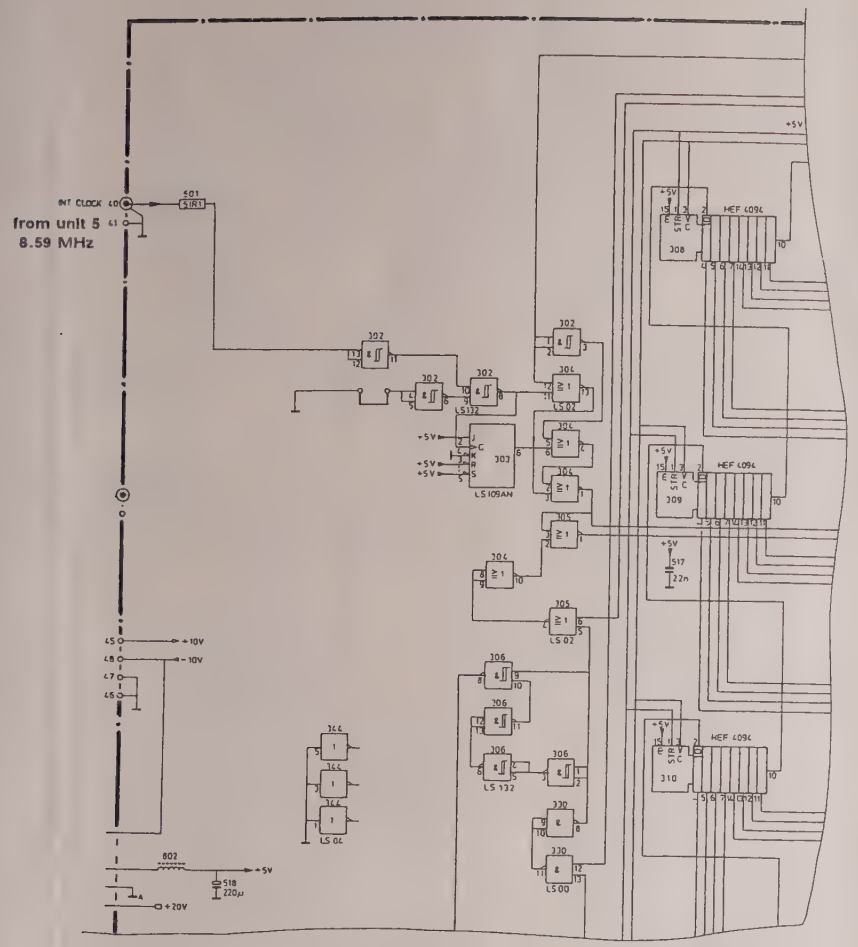
INT CLOCK
from unit 5
8.59 MHz
+5V
+10V
-10V
+20V
HEF 4094
LS 109AN
LS 132
LS 02
LS 00
LS 04

PM 5193 S

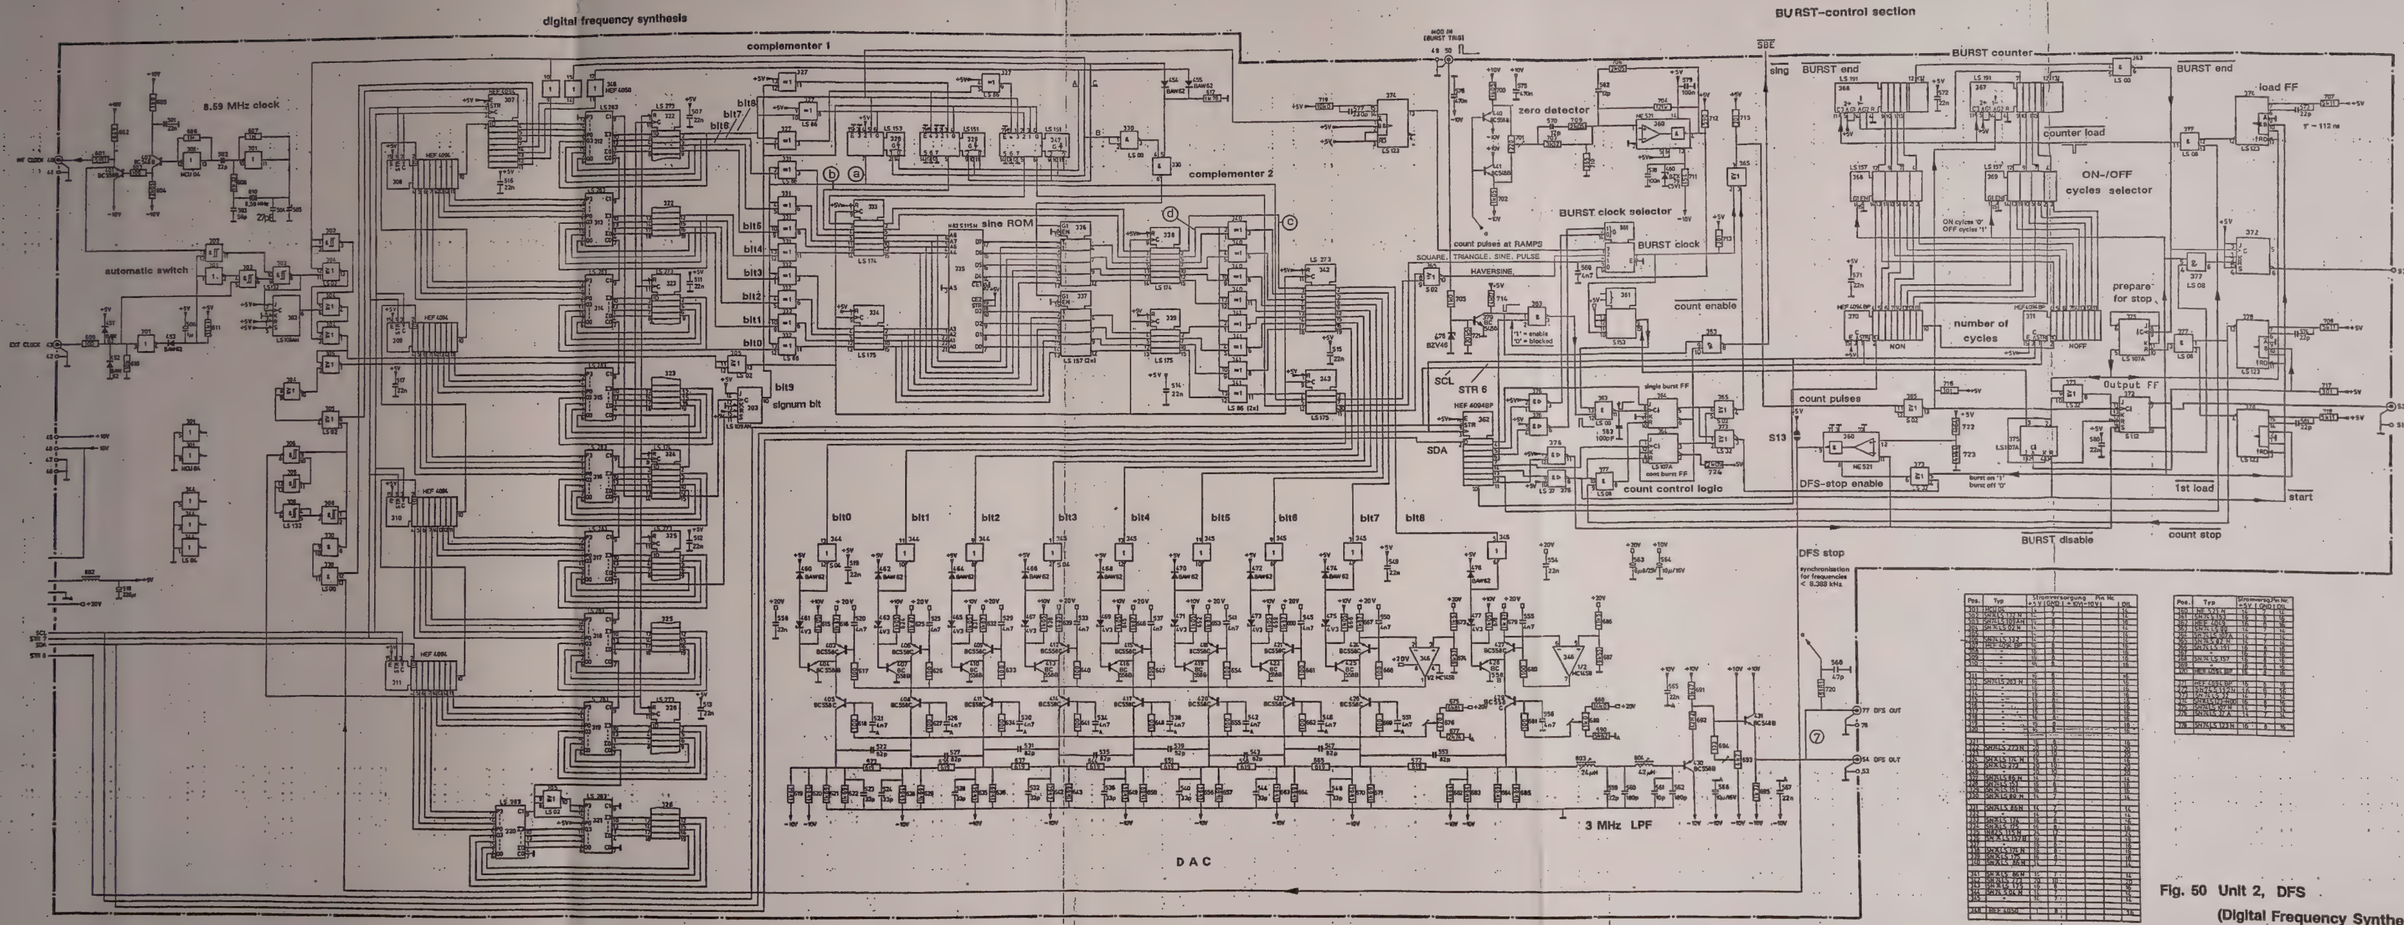

Fig. 50 Unit 2, DFS

(Digital Frequency Synthesizer)

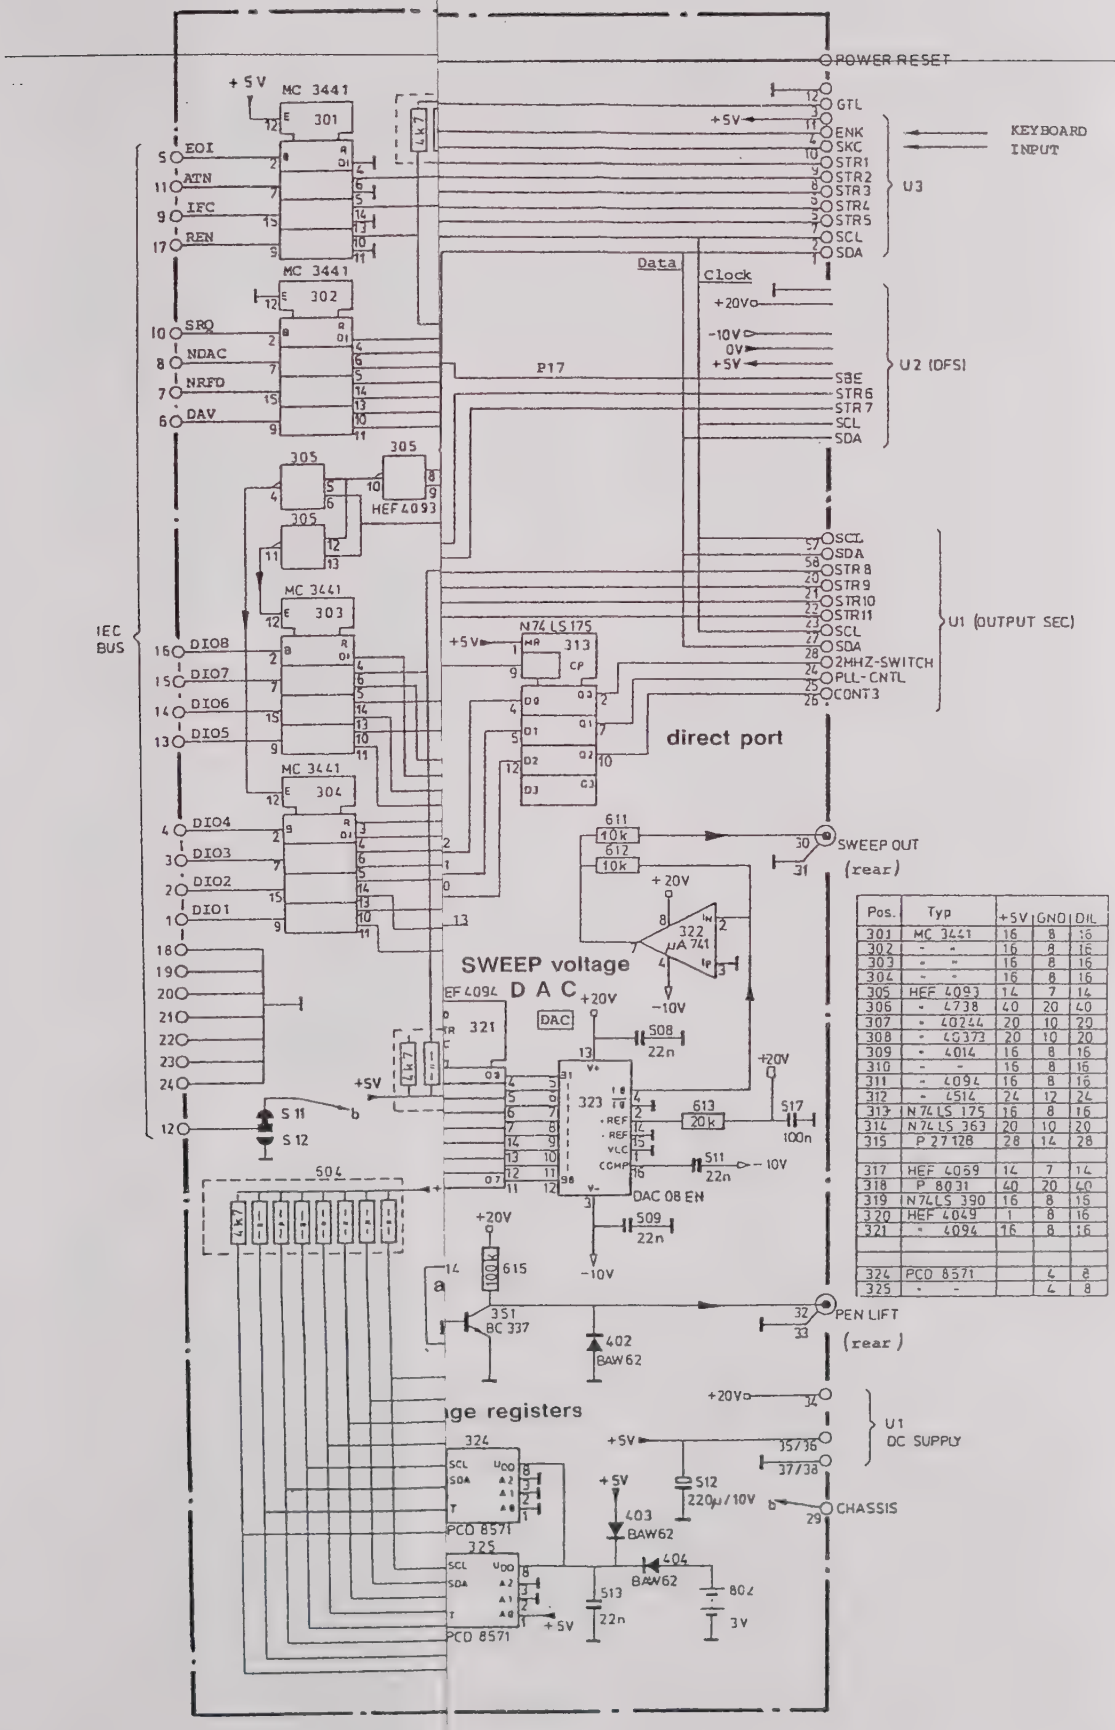

Pos.	Typ	+5V	GND	DIL
301	MC 3441	16	8	16
302	- "	16	8	16
303	- "	16	8	16
304	- "	16	8	16
305	HEF 4093	14	7	14
306	- 4738	40	20	40
307	- 40244	20	10	20
308	- 40373	20	10	20
309	- 4014	16	8	16
310	- -	16	8	16
311	- 4094	16	8	16
312	- 4514	24	12	24
313	N74LS175	16	8	16
314	N74LS363	20	10	20
315	P 27128	28	14	28
317	HEF 4059	14	7	14
318	P 8031	40	20	40
319	N74LS390	16	8	16
320	HEF 4049	1	8	16
321	- 4094	16	8	16
324	PCD 8571		4	8
325	- -		4	8

Fig. 49 Unit 2, CPU
(Central Processing Unit)

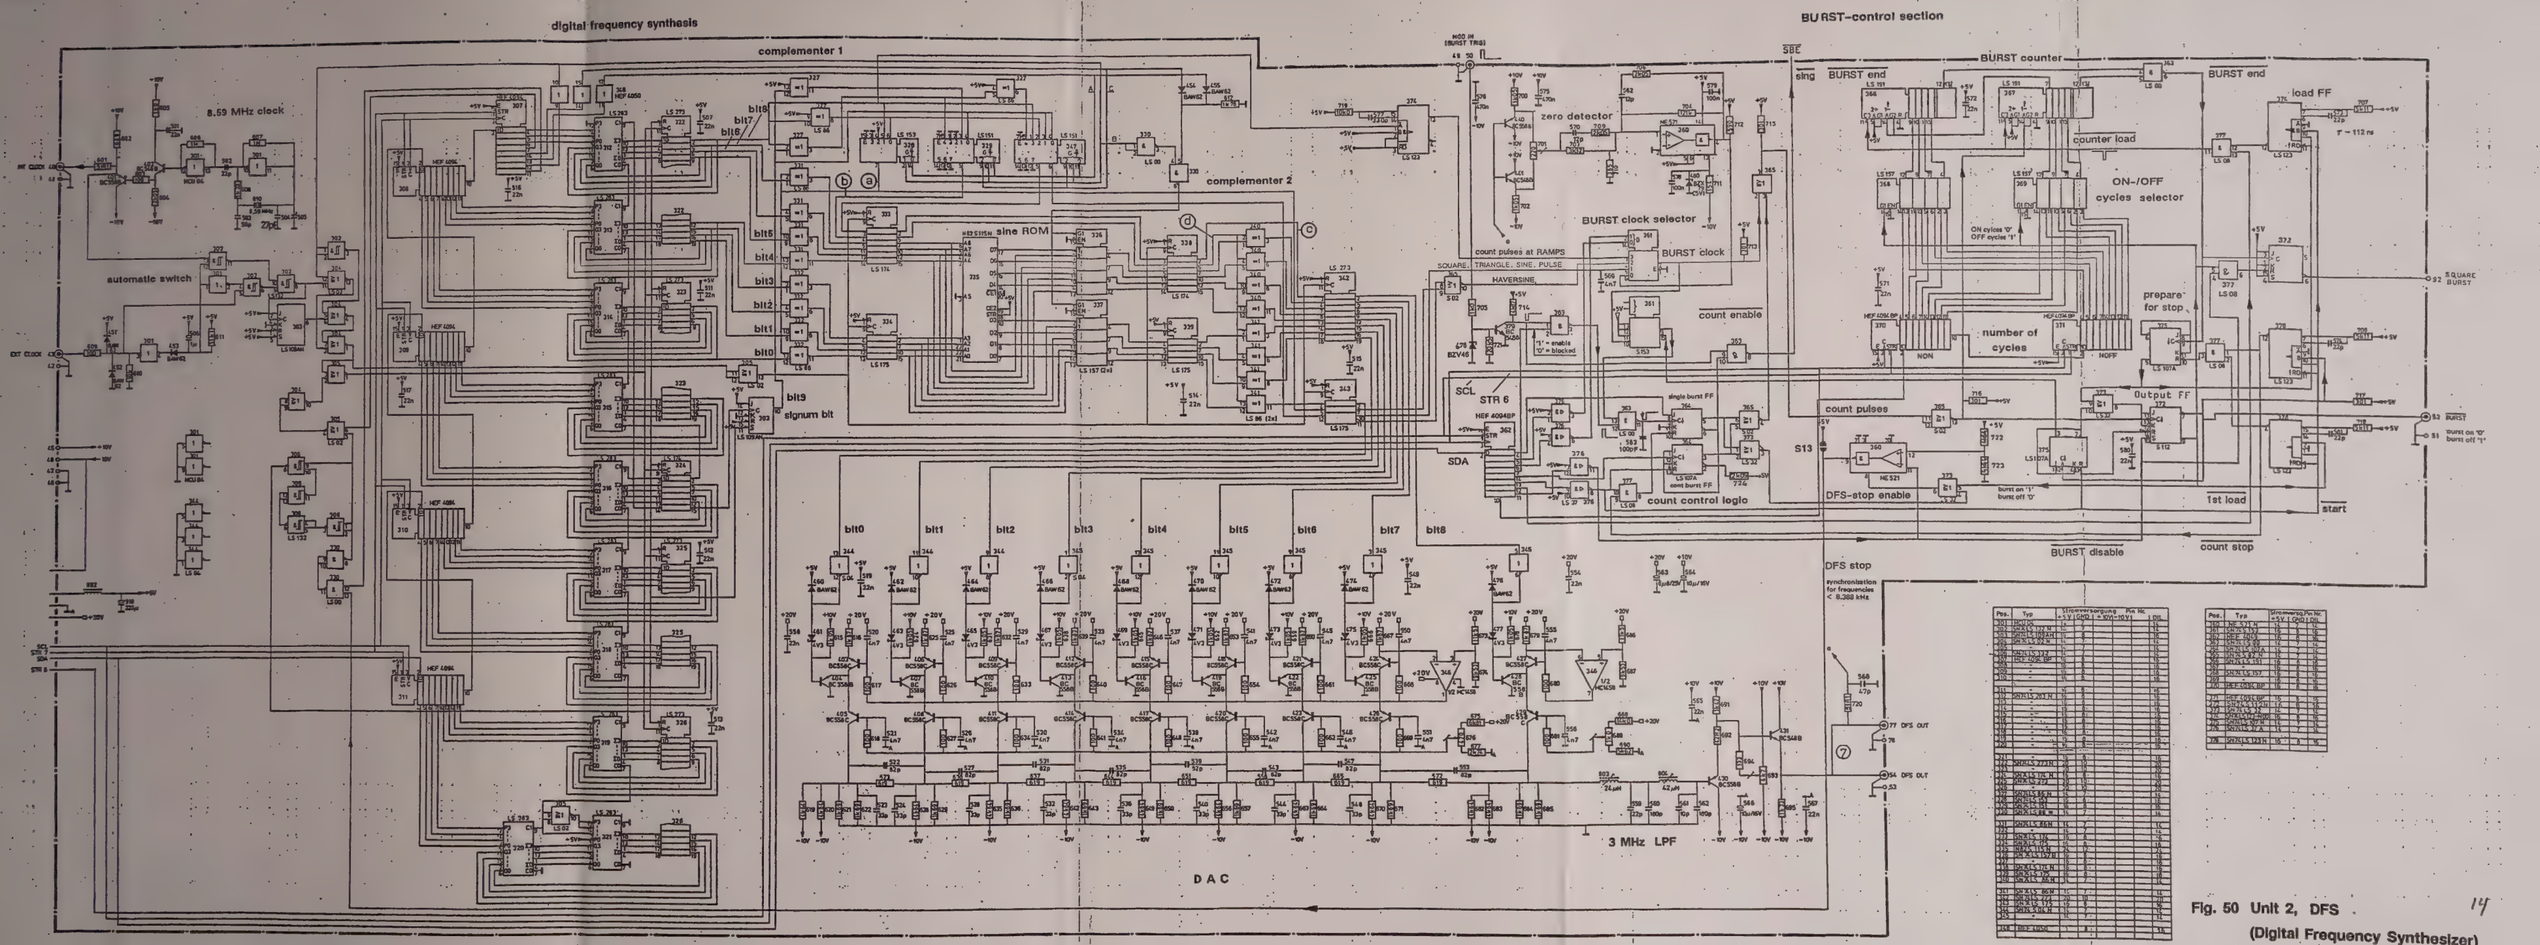

Fig. 50 Unit 2, DFS (Digital Frequency Synthesizer)

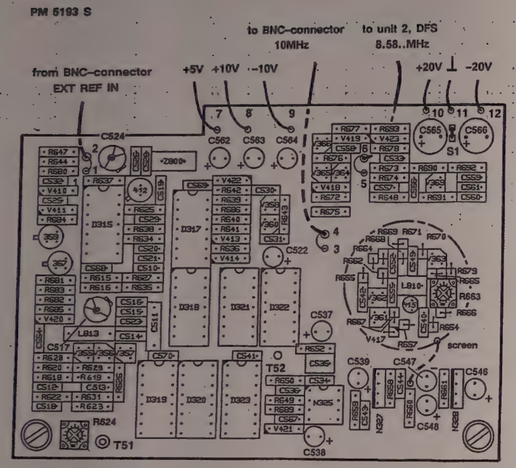

Symbol indentification

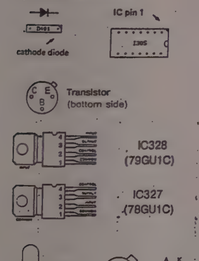

Location of unit 5

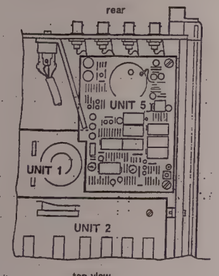

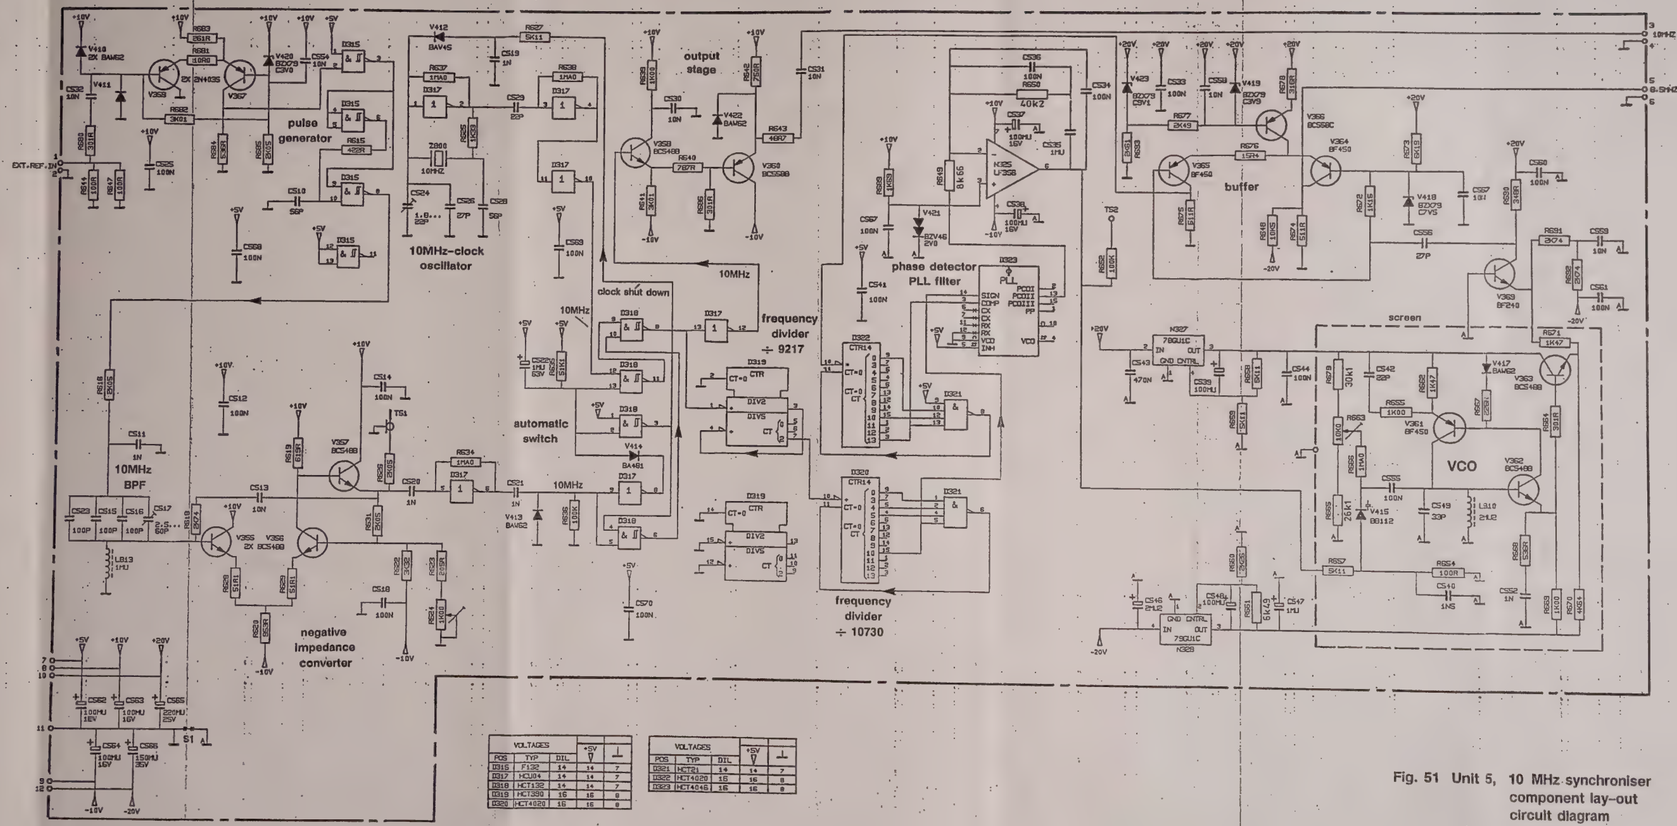

VOLTAGES			+5V	⊥
POS	TYP	DIL		
D315	F132	14	14	7
D317	HCU04	14	14	7
D318	HCT132	14	14	7
D319	HCT390	16	16	8
D320	HCT4020	16	16	8

VOLTAGES			+5V	⊥
POS	TYP	DIL		
D321	HCT81	14	14	7
D322	HCT4020	16	16	8
D323	HCT4046	16	16	8

Fig. 51 Unit 5, 10 MHz synchroniser component lay-out circuit diagram

Sales and Service all over the world

Algeria
Bureau de Liaison Philips
24 rue Bougainville
El Mouradia Alger
Tel 60 14 05
TLX 62221

Angola
Lusolanda Trading S.A.R.L.
C P 178
LUANDA
Tel 244-2-372250
Fax 244-2-373413

Antilles
Philips Antillana N.V.
(For Philips products)
Kaminda Michigan 4
PO Box 3523/3051
Willemstad Curacao
Tel 599-9-615277
Fax: 599-9-612772
TLX: 1047 PHINA

Argentina
Philips Argentina S.A.
(For Philips products)
Casilla Correo 3479
Vedia 3892
1430 Buenos Aires
Tel 54-1-5414106/5417141
Fax 54-1-7869818
Tel 54-1-5422411/5422451*
TLX: 21359/21243

Coasin S.A.
(For Fluke products)
Virrey del Pino 4071 DEP E-1
1430 CAP FED
Buenos Aires Argentina
Tel: (54) (1) 552-5248
TLX: (390) 22284 COASN AR

Australia New Zealand
Philips Scientific & Industrial PTY Ltd.
Test & Measurement Dept.
NZ Head Office
2 Wagner Place
PO Box 4021
Auckland 3
New Zealand
Tel: 09-894160
Fax: 09-862728
TLX NZ 2395

Australia Head Office
Philips Scientific & Industrial PTY Ltd.
Test & Measurement Dept.
Centrecourt 25-27 Paul Street
North Ryde
Sydney New South Wales 2113
Tel 02-888 0416
Tel: 02-888 8222*
Fax 02-888 0440
TLX AA 20165 philind ausnrsl

Philips Scientific & Industrial PTY Ltd.
Test & Measurement
23 Lakeside Drive
East Burwood
Melbourne Victoria 3151
Tel 03-235 3666
Fax. 03 235 3618

Philips Scientific & Industrial PTY Ltd.
Test & Measurement
348 Torrens Road
Croyden
Adelaide South Australia 5008
Tel 08-3482888
Fax. 08-3482813

Philips Scientific & Industrial PTY Ltd.
Test & Measurement
299 Montagne Road
West End
Brisbane Queensland 4101
Tel. 07-8440191
Fax: 07-8448537

Philips Scientific & Industrial PTY Ltd.
Test & Measurement
1 Frederick Street
Belmont
Perth West Australia 6104
Tel 09-277-4199
Fax: 09-277-1202

Austria
Philips Professionelle Elektronik GmbH
Marktbereich Test- und Messgeraete
Gutheil Schoder Gasse 10
A 1102 Wien
Tel: 0222/60101-0
Fax: 0222-6272165
TLX: 133129

Philips Professionelle Elektronik GmbH
Marktbereich Test- und Messgeraete
Technischer Kundendienst
Triesterstrasse 64
1101 Wien
Tel: 0222-60101 ext. 818

Bahrain
Messrs. Mohamed Fakhroo & Bros
PO Box 439
Bahrain
Tel: 973-253529
Fax: 973-275996
TLX: 8679 alfaro bn

Bangladesh
Philips Bangladesh Ltd.
P O Box 62 Ramna 17 *7 Bazar
DHAKA
Tel 325081 5
TLX 65668 PHIL BG

Barbados
Manning Wilkinson & Challenor
P O Box 176
Bridgetown
Tel 436-6185
Fax: 809-426-7373
TLX: Mannings 2355 WB

Belgium
Philips Professional Systems S.A.
Test & Measurement
Department
Tweestationstraat 80
1070 Brussel
Tel: 02-525 6692
Tel: 02-525 6694*
Fax: 02-230-2856*
Fax 02-525 6483
TLX 61511 belbrms

Bermuda
Holmes, Williams and Purvey
P O Box 444
Hamilton
Tel 809-2955000
TLX 3725 HWPBA

Brazil
Philips Medical Systems Ltda.
Av Interlagos N 3493
04661 Sao Paulo S P
Tel 55-11-5234811
Fax: 55-11-5244873

ATP Hi-Tek Electronica Ltda.
Al. Amazonas 422 Alphaville
06400 Barueri
Sao Paulo, Brazil
Tel: (55) (11) 4215477
Fax: (55) (11) 4215032
TLX: 1171413 HITK BR

Brunei
Brunei (via Singapore)
(For Philips products)
Philips Project Development
(S) PTY Ltd
Lorong 1 Toa Payoh
Singapore 1231
PO Box 340 Tao Payoh C P O
Tel: 65-3502000
TLX: philips rs/21375

Rank O'Connor's, Snd Bhd
(For Fluke products)
No 8 Block D,
Sufri Shophouse Complex
Mile 1 Jalan Tutong
Bandar Seri Begawan
Negara Brunei Darussalam
Tel: (673) (2) 23109 or 23557
TLX: (799) BU 2265 RANKOC

Bolivia
E.P.T.A. INGENIERA S.R.L.
C P 20942
Calle Camoos No 284
LA PAZ
Tel: 3-25952
TLX. 2518 EPTABV

Bulgaria
Interconsult
(Philips Service)*
Bul Jane Sandanski blok 65
P O Box 42
1309 SOFIA
Tel: 359-2-200785

Canada
Fluke Electronics Canada Inc.
400 Britannia Rd East Unit #1
Mississauga, Ontano
L4Z 1X9 Canada
Tel: (416) 890-7600
Fax (416) 890-6866

Fluke Electronics Canada Inc.
1690 Woodward Drive
Suite 216
Ottawa, Ontario
K2C 3R8 Canada
Tel: (613) 723-9453
Fax: (613) 723-9458

Fluke Electronica Canada Inc.
1255 Trans Canada Highway
Suite 120
Dorval Quebec
H9P 2V4 Canada
Tel: (514) 685-0022
Fax: (514) 685-0039

Fluke Electronics Canada Inc.
101 1144 - 29th Ave N E
Calgary Alberta
T2E 7P1 Canada
Tel: (403) 291-5215
Fax (403) 291-5219

Chile
Philips Chilena S.A.
de Product Electr
(For Philips products)
Avenida Santa Maria 0760
Casilla 2678
Santiago de Chile
Tel: 56-2-770038
Fax. 56-2-776730
TXL. 240239

Itronsa
(For Fluke products)
Casilla 16228
Santiago, Chile
Tel: (56) (2) 232-4308
Fax (56) 2-2322694
TLX: (332) 346351

China, People's Republic of
Philips HongKong Ltd.
Site 7 ground floor Whampoa Garden
Hung Hom, Kowloon HongKong
Tel: 7735588
Fax: (852) 3345496
TLX: 43752 PHILH HX

Instrimpex - Fluke Service Center
(For Fluke products)
Scite Tower Room 2101
22 Jiam Guo Man Wai Dajie
PO Box 9085
Beijing
People s Republic of China
Tel: 86 01 512-3436

Colombia
Industrias Philips de Columbia S.A.
(For Philips products)
Apartado Aereo 4282
Calle 13 No 51-39
Bogota
Tel: 57 1-2600600
Fax: 57-1-2610139
TLX. philcolon 44776

Sistemas E Instrumentation, Ltda.
(For Fluke products)
Carrera 21, No. 39A - 21, Of 101
Ap Aereo 29583
Bogota, Colombia
Tel: (57) 232-4532
Fax: (57) 1-287-2248

Costa Rica
Electrocom
Apartado 7742
San Jose
Costa Rica
Tel: 53-0083/57
TLX 3050 elecom cr

C.S.F.R.
Branch Office Brno*
Babickova 40
61300 BRNO
Tel. 42-2-377426
Fax: 42-2-377426
TLX: 62345 UFMB-C

Obnova Pamatek n.p.*
Na Berance 2
16041 PRAHA 6
Tel: 42-2-594426 60351
Fax 42-2-594426 377426
TLX: 123069 OBPA C

Cyprus
D. Ouzounian M. Soultanian & Co Ltd
PO Box 1775
45 Evagoras Avenue
Nicosia
Tel 357-2-442220
Fax 357-2-459885
TLX 2315 cy automooil

Denmark
Philips A/S Test & Measurement
Prags Boulevard 80
DK 2300 Kobenhavn S
Tel +45-32-882100
Fax: +45-31-571355
TLX 31201

Equador
Philips Ecuador S.A.
Dpto de Sistemas Medicos/Prof
Av Amazonas
1188Y Cordero
QUITO
Tel: 593-2-565835
Fax: 593-2-564601
TLX 22227 PHLPSQ-ED

Egypt
Philips Egypt Branch Middle East B.V.
10 Abdel Rahman el Rafie st
PO Box 242
Dokki Cairo
Tel: 20-2-3490922
Fax: 20-2-3492142
TLX: 22816 phegy un

Ethiopia
Philips Ethiopia
(Priv Ltd Co)
Ras Abebe Areguay Avenue
PO Box 2565
Addis Ababa
Tel: 010-231-1-518300
Fax 251-1-52845
TLX 021319 phaodis

* Sales and Service Centers

Sales and Service all over the world

Finland
OY Philips AB
Test & Measurement
Sinikalliontie 3
PO Box 75
SF-02631 Espoo
Tel: +358 0 50261
Fax: +358 0 529558
TLX: 1248 11 Phil

France
S.A. Philips Industrielle et Commerciale
Division Science et Industrie
105 Rue de Paris, BP 62
93002 Bobigny Cedex
Tel: (1) 49428080
Tel: (1) 49428073*
Fax: (1) 49428100
TLX: 235546

Germany
Philips GmbH - EWI
Head Office
Miramstrasse 87
D-3500 Kassel
Tel 0561-501466
Fax 0561-501590
TLX: 997070
Philips GmbH - EWI
Martin Luther Strasse 3-7
D 1000 Berlin 30
Tel: 030-21006364
TLX 185532
Philips GmbH - EWI
Wieselweg 5
D 4300 Essen 11
Tel 0201-3610-245
Fax: 0201 3610265
TLX 857-226
Philips GmbH - EWI
Th Heuss Allee 106
D 6000 Frankfurt 90
Tel 069-794093-31
Fax 069-794093-91
TLX 413611
Philips GmbH - EWI
Meiendorferstrasse 205
D 2000 Hamburg 73
Tel 040-6797-278
Tel 040-6797471*
TLX 2116625
Philips GmbH - EWI
Oskar Messterstrasse 18
(For Fluke products)
D 8045 Ismaning
Tel 089-9605-121
TLX 21701380 phd
Philips GmbH - EWI
Hoehenstrasse 21
D 7012 Fellbach
Tel 0711-5204-121
Tel 0711-5204150*
Fax 0711-5204136
TLX 7254669

Ghana
Malawi Engineering Co. Ltd.
P O Box 2972
D710 A 4 Kojo Thompson Rd
ACCRA
Fax 233-667-131
TLX 2072 MALACO GH

Great Britain
Philips Scientific Test & Measurement
Colonial Way
Watford Herts WD2 4TT
Tel 0923-240511
Fax: 0923-225067
TLX 934583 phtmd
Philips Scientific Test & Measurement
Yorkstreet
Cambridge CB1 2PX
Tel: 0223-358866
Fax 0223-321764
TLX 817331 phsc cam g

*Sales and Service Centers

Greece
Philips S.A. Hellénique
PO Box 3153
15, 25th March Street
15 GR 17778 Tavros/Athens
Tel: 30-1-4894911
Fax: 30-1-4815180
TLX: 241566 PHAT GR

Guyana
Guyana Stores Ltd.
19, Water Street
GEORGETOWN
TLX: 2212 GUYSTORE GY

Hong Kong
Philips Hong Kong Ltd.
(For Philips products)
Site 7 ground floor, Whampoa Garden
Hung Hom, Kowloon, HongKong
Tel: 7735588
Fax: 852 3345555496
TLX: 43752 PHILH HX
Schmidt & Co (H.K.), Ltd.
(For Fluke products)
18th Floor Great Eagle Centre
23 Harbour Road
Wanchai Hong Kong
Tel. (852) (5) 8330-222
Fax. (852) 5-836-2652
TLX: (780) 74766 or 76762 SCHMC HX

Hungary
MTA-MMSZ Philips Service*
Szakasits Arpad u 59-61
P O Box 58
1502 BUDAPEST
Tel: 36-1-1869760
Fax: 36-1-1611021
TLX 225114 MTAMM H

Iceland*
Heimelistaeki S.F.
(For Philips products)
Saetun 8
125 Reykjavik
Tel 354-1-691500
Fax 354-1-691555
Sameind H.F.
(For Fluke products)
Brautarholt 8
125 Reykjavik
Tel 354-1-25833
Fax 354-1-621531
TLX 3136 samein is

India
Peico Electronics & Electricals Ltd
I&E Division
(For Philips products)
Band Box House
254 Dr Annie Besant Road
Bombay 400 025
Tel 022 4930311/4930590
Fax. 022-4941698
TLX 76049
Peico Electronics & Electricals Ltd.
I&E Division
(For Philips products)
7 Justice Chandra
Madhab Road
Calcutta 700 020
Tel. 473621
Peico Electronics & Electricals Ltd.
I&E Division
(For Philips products)
68 Shivaji Marg
New Delhi 110 015
Tel 530153
Tel 533956 57*
TLX 031 3142
Peico Electronics & Electricals Ltd.
I&E Division
(For Philips products)
No 3 Haddows Road
Madras 600 006
Tel 472341
TLX 041 499
Peico Electronics & Electricals Ltd.
I&E Division
(For Philips products)
7311 St Mark s Road
Bangalore 560 001
Tel 579119/579164
TLX. 0845-8185
Hinditron Services Pvt., Ltd.
(For Fluke products)
Industry House
23-B Mahal Industrial Estate
Mahakali Caves Road
Andheri (E) Bombay
400 093. India
Tel: (91) (22) 636-4560
(91) (22) 634-8268
Fax: (91) 22-822-0197
TLX: (953) 11-79286 HIPL IN

Indonesia
P.T Daeng Brothers
(For Philips products)
Philips House
Jl H.R Rasuna Said Kav 3-4
Jakarta 12950
Tel: 021 5201122
TLX: 62789 phdc ia
P.T. Lamda Triguna
(For Fluke products)
PO Box 6 JATJG Jakarta 13001
Indonesia
Tel (62) (21) 819-5365
Fax* (62) 21-819-9631
TLX: (796) 63938 KA IA

Iran
Philips Iran Ltd.
Private Joint Stock Comp
PO Box 11365-3891
TEHRAN
Tel 98-21-674138 675158
TLX 212545 phps ir

Iraq
Al-Tel Co. Ltd.
P O B 5904
Baghdad
Tel: 964-1-7191982
Fax 964-1-7191982
TLX 213899 SAKO IK

Ireland
Circuit Specialists Ltd.
Unit 5 Enterprise Centre
Plassey Technology Park
Castleroy Limenck
Tel: 061 330333

Italy
Philips S.p.A.
Sezione S & I, T & M Dept.
Viale Elvezia 2
20052 Monza
Tel (039) 3635240/8 9
Fax 039-3635309
TLX 333343

Japan
NF Circuit Design Block Co., Ltd.
(For Philips products)
3-20 Tsunashima Higashi 6 Chome
Kokokuku Yokohama 223
Tel (045) 452-0411
TLX. 3823-297
Japan
Nihon Philips Corporation*
Shuwa Shinagawa Building
26-38 Tahanawa 3-Chrome
Minatu-ku Tohyo 108
Tel 4485511
John Fluke Mfg. Co., Inc.
Japan Branch
(For Fluke products)
Sumitomo Higashi ShinbashBldg
1-1-11 Hamamatsucho
Minato-ku Tokyo 105, Japan
Tel: (81) (3) 434-0181
Fax (81) 3-434-0170
TLX (781) 2424331 FLUKJPJ

Jordan
Jordan Medical Supplies & Services
PO Box 140415
Al Biader
Amman Jordan
Tel: 962-6-819929
Fax: 962-2-823556
TLX 22161 jms jo

Kenya
Philips Kenya Ltd.
Ol Kalou Road Industrial Area
PO Box 30554
Nairobi
Tel: 254-2-557999
Fax 254-2-543135
TLX: 24033 PHLP KE

Korea, Republic of
Myoung Corporation
(For Fluke products)
Yeo Eui Do
PO Box 14
Seoul Korea
Tel: (82) (2) 784-9942
Fax (82) 2-784-2387
TLX MYOUNG K24283

Kuwait
Yusaf A. Alghanim & Sons
P.O. Box 223
KUWAIT
Tel: 965-4843988
Fax 965-4847244

South Korea
Philips Industries (Korea) Ltd.
(For Philips products)
CPO Box 3680 Philips House
260-199 Itaewon-Dong
Youngsan-Ku
Seoul
Tel: 82-2-7970378
Fax 82-2-7978048
TLX philkor k 27291

South Korea
Hanmac Electronics Co. Ltd
Mijin Bld 116-2 Samsung-Dong
Kangnam-Ku
Seoul
Korea
Tel 82-2-5537441
Fax 82-2-5566816
Tlx K25749 Hanmaco

Lebanon
Electronic Supplies S.A.R.L.
Autostrade Dora Hayek Bldg
PO Box 90 1388
Beirut
Tel 01-894243
TLX 42950 DICI

Luxemburg
Philips Luxembourg
Professional Systems S A
Rue des Joncs 4
L-1818 Howald
Tel 496111
Fax 400577
TLX 60572

Malaysia
Electronic Systems (Malaysia)
Sdn Bhd
(For Philips products)
Lot 51 Section 13
Jalan University
Petaling Jaya - Selangor 46200
Tel 60-3-7560112
Fax 60-3-7560761
Mecomb Malaysia Sdn. Bhd
(For Fluke products)
PO Box 24
46700 Petaling Jaya
Selangor Malaysia
Tel (60) (3) 774-3422
Fax (60) 3-774 3414
TLX (784) MA37764 MECOMB

Sales and Service all over the world

Malta
Charles A. Micallef & Co. Ltd.
PO Box 527
217 St. Paul str
Valletta
Tel 356-221168
Fax 356-229503

Mexico
Mexicana de Electronica Industrial S.A. (Mexel)
Diagonal No 27
Entre Calle de Eugenia Y Ave
Colonia del Valle
C P 03100 Mexico
Tel (90) (5) 680-4323
Fax (525) 687-8695
TLX (383) 177 1823 MDEIME

Mexel Servicios en Computacion*
Instrumentation Y Perifericos
Blvd Adolfo Lopez Mateos No 163
Col Mixcoac
Mexico D.F
Tel 90-5-563-5411

Morocco
Samtel*
2 Rue de Bapaume
Casablanca
Tel 243050

Somaciel
304 Boulevard Mohammed V
Casablanca 05
Tel 308051.52
TLX 27021

Mozambique
Interelectra E.E.
P.O. Box 1159
MAPUTO
TLX 5203 NEGONHO

Nepal
Bhajuratna Engineering & Sales (P) Ltd.
(For Philips products)
Jyoti Bhawan
PO Box 133 Kantipath
Kathmandu
Tel 2-25134
TLX 2264 jyoti bh np

Associated Enterprises
(For Fluke products)
GPO Box 790 Pyaphal Tole
Kathmandu Nepal
Tel 13868
TLX (947) 2588 ASCENT NP

Netherlands
Philips Nederland B.V.
Test en Meetapparaten
Hoevenseweg 55A
Postbus 115
5000 AC Tilburg
Tel 013-390112
Fax 013-427528
TLX 52683

Philips Nederland
Technische Service Prot Akt *
Hurksestraat 2C
Gebouw HBR
5652 AJ Eindhoven
Tel 040-723293
Fax 040-723337
TLX 59279 MILAP NL

New Zealand
Philips Scientific & Industrial PTY Ltd.
Test & Measurement Dept
2 Wagner Place
PO Box 4021
Auckland 3
Tel 09-084-160
Fax 09-862728
TLX NZ 2395

Nigeria
Associated Electronic Products
(Nigeria) Ltd
KM 16 Ikorodu Road
Ojota
PO Box 1921
Lagos
Tel 234-1-900160/69
Fax 234-1-615601

Norway
Norsk A/S Philips
Dept. I & E Test & Measurement
Sandstuveien 70
PO Box 1 Manglerud
0612 Oslo 6
Tel: 47-2-741010
Tel 47-2-290942
Fax. 47-2-381457
TLX: 856-72640

Oman
Messrs. Mustafa Jawad
Trading Co.
PO Box 4918
RUWI - MUSKAT
Tel: 968-709955
Fax: 968-797277

Pakistan
Philips Electrical Co. of Pakistan (Private) Ltd.
(For Philips products)
Philips Markaz M.A Jinnah Road
PO Box 7101
Karachi - 74400
Tel: 92-21-725772-8
Fax: 92-21-726694
TLX: 2874 PHPAK PH

International Operations (PAK Private), Ltd.
(For Fluke products)
505 Muhammadi House
I I Chundrigar Road
PO Box 5323
Karachi 2, Pakistan
Tel: (92) (21) 221127
Fax. (92) 21-2411241
TLX (952) 24494 PIO PK

Paraquay
Philips del Paraguay S.A.
(For Philips products)
Avenida Artigas 1519
Casilla de Correo 605
Asuncion
Tel: 595-21-291924.291934
Fax: 595-21-211662
TLX py 215

Peru
Philips Peruana S.A.
Planta Carretera Central
Carretera Central 6 500
Lima 3 Apartado 1811
Lima 100
Tel. 51-14-350059
Fax: 51-14-350059 ext 3294

Importaciones y Representaciones Electronicas S.A.
(For Fluke products)
Avda Franklin D Rooseveit 105
Lima 1 Peru
Tel (51) (14) 28-8650
TLX (394) 25663 PE IRELNG

Philippines
Philips Industrial Development Inc.
(For Philips products)
106 Valero Street
Salcedo Village
Makati Metro Manila
Philippines
Tel: 810-0161
Fax: 817-3474

Spark Radio & Electronics, Corp.
(For Fluke products)
PO Box 610 Greenhills
Metro Manila 1502
Philippines
Tel: (63) (2) 775192
Fax (63) (2) 7220313
TLX: (712) 4005 RLA PH PU

Poland
Electronic Instrument Service*
(Philips Service)
Ul Malechowska 6
60-188 PODZNAN
Tel: 48-61-481998
TLX: 0413791 PHIL PL

Portugal
Philips Portuguesa, S.A.R.L.
Division of I & E
Test & Measurement
Av Eng. Duarte Pacheco 6
1009 Lisboa Codex
Tel: 1-657181
Fax: 1-658013

Philips Portuguesa*
Division I & E
Rua Eng Erequli de Campos 182
4100 Porto
Tel: (2) 678278
TLX: 28790

Qatar
Darwish Trading Company
PO Box 92
Doha, Qatar
Tel: 974-434308
Fax: 974-426378

Romania
Polytechnic Inst. Bucarest*
L C M S Philips Service
P O Box 1/285
Str Polizu 1
BUCAREST 70100
Tel 40-0-505935
Fax 167540 via limoex
TLX 119488 CBTX R

Saudi Arabia
Messrs. A. Rajab & A. Silsilah
Head Office
PO Box 203
Jeddah 21411
Tel 966-2-6610006
Fax 966-2-6610164
TLX: 601180 arndas sj

Messrs. A. Rajab & A. Silsilah
PO Box 260
Riyadh 11411
Tel 966-1-4122425
Fax 966-1-4122366
TLX 404787 arndas sj

Messrs. A. Rajab & A. Silsilah
PO Box 587
Damman
Tel 966-3-8322596.8331870
Fax 966-3 8271962
TLX 601044 arndas sj

Singapore
Philips Project Development (S) PTY Ltd.
(For Philips products)
Lorong 1 Toa Payoh
Singapore 1231 PO Box 340
Toa Payoh Central Post Office
Singapore 9131
Tel 65-3502000
Fax: 65-2535873
TLX: philips rs/21375

Rank O'Connor's Pte Ltd.
(For Fluke products)
O Connor House
98 Pasir Panjang Road
Singapore 0511
Republic of Singapore
Tel: (65) 473-7944
Fax (65) 472-4508
TLX (766) RS 21023 OCONSIN

South Africa
South African Philips PTY Ltd.
I & E Division
Test & Measurement
10 Bondstreet, Randburg
Johannesburg 2000
Tel 27-11-889-3911
Fax: 27-11-889-3098/889 3191
TLX: 4-26152-sa

South African Philips PTY Ltd.*
I & E Customer Support Centre
195 Main Road, PO Box 58088
Martindale, New Ville 2092
Tel: 27-11-470-5937
Fax: 27-11-470-5166
TLX: 4-26152 SA

Spain
Philips Iberica SAE
Depto Instrumentacion de Medida
Poligono Industrial Zona Franca
Sector C-calle F
08004 Barcelona
Tel: 34-3-3361061
Fax: 34-3-3355838
TLX: 51293/59292

Philips Iberica*
Depto Instrumentacion de Medida
Martinez Villergas 2
28027 Madrid
Tel: 34-1-4042200
Fax: 34-1-4048603
TLX. 27710

Philips Iberica SAE*
Jose Olabarria 6
48012 Bilbao
Tel: 34-4-4313800
Fax: 34-4-432 0961
TLX. 31230

Sri Lanka
Hayleys Electronics & Engineering Ltd.
400 Deans Road
P O Box 70
COLOMBO 10
Tel 94-1-699087
Fax 94-1-699299
TLX 23059 SRLCOHA

Computerlink Data Systems, Ltd.
(For Fluke products)
68 Havelock Rd
Colombo 5 Sri Lanka
Tel 94) (1) 502202.3
Fax (94) 1 502203
TLX 9541 22455 COLINK CE

Surinam
C. Kersten & Co. N.V.
P O Box 1808
PARIMARIBO

Surtel
P O Box 755
PARIMARIBO
Tel 597-72118.77880
Fax 597-52745
TLX 162 SN

Sweden
Philips Kistaindustrier AB
Test & Measurement
PO Box 33
16493 Kista
Tel: 46-8-7031370
Fax. 46-8-7520743
TLX 17173 philkis

Switzerland
Philips AG Test und Messtechnik
Postfach 670
8027 Zurich
Tel 01 4882390
Fax. 01 4828595
TLX 815780-0

Philips SA
Test et Mesure
Avenue du Mont Blanc
1196 Gland
Tel: 022/647171

Syria
Al-Shahed Electronics and Trading Co.
Fardoss Street 79
Kassas and Sadat Building
P O Box 2442
Damascus
Tel: 228003/218605
TLX: 411203 phisyr

* Sales and Service Centers

Sales and Service all over the world

Taiwan
Philips Taiwan Ltd.
(For Philips products)
581, Min Sheng East Road
10446 Taipei
Taiwan
Tel: 886-2-5097666
Fax: 886-2-5005899
Schmidt Scientific
5/F, 344 Min Sheng E. Rd.,
Taipei
Taiwan
Tel: 02-5005779
Fax: 886-2-5029692
TLX: 11111 Schmidt

Tanzania
Philips (Tanzania) Ltd.
Nkrumah Street
Dar es Salaam
Tel 2555129571
TLX: 41016

Thailand
Philips Electrical Co. of Thailand Ltd.
(For Philips products)
283 Silom Road
PO Box 961
Bangkok 10500
Tel 66-2-233-6330/9
TLX 87327 philtha th
Measuretronix Ltd.
(For Fluke products)
210231 Ramkamhaeng Road
Bangkok 10240
Thailand
Tel: (66) (2) 375-2733
Fax (66) 2-374-9965
TLX (788) 82796 HUAMARK TH

Trinidad West Indies
Compression & Power Services (1988) Ltd.
P O Box 76
SAN FERNANDO By Pass
Tel 653 5445/6 7
Fax 1.809 657 0353
TLX 32451 WG

Tunesia
S.T.I.E.T.
32 bis rue Ben Gheoanem
Tunis
Tel 348666
TLX 14512

Turkey
Turk Philips Ticaret A.S.
Talatpasa Caddesi no 5
PO Box 161
80640 Levent-Istanbul
Tel: 90-1-1792770
Fax 90-1-1693094
TLX 24192 phtr tr

United Arab Emirates
Al Sanani Trading Est.
PO Box 7187
Abu Dhabi U A E
Tel 971-2-771370
Fax 971-2-728963
TLX 23966 Sanani em
Haris Al-Afaq Ltd.
PO Box 8141
Dubai U A E
Tel: 971-4-283625
Fax 971-4-281285

Uruguay
Industrias Philips del Uruguay S.A.
(For Philips products)
Avenida Uruguay 1287
Casilla de Correo 294
Montevideo Uruguay
Tel (598) (2) 921111
Fax (598) (2) 920601

U.S.S.R.
N.V. Philips Gloeilampenfabrieken
Mytnaya Str 1
Fl 7 Office 18
MOSCOW
Tel 7095-2302485
Fax 7095-2302485
TLX 413961 PHIL SU

Infomedia Sotrudnichiestvo
Kievskaya, 2 - Office 106
121111 MOSCOW
Tel: 240 52 52
Fax: 230 28 18
TLX: 411670 DNEPR SU

Venezuela
Inds. Venezolanas Philips S.A.
(For Philips products)
Apartado Aereo 1167
Caracas 1010-A
Tel: 58-2-905 7061
Fax: 58-2-951 7339
TLX: 25267 ivpsa vc
Cossin C.A.
(For Fluke products)
Calle 9 Con Calle 4, Edifl Edinurbi
Apartado de Correos NR-70.136
Los Ruices
Caracas 1070-A Venezuela
Tel: (58) (2) 241-03-09
TLX: (395) 21027EMVEN VC

Yemen
Rashed Trading & Travel Agency
Ali Abdulmugni st
PO Box 1221
Sana a Yemen
Tel: 967-2-273231
TLX: 2230 abgbar ye

Yugoslavia
N.V. Philips Gloeilampenfabrieken
Strahinjica Bana 47/II
Postanksi fah 484
BEOGRAD
Tel: 38-11-625344
Fax: 38-11-635777
TLX: 12499 YU PHILIPS
Jugoelectro*
Jurija Gaganna 81
Block 70
11070 BEOGRAD
Tel 38-11-178134
Fax: 38-11-175472
TLX: 12370 YUJUELB
Technicar Servis*
(For Fluke products)
Jurisiceva 25
41000 ZAGREB
Tel 041-276333
Fax 041-274416

Zaire
Philips Electronics S.A.R.L.
137 Boulevard du 30 Juin
BP 16636
Kinshasa
Tel: 31693
TLX: 21078 kinshasa

Zambia
Philips Electrical Zambia Ltd
Mwembeshi Road
PO Box 31878
Lusaka
Tel 218511 218701
TLX: za 41220

Zimbabwe
Philips Electrical (Pvt.) Ltd.
62 Mutare Road
PO Box 994
Harare
Tel 263-4-47211
Fax: 263-4-47966
TLX 2236 ZW

For Countries not listed above:
Philips Export B.V.
I & E Export
Test & Measurement
Building HVW-3
PO Box 218
5600 MD Eindhoven
The Netherlands
Tel: +31 40 766546
Fax +31 40 766612
TLX 35000 phtc nl
Fluke Int'l Corp.
PO Box 9090
Mail Stop 206A
Everett WA 98206-9090
Tel: 206-356-5500
Fax (206) 356-5116
TLX: 185103 FLUKE UT

U.S.A.

Alabama
Huntsville
4920 Corporate Drive Suite J
Huntsville, AL 35805-6202
(205) 837-0581

Arizona
Phoenix
2211 S 48th Street Suite B
Tempe, AZ 85282
(602) 438-8314

California
Irvine*
PO Box 19676
Irvine, CA 92714
(714) 863-9031
Nothern*
46610 Landing Parkway
Fremont, CA 94538
(415) 651-5112

Colorado
Denver*
14180 E Evans Ave
Aurora, CO 80014
(303) 695-1000

Connecticut
Hartford
Glen Lochen East
41-C New London Turnpike
Glastonbury, CT 06033
(203) 659-3541

Florida
Altamonte Springs*
550 South Northlake Blvd
Altamonte Springs
FL 32803
(407) 331-4881

Georgia
Atlanta
2700 Delk Road Suite 150
Marietta, GA 30067
(404) 953-4747

Illinios
Chicago*
1150 W Euclid Avenue
Palatine IL 60067
(708) 705-0500

Indiana
Indianapolis
8777 Purdue Road Suite 101
Indianapolis IN 46268
(317) 875-7870

Massachusetts
Boston
900 Middlesex Technology Center
Building 8
Billercia, MA 01821
(508) 663-2400

Maryland
Rockville*
5640 Fishers Lane
Rockville MD 20852
(301) 770-1570

Michigan
Detroit
45550 Helm Street
Plymouth MI 48170
313 522-9140

Minnesota
Minneapolis
1380 Corporate Center Curve
Suite 113
Eagan MN 55121
(612) 854-5526

Missouri
St. Louis
11756 Borman Drive Suite 160
St Louis, MO 63146
(314) 993 3805

New Jersey
Paramus*
PO Box 930
Paramus, NJ 07652
(201) 262-9550

New York
Rochester
4515 Culver Road
Rochester, NY 14622
(716) 323-1400

North Carolina
Greensboro
1310 Beaman Place
Greensboro, NC 27408
(919) 273-1918

Ohio
Cleveland
Plaza South Three Suite 402
7271 Engle Road
Middleburg Heights OH 44130
(216) 234-4540

Pennsylvania
Philadelphia
200 Lindenwood Drive
Malvern PA 19355
(215) 647-9550

Texas
Dallas*
1801 Royal Lane Suite 307
Dallas TX 75229
(214) 869-0311
San Antonio
10417 Gulfdale
San Antonio, TX 78216
(512) 340-0498

Washington
Seattle*
2375 130th Ave N E
Suite 100
Bellevue, WA 98005
(206) 881-6966

* Sales and Service Centers

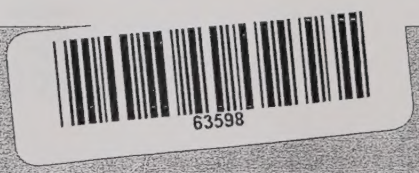
63598